

UNCLASSIFIED


ORLANDO FL J K BONNER DEC 81 OR-16668

1/3

F/G 9/5

NL

[illegible]

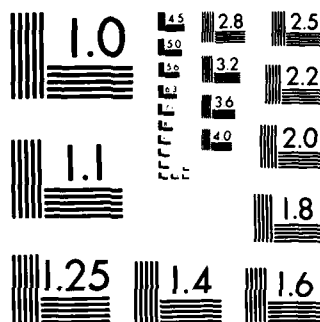

MICROCOPY RESOLUTION TEST CHART
NATIONAL BUREAU OF STANDARDS-1963-A

AD-A151 952

3160


OR 16,668

ESTABLISHMENT OF PRODUCTION CLEANLINESS CRITERIA AND PROCESSES
FOR PRINTED WIRING BOARDS AND ASSEMBLIES

Contract DAAK-40-78-C-0114

John Kirkwood Bonner, Ph.D.
Martin Marietta Corporation
Post Office Box 5837
Orlando, Florida 32855

December 1981

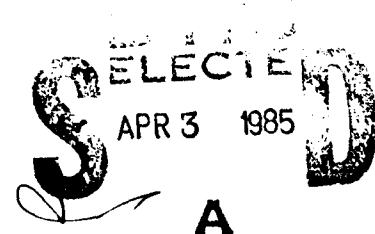

Final Report for Period 26 April 1979 through 23 December 1981, Phase II

Prepared for
U.S. Army Missile Research and Development Command
Redstone Arsenal, Alabama 35809

This document is for
public release and sale
distribution is unlimited.

DTIC FILE COPY

85 03 08 017

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER
4. TITLE (and Subtitle) Establishment of Production Cleanliness Criteria and Processes for Printed Wiring Boards and Assemblies		5. TYPE OF REPORT & PERIOD COVERED Technical Report-Phase 1 Effort 4/27/79 thru 12/23/81
7. AUTHOR(s) John Kirkwood Bonner, Ph.D.		6. PERFORMING ORG. REPORT NUMBER OR 16 668
9. PERFORMING ORGANIZATION NAME AND ADDRESS Martin Marietta Corporation Orlando Division, Post Office Box 5837 Orlando, Florida 32855		8. CONTRACT OR GRANT NUMBER(s) DAAK40-78-C-0114
11. CONTROLLING OFFICE NAME AND ADDRESS U. S. Army Missile Command Redstone Arsenal Alabama 35809		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)		12. REPORT DATE December 1981
		13. NUMBER OF PAGES 222
		15. SECURITY CLASS. (of this report) Unclassified
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) Headquarters U.S. Army Missile Command Att'n: DRDMI-ICBB/Oliver Redstone Arsenal, AL 35809 DRDMI-EAA 2/2 DRDMI-EAT 2/0		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Printed Wiring (PW) Specific conductance (κ) Printed Wiring Board (PWB) Concentration in parts-per-million (PPM) Printed Wiring Assembly (PWA) Concentration in parts-per-billion (PPB) Specific Resistivity (ρ) Concentration in $\mu\text{g} / \text{cm}^2$		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) The Phase I Final Technical Report (FTR) (24 April 1978 through 26 April 1979) of the program suggested that a systems approach be used to solve the problem of contamination on printed wiring (PW). The solution was to design, assemble, and integrate a system giving a detailed profile of practically all of the ionic contaminant species. Profiling a species means detecting it (qualitative) and measuring its' concentration (quantitative). The system was to consist of various pieces of analytical instrumentation suitable for profiling individual species and a minicomputer.		

DD FORM 1 JAN 72 1473

EDITION OF 1 NOV 68 IS OBSOLETE

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

19. Key Words (continued)

Ionic Species
Contaminant Profiling
Contaminant Profiling (C/P) System
Systems Analysis
Direct surface analysis techniques (SEM/EDX,AES,ESCA).
Solvent Extraction/Analysis Techniques (ICP-ES,IC).
Inductively coupled plasma emission/graphite furnace atomic absorption spectrophotometry
Ion chromatography
Minicomputer
System Control
Cost/benefit analysis
Data base

20. Abstract (continued)

The Minicomputer's purpose was for final analysis of the results, overall systems control of the analytical instrumentation, and final report generation. The two most promising methods of profiling contaminants on PW were direct surface analysis techniques and solvent extraction/analysis techniques. An experiment was performed to decide the better of the two extraction/analysis techniques were better. Thus the contaminant profiling (C/P) system was assembled and built using solvent extraction/analysis instrumentation coupled to a minicomputer. The main components of the C/P system are the:

- 1 Inductively-coupled plasma emission spectrophotometer/graphite furnace atomic absorption spectrophotometer:
- 2 Ion chromatograph:
- 3 Minicomputer and computing integrator unit:
- 4 Extraction tank/pumping unit:
- 5 Water purification unit.

As a continuation of the present program, it is recommended this system be used to build a data base for printed wiring contamination.

Attch on file

A1

CONTENTS

1.0	General Introduction:	
1.1	The Problem.....	1
1.2	The Solution.....	3
1.3	The Benefits.....	4
2.0	A Systems approach for Determining Production Cleanliness of Printed Wiring	6
2.1	Experiment for Profiling PW Contaminants Used Two Separate Profiling Methods.....	9
2.2	Direct Surface Analysis Techniques	
2.2.1	SEM/EDX	
2.2.1.1	Discussion of Method.....	11
2.2.1.2	Procedure.....	12
2.2.1.3	Data.....	12
2.2.1.4	Discussion of Results.....	15
2.2.2	AES	
2.2.2.1	Discussion of Method.....	17
2.2.2.2	Procedure.....	18
2.2.2.3	Data.....	19
2.2.2.4	Discussion of Results.....	23
2.2.3	ESCA	
2.2.3.1	Discussion of Method.....	28
2.2.3.2	Procedure.....	29
2.2.3.3	Data.....	29
2.2.3.4	Discussion of Results.....	33
2.2.4	General Discussion	35

2.3	Solvent Extraction/Analysis Techniques	
2.3.1	ICP-ES	
2.3.1.1	Discussion of Method.....	37
2.3.1.2	Procedure.....	38
2.3.1.3	Data.....	39
2.3.1.4	Discussion of Results.....	41
2.3.2	IC	
2.3.2.1	Discussion of Method.....	44
2.3.2.2	Procedure.....	46
2.3.2.3	Data.....	46
2.3.2.4	Discussion of Results.....	48
2.4	A General Discussion of the Merits of Surface Analysis Techniques Versus Solvent Extraction/Analysis Techniques.....	48
2.5	The Costs.....	50
2.6	The Benefits.....	52
2.7	The Criteria.....	53
2.8	The Solution.....	53
3.0	Development of the Contaminant Profiling System	60
3.1	The Inductively Coupled Plasma Emission/Atomic Absorption Spectrophotometer.....	63
3.2	The Ion Chromatograph.....	109
3.3	The Minicomputer Control System.....	131
3.4	Setting Contaminant Limits with the Contaminant Profiling System....	144
3.5	The Contaminant Profiling System: An Overview.....	152
4.0	Contaminant Profiling System Software.....	159
5.0	Cost/Benefit Analysis.....	196
6.0	Final Recommendations: Establishment of a Contaminant Profiling Data Base for Printed Wiring Boards and Assemblies	

6.1 The Problem.....	198
6.2 The Solution.....	200
6.3 The Approach.....	200
6.4 The Benefits.....	203
BIBLIOGRAPHY.....	205
Appendix I - A Few Words About Solvents.....	207

ILLUSTRATIONS

1	SEM Photomicrograph + EDX Readout for Sample 1A (from Set #1).	13
2	SEM Photomicrograph + EDX Readout for Sample 4A (from Set #4).	13
3	SEM Photomicrograph + EDX Readout for Sample 7A (from Set #7).	14
4	SEM Photomicrograph + EDX Readout for Sample 11A (from Set #11).	14
5	SEM Photomicrograph of Crystalline Deposit in Sample 11A (from Set #11).	25
6	Auger Depth Profile of Sample 1A (from Set #1).	25
7	Auger Depth Profile of Sample 2A (from Set #2).	25
8	Auger Depth Profile of Sample 5A (from Set #5).	25
9	Auger Depth Profile of Sample 6A (from Set #6).	26
10	Auger Depth Profile of Sample 9A (from Set #9).	26
11	Auger Depth Profile of Sample 11A (from Set #11).	26
12	SEM Photomicrograph of Epoxy Surface at 7,000x	26
13	Normal Elution Sequence for Common Ions Using Ion Chromatography.	26
14	Effectiveness vs. Cost for the Three Alternatives	50
15	Schematic Diagram of the Minicomputer-Controlled Contaminant Profiling System	54
16	Position of Contaminant Profiling System in Double-Sided Printed Wiring Manufacturing Line	61
17	Implications of Advanced Packaging Trends	62
18A,B,C	Linear Regression Analysis Program for Data from Graphite Furnace in BASIC.	65-67
19	Program for Establishing Two-Way Communication between 5000 and Data System in BASIC.	68
20A,B,C	Program for Loading Various Atomic Absorption Operating Parameters in BASIC	69-71
21A,B	Hardcopy Output of Parameters to Run Furnace	72,73
22A	Torch Analysis of Chromium	74
22B	Data System Printout of Figure 22A	75
22C	Furnace Analysis of Chromium	76

23A	Torch Analysis of Copper	77
23B	Data System Printout of Figure 23A	78
23C	Furnace Analysis of Copper	79
24A	Torch Analysis of Sodium	80
24B	Data System Printout of Figure 24A	81
25A 1-3	Varying the View Height to Optimize BEC	85-87
25B 1-2	Varying the Power to Optimize BEC.	88,89
25C 1-2	Varying the Netrilizer Pressure to Optimize BEC.	90,91
25D 1-2	Varying the Argon Flow to Optimize BEC	92,93
25D 3	Test Run with Final Torch Parameters	94
26A,B,C	Torch Development Using Three Separate Analyte Files	95-97
27A	Analytical Group 1, Turret #1	102
27B	Analytical Group 2, Turret #2	103
27C	Analytical Group 3, Turret #3	104
28	Preliminary Graphite Furnace Settings for Analyte Species	105
29A,B	Preliminary Graphite Furnace Settings for Analyte Species (con- tinued)	106-107
30	Analysis of a Standard Anion Sample on the Ion Chromatograph	110
31	Analysis of a Standard Small Organic Anion Sample on the Ion Chro- matograph	111
32	Analysis of a Water-Based Flux, #1	112
33	Analysis of a Water-Based Flue, #2	113
34	Chromatogram of a Typical RMA Flux	114
35	Chromatogram of a Typical RMA Flux Spiked with 10 ppm Cl^-	115
36	Chromatogram of a Typical RMA Flux Spiked with 20 ppm F^-	116
37	Chromatogram of a Typical RMA Flux Using ICE Column to Detect Small Organic Acids	117
38	Analysis of a Standard of Cl^- and F^- on the Ion Chromatograph	118

39	Analysis of a Flux Sample on the Ion Chromatograph, #1.	119
40	Analysis of a Flux Sample on the Ion Chromatograph, #2.	120
41	Standard Anion Sample Using Water as Solvent on the Ion Chromatograph	121
42	Standard Anion Sample Using 50% IPA/50% H ₂ O as Solvent on the Ion Chromatograph	122
43	Disk Dump of the Various RT-11 Routines	132
44	FORTTRAN Routines for the C/P Operating System	133
45	C/P Software Operating System in the MINC's Main Memory Locations . . .	134
46	Present C/P System Hardware Configuration with Key Data Links	139
47	Contamination Profiling Report (Example) of a PWA Passing Test.	146-148
48	Contamination Profiling Report (Example) of a PWA Failing Test.	149,151
49	PWB Contaminant Profiling Facility - Bldg. 1 Ocala.	155
50	The Ion Chromatograph, IC Autosampler, and Computing Integrator	156
51	The Mini Computer, ICP with Data System, Printer, Torch, and RF Power Supply	156
52	The Extraction Tank/Pumping Unit	156

APPENDIX 1

1	Water Has a Permanent Dipole Moment	209
2	(a) Solvation of Cl ⁻ Ions by 1- Propanol Molecules, (b) Solvation of Cl ⁻ by 2- Propanol Molecules.	213

TABLES

0	Deficiencies in Current Test Methodology	2
1	Estimated Atomic Compositions (%) from AES data	20,21
2	Condensed Version of Table 1.	22
3	Estimated Atomic Compositions (%) from ESCA Data	30
4	Condensed Version of Table 3.	31
5	Summary of High Resolution ESCA Results	32

6	Results from ICAP in ppm (parts-per-million)	40
7	Results from ICAP in ug/cm ² (micrograms-per-square-centimeter)	40
8	Detection Limits of Elements on ICP	42
9	Results from IC in ppm (parts-per-million)	47
10	Results from IC in ug/cm ² (micrograms-per-square-centimeter)	47
11	Net Present Worth for Two Mutually Exclusive Projects	51
12	Three Separate Analyte Files for Torch.	99
13	Text Matrix for Removing Rosin Flux	128
14	Contaminant Profiling System Control Hierarchy.	141
15	System Control Technical Requirements	142
16	Input/Output at Each System Level	143

. APPENDIX 1

1	Dipole Moments of Some Common Solvents.	209
2	Dielectric Constants of Some Common Solvents.	210

1.0 GENERAL INTRODUCTION

A summary of the most important findings of the Phase I effort - The Contaminant Profiling System

1.1 The Problem

Contaminants on printed wiring boards and assemblies cause electrical malfunction and/or failure. The most harmful class of contaminants are ionic species. During the course of producing a PW assembly, many different ionic species appear on the PW surface. Hopefully, the many ionic species on the PW surface are removed by the cleaning processes to which the PW entity is exposed during fabrication and assembly.

The only methods which were even roughly quantitative are those measuring a parameter whose value is dependent upon the gross amount of ionic material. These methods are the extract resistivity test (ERT) and the insulation resistance test (IRT). An investigation of these methods formed the basis of Phase I of MIRADCOM program "Establishment of Production Cleanliness Criteria and Processes for Printed Wiring Boards and Assemblies" (DAAK40-78-C-0114). The principal purpose of Phase I was to investigate applying the above methods to establish cleanliness criteria and to critique their application. The contractual definition of Phase I made it clear that any other appropriate physical, chemical, or electrical test suitable as a production cleanliness criterion might legitimately be investigated. The outcome of Phase I indicated that a physico-chemical method suitable as a fully quantitative, in-line production cleanliness test did exist, but to make it fully implementable required an additional prototype development phase.

The Phase I Final Technical Report (FTR) (24 April 1978 through 26 April 1979) of the program covered the current state-of-the-art in testing for contaminants remaining on the surface of printed wiring¹ (PW) after processing. The extract resistivity test is based on measuring the specific resistivity, ρ , or its reciprocal, κ , the specific conductance, of an isopropyl alcohol/water extract solution of a PW entity. For an ionic contaminant levels $\geq 5\mu\text{g NaCl}$ or equivalent/cm² of PW surface area, the devices measuring this parameter are probably adequate provided special precautions are taken. But such devices are notoriously susceptible to absorption of carbon dioxide (CO₂) from the atmosphere followed by its ionization in solution. This results in deterioration of the instruments' accuracy. Insulation resistance testing (IRT) is another common method of testing PW for cleanliness. In this test method a voltage bias is applied across pads on a test PW with subsequent degradation of the PW insulation resistance.

The chief criticism of both the extract resistivity test and the insulation resistance test is this. Both indicate the presence of ions and afford only a rough order of magnitude of the ionic concentration,

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.1 SEM/EDX

2.2.1.4 Discussion of Results

SEM/EDX USEFUL IN DETECTING GROSS DEFECTS AND/OR CONTAMINANTS RESULTING DURING PW MANUFACTURE

The SEM/EDX data indicate SEM/EDX is a useful technique for detecting gross defects in PW and/or contaminants resulting during the PW manufacture, but it is not an optimal method for surface contaminant analysis.

The first four sets (sets #1-#4; 12 samples total) all have similar surface morphologies and composition as revealed by SEM and EDX. Striations caused by the abrasive nonwoven aluminum oxide brush (deburring and scrubbing operations) are evident at magnifications of 100x and greater. For these samples, Cu (copper) is the major component with a small amount of Si (silicon) on each spectrum. It is believed that the Si originates in the glass fiber in the base epoxy (recall that the electron beam can "see" quite deeply into the material). Traces of Fe (iron) appear in all spectra and are artifacts of the analysis system. The samples from sets #1 and #3 (the cleaned sets) also show signs of graininess at 3,000x and 10,000x, no doubt indicating copper oxide formation. It is speculated that the demineralized water used in cleaning these particular PWBs hastened oxide formation on the copper surface (see, for example, Figures 1 and 2). Samples from sets #5 and #6 (apply resist, electrolytic plating, strip resist) have spectra obtained at the solder/Cu interface. Intensities for Cu, Sn (tin), and Pb (lead) vary quite a bit from sample to sample.

The photomicrographs often indicate crystalline material on the solder pads; this is probably composed of oxides of Sn and Pb. A deposit on sample 5B appears to be Pb leached from the solder. It is interesting to note that no Sn appears in the EDX spectrum for this particular sample. It is concluded that for this particular sample the electrolytic solder plating resulted in an insufficient deposit of Sn. Al (aluminum) was observed in small concentrations on the three samples from set #6. The fact that Al shows up is also substantiated by the ESCA data, indicating it is a direct surface contaminant (see below). The Al may arise from contamination from the plating baths, or it comes from the nonwoven aluminum oxide brushes used to scrub and deburr. The cleaned samples from set #5 show much less Al.

Proceeding to the samples of sets #7 to #11 (etch off copper, solder reflow, and flux/solder), EDX indicates several new elements in addition to the elements found in the first six sets, namely Br (bromine), Cl (chlorine), S (sulfur), P (phosphorus), Ca (calcium) and Cr (chromium)

EXTENSIVE ANALYSIS

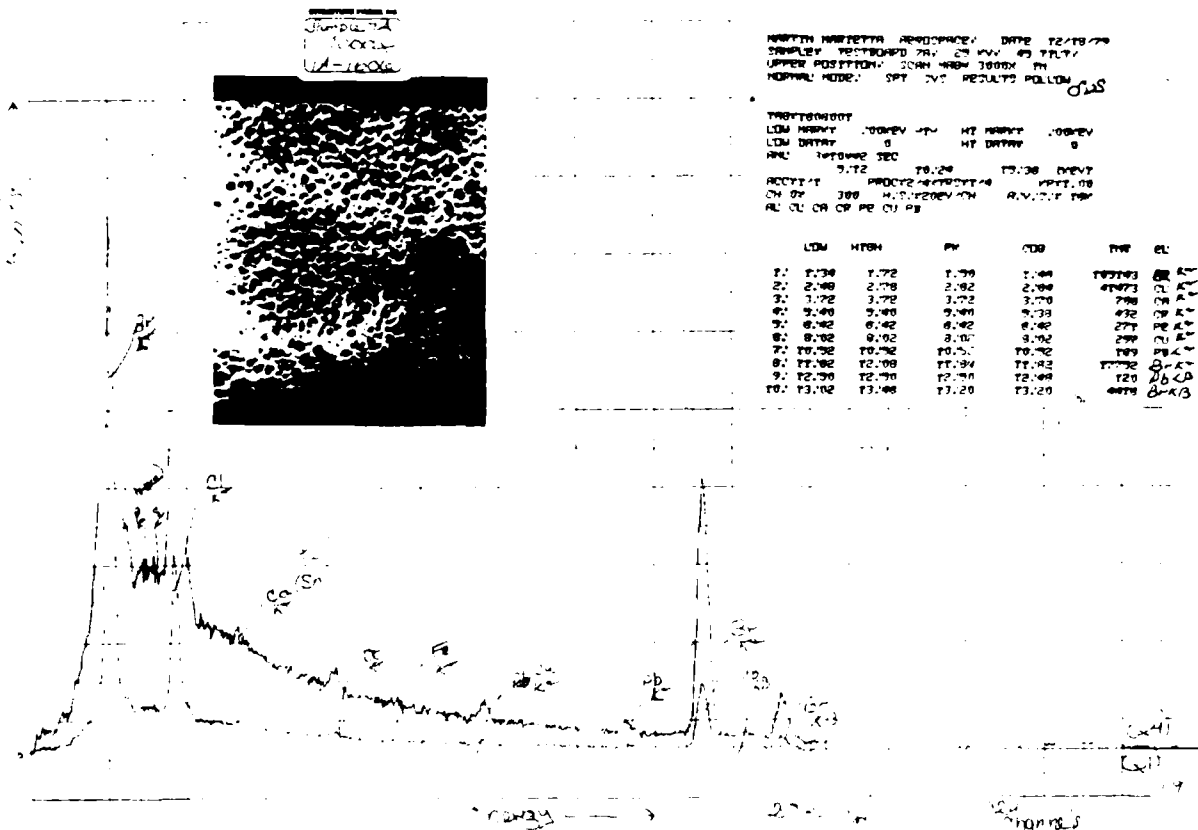


Figure 3 SEM photomicrograph + EDX readout for Sample 7A (from Set #7).

EXTENSIVE ANALYSIS

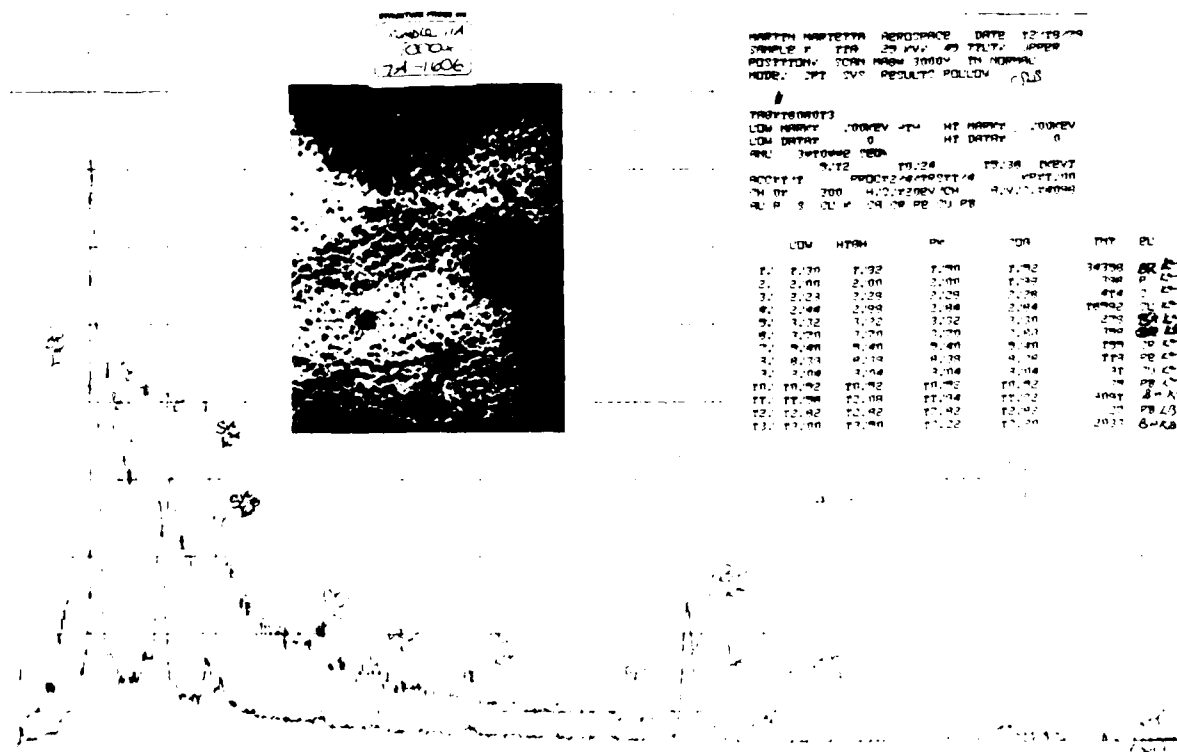


Figure 4 SEM photomicrograph + EDX readout for Sample 11A (from Set #11)

ESTERLINE ANGUS
ANALYST: J. S. HARRIS
DATE: 11/16/79

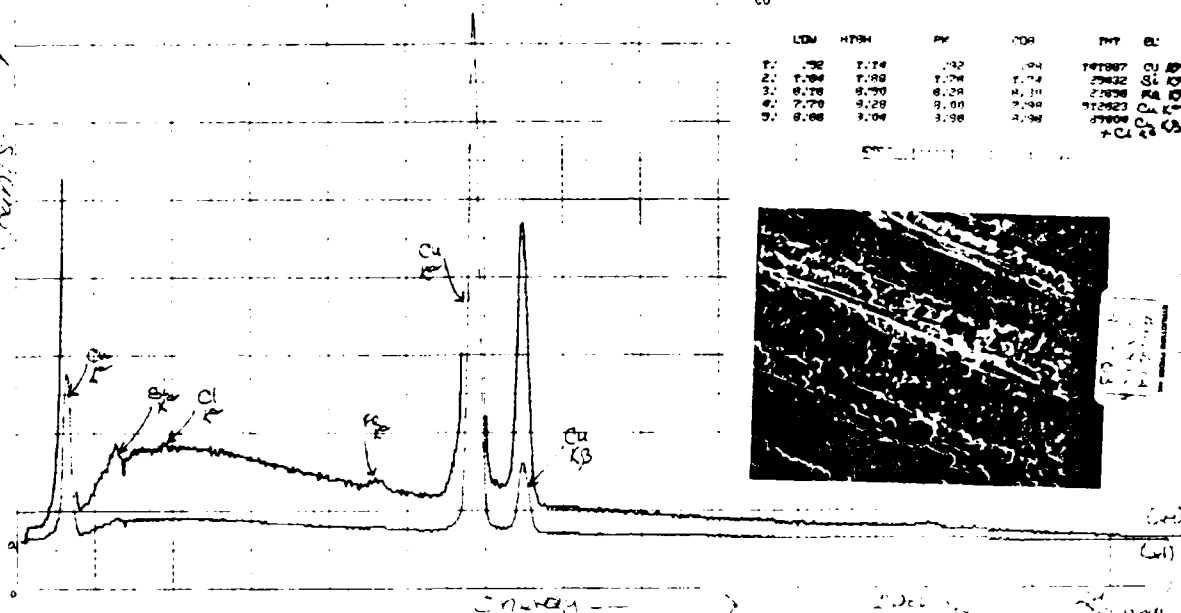


Figure 1 SEM photomicrograph + EDX readout for Sample 1A (from Set #1).

ESTERLINE ANGUS
ANALYST: J. S. HARRIS
DATE: 11/16/79

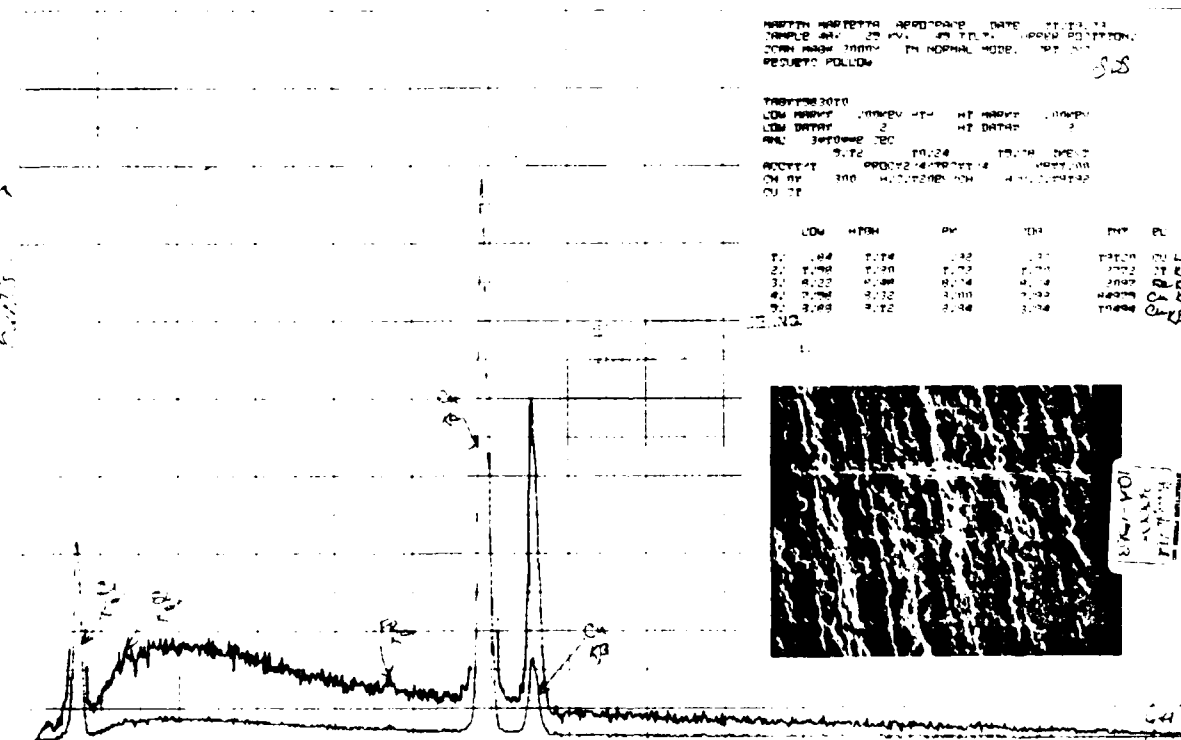


Figure 2 SEM photomicrograph + EDX readout for Sample 4A (from Set #4).

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.1 SEM/EDX

2.2.1.2 Procedure

HIGHLY FOCUSED ELECTRON BEAM FROM SEM ENABLES FORMATION OF PHOTOMICROGRAPHS

The SEM electron beam produces a secondary electron image of the surface revealing general surface morphology.

Photomicrographs were taken at 100x; 300x; 1,000x; 3,000x (and some at 10,000x) for the samples from all sets. The purpose of this was to record in photographic form the general surface morphology of the printed wiring at different stages during the manufacturing process. Three samples were used from each set. Since 12 sets were used, there are 36 (12x3) separate EDX readouts.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.1 SEM/EDX

2.2.1.3 Data

DATA CONSISTS OF PHOTOMICROGRAPHS PLUS EDX READOUTS

The SEM/EDX data consists of select photomicrographs plus 36 EDX readouts.

Since it is not feasible here to present all 36 EDX readouts, four have been chosen as representative of the technique. These are Figures 1-4. Figure 1 gives the EDX readout for one of the samples from set #1 + SEM photomicrograph at 3,000x magnification; Figure 2 the EDX readout for a sample from set #4 + SEM photomicrograph; Figure 3 for a sample from set #7; and Figure 4 for a sample from set #11. The EDX spectra are displayed at two different intensities, i.e., x1 and x4.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.1 SEM/EDX

2.2.1.1 Discussion of Method

SCANNING ELECTRON MICROSCOPY (SEM) MAKES USE OF HIGHLY FOCUSED ELECTRON BEAM

The SEM produces a highly focused electron beam inciting the production of x-ray from the sample which leads to a semiquantitative indication of how much of the x-ray emitting element is present.

Scanning Electron Microscopy (SEM) makes use of a highly focused electron beam (less than 100 Å diameter) which can be scanned in a raster on the sample surface. The intensity of the secondary electrons produced at each point is used to form a picture of the sample. Magnification factors from 10x to 100,000x can be obtained. The depth of the field is inherently quite large, allowing the micrographs to be in focus at all points across a rough surface. In addition, the SEM does not suffer from the light microscope problem of light reflecting off at odd angles and being lost from view.

Energy dispersive electron probe microanalysis (EDX) was used to analyze for the principal components as well as low-level (0.1%) contaminants in relatively thick layers (several micrometers, μm , i.e., about 10,000 to 50,000 Å). It must be emphasized that this method of analysis cannot be considered a form of direct surface analysis since the electron beam "sees" quite deeply into the sample. The bombarding SEM electron beam will incite the production of x-ray from the sample. The resulting x-ray spectrum is normally displayed as an intensity versus x-ray emission energy plot. The vertical scale is x-ray intensity at each energy position, and the intensity level provides a semiquantitative indication of how much of the x-ray emitting element is present. Each element emits x-rays of characteristic energies so it is a simple matter to relate an x-ray peak to its corresponding element using a table of major x-ray emission energies. This analysis, like any making use of EDX, does not include elements lighter than Na (sodium; At No. 11) since these cannot be detected by this method.

Direct surface analysis techniques were used to examine the surfaces of test PW after each of the above stages. Three samples were chosen from each set for examination by the direct surface analysis techniques. Since there were two sets per stage, there was a total of 36 PW samples. The purpose of this investigation was to compare the surface characteristics between the samples with respect to physical morphology and elemental composition.

A total of three⁵ different surface analysis technical were employed:

- 1 Scanning Electron Microscopy coupled with Energy Dispersive Spectroscopy (e⁻ in, x-ray photons out), SEM/EDX⁶
- 2 Auger Electron Spectroscopy (e⁻ in, e⁻ out), AES⁷
- 3 Electron Spectroscopy for Chemical Analysis, (x-ray photons in, e⁻ out), ESCA (sometimes referred to as X-ray Photoelectron Spectroscopy, XPS).⁸

Solvent extraction/analysis techniques were used to analyze solvent extracts of test PW after each of the above stages. Two samples were chosen from each set for examination by each solvent extraction/analysis technique. For this investigation the goal was to compare elemental and ionic composition among samples at the different manufacturing stages.

A total of two⁹ different solvent extraction/analysis techniques were employed:

- 1 Inductively-Coupled Plasma Emission Spectrophotometry, ICP-ES¹⁰
- 2 Ion Chromatography, IC¹¹.

Each one of these techniques has its own particular strengths and weaknesses; it is appropriate at this point to discuss them and the results gleaned from each.

Scale of Effectiveness. The scale of effectiveness will be the extent of analytical fulfillment of each of the viable alternative. For this purpose an experiment was performed to aid in deciding between the alternatives. The design plan of this experiment called for testing PW at six distinct stages during the manufacturing process. These six stages were:

- 1 Drill, deburr, chemical and mechanical clean
- 2 Electroless plate
- 3 Apply resist, develop image, electrolytic plate with copper and solder, strip resist
- 4 Etch image (alkaline etchant)
- 5 Solder reflow and rout to size
- 6 Stuff components and flux/solder.

After each stage one set of PWBs was cleaned using conventional PW cleaning methods, viz., solvent degrease (1,1,1-trichloroethane used at all stages except the sixth-there 1,1,1-trichloroethane followed by 1,1,2-trichloro-2,2,1-trifluoroethane was employed) followed by a thorough rinse with demineralized water. One set of PWBs after each stage was left as is, i.e., not cleaned at all.

To summarize, PWBs in sets #1 and #2 were processed through stage 1; PWBs in sets #3 and #4 were processed through stage 2; sets #5 and #6 through stage 3; sets #7 and #8 through stage 4; sets #9 and #10 through stage 5; and sets #11 and #12 through stage 6.² The PWBs in odd numbered sets were cleaned by the conventional PW cleaning techniques³ whereas the PWBs in the even numbered sets received no cleaning.⁴ All PWBs used for this experiment were fabricated and assembled at Martin Marietta's Ocala PW facility in the actual production mode.

2.1 EXPERIMENT FOR PROFILING PW CONTAMINANTS USED TWO SEPARATE PROFILING METHODS

The PW in the experiment were tested for contaminants using direct surface analysis techniques and solvent extraction/analysis techniques.

Two distinct methods of profiling for residual contaminants on PW were employed:

- 1 Direct surface analysis techniques
- 2 Solvent extraction/analysis techniques.

information on the kind and concentration of all solvated ionic species at levels far below what can be achieved by ERT. To meet the objective as we have restated it then implies that a contaminant profiling system must be assembled and intergrated.

However, this is not to suggest that the laser scanning system has no merit. Clearly it does. A laser scan evaluation of the PW surface can reveal many common and serious PW defects such as edge ply separation, missing holes, solder bridging, cold solder joints, dewetting, etc. It is thus evident that PW evaluation by a laser beam scanning system can be used to great advantage for assuring proper process control over critical portions of the PW manufacturing process. It cannot, however, in its present state-of-the-art discern submicroscopic quantities of residues left on the surface during the PW processing. Thus, although laser beam PW evaluation cannot at the present level of the art meet the objective, it can be used in a complementary fashion to contaminant profiling. That is, it can be used for more rigorous process control for PW defects above a certain dimension ($>10^{-4}$ cm). With this assessment of laser scanning for PW evaluation, we pass to the third alternative.

By direct surface analysis techniques, we mean those techniques capable of focusing on and examining a minute portion of the PW surface. An analysis of the different elements present on the surface is the normal outcome, but one of the techniques (ESCA) can yield some valence information. A total of three different surface analysis techniques hold promise:

- 1 Scanning Electron Microscopy coupled with Energy Dispersive Spectroscopy (e^- in, x-ray photons out), SEM/EDS
- 2 Auger Electron Spectroscopy (e^- in, e^- out), AES
- 3 Electron Spectroscopy for Chemical Analysis (x-ray photons in, e^- out), ESCA (sometimes referred to as X-ray Photoelectron Spectroscopy, XPS).

There is no technical reason to suggest that direct surface analysis techniques cannot be used to achieve the objective. Hence, they must be considered a viable alternative at this point.

Solvent extraction/analysis techniques represent the fourth alternative. By this we shall mean those techniques capable of analyzing a solvent extract of PW for the kind and concentration of various ionic species. There are two different solvent extraction/analysis techniques:

- 1 Inductively-Coupled Plasma Emission Spectrophotometry, ICP-ES
- 2 Ion Chromatography, IC.

Again, there is no technical reason to suggest that solvent extraction/analysis techniques cannot be used to achieve the objective. Therefore, they too must be considered as a viable alternative for developing a contaminant profiling system.

Let us briefly discuss the four alternatives presented above and examine to what extent they are likely to help us achieve the objective. The first alternative is the extract resistivity test (ERT). It is based on measuring the specific resistivity, ρ , or its reciprocal, κ , the specific conductance, of a solvent extract of PW. There are several commercial devices now available on the market which perform one variation or another of this test. Such devices are notoriously susceptible to the absorption of carbon dioxide (CO_2) from the atmosphere followed by its subsequent ionization in solution. This can result in a serious deterioration of the instruments' accuracy. And no variation of the ERT affords any indication whatsoever of the specific ionic species causing the degradation of the parameter being measured (either ρ or κ). The ERT is quantitative only for the general class of all ionic species, or at least those species most soluble in the solvent used in the test (typically a mixture of water/2-propanol). But for greater product reliability and improved field performance and also for better process control, it is highly desirable to be able to identify each particular species causing degradation and to be able to measure its corresponding concentration. This the ERT in any variation cannot do. Hence, in terms of meeting the above objective, the effectiveness of the ERT is low.

The second alternative is laser beam scanning of the PW surface. It would seem at first that this method might hold high promise for meeting the above objective. However, a moment's consideration causes a realization that here a distinction must be made. A reexamination of the objective as stated reveals an ambiguity. Of what level of contamination are we speaking? In the present state-of-the-art analytical instrumentation can detect and measure nanogram (ng) and in some cases even picogram (pg) quantities of material. A careful technical consideration of the approach to the problem by this method suggests that only a laser beam of x-ray frequency could detect contaminants at the atomic and molecular scale (10^{-8} - 10^{-7} cm). Ordinary visible light laser techniques probably cannot distinguish anything beyond about $1 \mu\text{m}$. Therefore, if the original objective is meant to deal with submicroscopic amounts of contaminants, then clearly a laser beam scanning system will not accomplish the objective.

The objective can be made unambiguous by specifying that by detecting contaminants and measuring their concentrations we mean submicroscopic quantities of material. Visible or microscopic defects of the PW manufacturing process shall not be considered a form of contamination. Rather, by contaminants we shall mean identifiable chemical species. With this in mind, the effectiveness of the laser beam scanning system for meeting the objective as modified is very low.

In order to clarify the discussion, let us establish several definitions. Designate the act of detecting contaminant species and assaying their individual concentrations as contaminant profiling. We are especially concerned with the profiling of all ionic species. Profiling the contaminated surfaces of PW to ascertain their cleanliness will provide

2.0 A SYSTEMS APPROACH FOR DETERMINING PRODUCTION CLEANLINESS OF PRINTED WIRING

Systems analysis used to determine the preferred method for detecting contaminants on PW.

Systems analysis normally takes place in five overlapping stages¹:

- 1 Formulation - the issues are clarified and the elements of the problem identified.
- 2 Search - information is gathered and alternatives generated.
- 3 Evaluation - the alternatives are evaluated against a selected criterion. The criterion is used to weigh performance versus cost.
- 4 Interpretation - the alternatives are ranked in order of preference based on the criterion. Either a deterministic or a probabilistic criterion can be used depending on the nature of the problem.
- 5 Verification - the results are verified against real-world situations.

Phase I of the program constituted the formulation stage since the issues involved in PW contamination testing were carefully examined and clarified.

The Objective. Develop a systems approach to deal with PW contaminants. This approach necessitates testing for contaminants. This entails both detecting the contaminants (qualitative analysis) and measuring their concentrations (quantitative analysis). The approach discussed here will deal chiefly with ionic contaminants.

The Alternatives. A careful examination reveals four alternatives to achieving the objective:

- 1 The extract resistivity test (ERT)
- 2 Laser beam scanning of the PW surface
- 3 Direct surface analysis techniques
- 4 Solvent extraction/analysis techniques.

Recalling that the objective is to both detect and measure the amount of specific contaminant species, one must now ask to what extent each alternative will meet this objective. The scale of effectiveness will be the extent of analytical fulfillment of each of the alternatives. Against this scale the corresponding costs must be superimposed.

NOTES

1. This term is generic and refers to detail printed wiring of any type: (1) rigid printed wiring boards (PWBs), (2) flexible printed wiring, (3) rigid-flex. It also refers to flux/soldered printed wiring assemblies (PWAs) and conformally coated printed wiring assemblies (PWAs).
2. 2.0 M Ω cm is the lowest acceptable resistivity for a PW extract following MIL-P-28809 procedures. See MIL-P-28809 or above mentioned report.
3. It is anticipated that higher reliability will be required for PWAs routinely having <5 unit line widths/line spacings.

Indeed, a recent paper claims that five micrometer (5 μ m) lines can be achieved on a variety of substrates using a semi-additive process. See Luke R. Volpe, "A Method for Manufacturing High Density Conductive Interconnect Circuits", Intern J. Hyb. Microelec., Vol. 4, No. 2, October (1981), 246-50.

The system was to consist of various pieces of analytical instrumentation suitable for profiling individual species and a minicomputer. The minicomputer's purpose was for final analysis of the results, overall systems control of the analytical instrumentation, and final report generation.

After the system was developed, it was implemented in the Contractor's PW facility located in Ocala, Florida. An Industry Demonstration took place on 10 December 1981 to interested members of the PW industry. The remainder of this report deals with the steps taken to develop and implement this system. The system is called a contaminant profiling (C/P) system.

1.3 The Benefits

Identification of individual contaminant species is the first step in understanding contaminant mechanism, pathways (the various process steps), and synergistic effects. A C/P system will prove necessary to meet the tighter packaging requirements of future PW. The PW industry is being driven by advances in the microelectronics industry, and advances in integrated circuits (ICs) leads to increased demands for packaging the ICs which leads to further demands for PW to interconnect and support packaged ICs. The trend in PW is towards reduced line widths/line spacings and greater component densities.³ All of this means improved cleaning processes and ways of assuring that the PW is clean. It will be necessary to detect contaminant species in the submicrogram ($<10^{-6}$ g) region. For these reasons the contaminant profiling system was developed.

The potential sources of PW contamination are many. These may be summarized as:

- 1 The substrate material prior to fabrication
- 2 The various operations involved in the fabrication process such as plating and etching
- 3 Packaging and/or transferring the PW (often referred to as printed wiring boards at this stage) to the assembly area
- 4 The various operations involved in the assembly process, of which soldering is undoubtedly the most important, both from the standpoint of producing a workable PW and from the aspect of introducing serious contaminants on the PW surface
- 5 The components used--especially the component leads
- 6 Inspection and reworking
- 7 Final inspection and packaging
- 8 Ambient shop conditions.

The most harmful class of contaminants are clearly ionic species since their presence in the PW surface will actively degrade the electrical properties of PW, especially in the presence of moisture. Contaminant species such as salts of copper and lead produce green and white residues on the PW surface. These and other salts, if not removed by suitable cleaning processes, can lead to electrical malfunction and/or circuit failure. Even though PWAs may be conformally coated, no conformal coating is completely impermeable to moisture. Moisture (water vapor, H_2O) is attracted to hygroscopic materials left on the PW surface, such as certain salts and organic materials. This attraction of moisture for hygroscopic materials can result in vesication (mealing), especially under certain conditions of temperature and humidity. Vesication refers to the formation of blisters under the conformal coating but on top of the PW surface. Vesication indicates the existence of hygroscopic materials left on the PW surface.

1.2 The Solution

The Final Recommendation section (11.0) of the Phase I FTR suggested a systems approach to solving the problem of PW contaminants. The solution was to design, assemble, and integrate a system giving a detailed profile of practically all of the ionic contaminant species. Profiling a species means detecting it (qualitative) and measuring its concentration (quantitative).

but neither gives any indication whatsoever of the specific ionic species causing the degradation. Both methods can be characterized as quasi-quantitative and non-specific. Neither method is ion-specific; hence, neither method can be used for detailed profiling of ionic species. Further, neither method can be used to detect non-ionic species, let alone profile them. This criticism can also be directed towards another common cleanliness test: temperature/humidity cycling. It is not ion-specific nor is it even quantitative. At best it indicates the presence of hygroscopic species on the PW surface after the surface has a conformal coating. Table 0 summarizes this situation. This summarizes the most important results obtained in Phase I of the subject contract. Although the results as they stand by themselves seemed disappointing, they did suggest a more rigorous quantitative test method to check the cleanliness of PW substrates.

TABLE 0. Deficiencies in Current Test Methodology

TEST	DEFICIENCY	RESULT
RESISTIVITY	PWAs WITH LESS THAN 1 $\mu\text{g}/\text{cm}^2$ NaCl OR EQUIVALENT WILL NOT FAIL 28809	FOR PWAs WITH 5 MIL LINE WIDTHS/5 MIL LINE SPACINGS, THEY WILL PASS 28809 BUT MAY FIELD FAIL
RESISTIVITY	SOME IONIC CONTAMINANTS SUCH AS CHLORIDE, Cl^- , ARE MUCH WORSE THAN OTHERS	NO RESISTIVITY TEST DISTINGUISHES ONE ION FROM ANOTHER
TEMPERATURE/ HUMIDITY	SOME COMPOUNDS ARE WORSE IN PROMOTING BLISTERING BECAUSE OF THEIR ATTRACTION FOR WATER	TEMPERATURE/HUMIDITY TEST DOES NOT DIF- FERENTIATE BETWEEN SPECIES
TEMPERATURE/ HUMIDITY	NOT QUANTITATIVE	DOES NOT REVEAL AMOUNTS OR KINDS OF SPECIES CAUSING BLISTERING

Extract resistivity/conductivity testing (MIL-P-28809) may not even be applicable once PW line widths/line spacings pass a certain point. Indeed, as a conductor spacings become smaller than 0.009 inch, say 0.002 inch, a threshold value of 1.0 μg of NaCl or equivalent/ cm^2 of PW surface is expected to be too high a value of allowable quantity of ionic material on the PW surface. A simple linear shrinkage factor alone would suggest a value of 0.22 $\mu\text{g}/\text{cm}^2$. Thus, as conductor spacings on PW shrink to 2 mils, a lower limit of at least 7.0 or preferably 8.0 $\text{M}\Omega\cdot\text{cm}$ will be required rather than 2.0 $\text{M}\Omega\cdot\text{cm}^2$. It is questionable whether the accuracy of devices designed to measure the extract resistivity are capable of performing at this higher suggested limit. It is further questionable whether their accuracy is such that they can effectively monitor all other probable ionic species, some highly insoluble, likely to be formed on PW.

in addition to Cu, Sn and Pb (see Figures 3 and 4). The Br and P are undoubtedly part of the epoxy substrate (FR-4 fire retardant epoxy used). The Cr may come from the glass coupling agent or from the passivating agent used on the copper and remaining on the surface after the copper has been etched away. If the former, it is within the epoxy substrate; if the latter, on it. See 2.2.3.4, Discussion of Results, ESCA, for evidence that some of the Cr is to be found on the epoxy surface, i.e., its source is the passivating agent. The Cl, S and Ca may be true surface contaminants or they may be contaminants within the epoxy laminate¹². Further, the photomicrographs reveal several interesting items. Crystalline-type structures were observed by SEM on a number of solder areas on samples from sets #7, #11, and #12. Figure 5 is a SEM photomicrograph of heavy deposit of these structures observed on sample 11A. Dot, or elemental distribution, maps of Pb, Sn, Cu and Br were made in this area.¹³ No increase in intensity was observed, indicating the lack of these elements. Au (gold) also appeared on the spectrum because Au was used as a coating applied for the purpose of reducing charging effects on the samples. A dot map for Au also revealed no increase in intensity in the crystalline deposit regions. Since these elements were the major ones observed in that area as evidenced by the EDX spectra, it is concluded that the deposited material is organic in nature. It is probably flux.

SEM/EDX is useful in detecting gross defects and/or contaminants resulting during PW manufacture. SEM photomicrographs at 3,000x and 10,000x often reveal different surface morphologies, especially when surface oxides are present. EDX is useful for characterizing the major elements involved and can sometimes spot defective boards, as, for example, the gross lack of Sn in sample 5B. However, the fact that the electron beam for EDX penetrates so deeply into the material (1-5 μ m) precludes it from being an optimal method for surface contaminant analysis where the species being examined should be within a few angstroms of the "true" surface.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.2 AES

2.2.2.1 Discussion of Method

AUGER ELECTRON SPECTROSCOPY (AES) MAKES USE OF FOCUSED ELECTRON BEAM TO KNOCK OUT CORE LEVEL ELECTRONS IN SAMPLE

AES uses a focused electron beam to knock out core level electrons in the sample resulting in so-called Auger electrons; this technique is a true surface analysis technique.

The excitation source in Auger Electron Spectroscopy (AES) is a focused beam of electrons with an energy on the order of 1-10 KeV and a current of 1-30 μ A. The primary electrons from the beam bombard the sample, knocking out core level electrons. The vacancy in the core level is rapidly filled by an outer level electron (the transition generally takes place in picoseconds or less). Since an energy difference is involved for each such transition, there must be some way to release that exact quantum of energy. The emission of a characteristic x-ray is one possibility, but the ejection of an outer shell electron called an Auger electron is a competing quantized phenomenon. Those Auger electrons which are produced within 20 Å of the surface can escape with their full energy and result in a characteristic Auger spectrum for each element. Therefore, AES is a true surface analysis technique since it reveals elemental composition down to roughly 20 Å (approx. 20 monolayers compared to EDX depths of 10,000-50,000 Å). Only H (hydrogen) and He (helium) are excluded since they have no outer shell electrons to eject.

If the thin film analysis capability of Auger is combined with the material removing capability of ion beam etching, then the composition variation with depth into the sample can be investigated and/or extraneous surface contamination can be removed.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.2 AES

2.2.2.2 Procedure

AUGER SPECTRA OBTAINED AT TWO INDEPENDENT POINTS ON SAMPLE SURFACE AND
AUGER DEPTH PROFILES MADE ON ONE SAMPLE FROM EACH OF 12 SETS

Auger elemental scans were made at two independent points on each sample; surface Auger depth profiles were made on one sample from each of the 12 sets.

Auger and ESCA spectra were obtained at the surface level from each sample. Further, Auger spectra were obtained at two independent points for each sample. Since there are three samples per set and a total of 12 sets, there are 72 individual AES elemental scans. For sets #7-#12, the Auger spectrum was obtained at a metallic surface since AES cannot be used on organic materials such as epoxy because the primary electron beam has sufficient energy to rapidly destroy organic materials. Auger depth profiles were made on one sample from each of the 12 sets. ESCA high resolution spectra were obtained from selected sample areas to explore the chemical bonding information available. In addition, ESCA elemental survey scans were made at a point on the epoxy surface for each of the three samples in sets #7-12. Thus, there are 18 individual ESCA elemental scans.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.2 AES

2.2.2.3 Data

DATA CONSISTS OF AES ELEMENTAL SCANS AND DEPTH PROFILES

The AES data consists of 72 elemental scans and 12 depth profiles to reveal contaminants on test PW.

To give an example of the method of computing atomic percents, sample 1A (AES) is chosen.

Example of intensity/concentration conversion calculations: For sample 1A-AES, as received, atomic concentration C_x of element X may be estimated by:

$$C_x = \frac{I_x/S_x}{\sum_i I_i/S_i} \times 100$$

where I_x is the peak-to-peak height of the Auger electron signal, or the peak height of the ESCA photoelectron signal, for element X divided by the proper scale amplification, and S_x is the elemental sensitivity factor as found in appropriate references. Where peaks other than those referenced have been used, their sensitivity factors have been corrected using the ratio of the measured peak height to the reference peak height. Note that these calculations are of a semiquantitative nature only. The absolute accuracy is no better than ± 30 percent. Relative accuracy for similar surfaces is ± 5 percent.

Element	I_x (cm)	S_x	I_x/S_x	C_x (atomic %)	Rounded to
S	1.1	0.74	1.49	0.85	0.9
Cl	1.8	1.00	1.80	1.03	1.0
C	10.2	0.14	72.86	41.57	41.6
Ca	0.1	0.40	0.25	0.14	0.1
N	0.53	0.21	2.52	1.44	1.4
O	12.8	0.40	32.00	18.26	18.3
Cu	15.4	0.24	64.17	36.61	36.6
Na	0.05	0.25	0.20	0.11	0.1
$\sum_i I_i/S_i =$			175.29	100.01	100.0

The data are presented in Table 1. However, since the data in Table 1 are unwieldy, it was thought appropriate to compute the arithmetic mean for the data for each set and present these in tabular form (see Table 2).

Table 1

Estimated Atomic Compositions (%) From AES Data

Set	Sample	Pb	S	Cl	C	Ca	N	Sn	O	Cu	Na	Al	Si	Fe	F
#1	1A	-	0.9	1.0	41.6	0.1	1.4	-	18.3	36.6	0.1	-	-	-	-
	1A	-	0.6	0.7	58.6	0.3	1.5	-	12.3	25.8	0.2	-	-	-	-
	1B	-	0.7	1.9	36.8	0.2	1.5	-	20.9	38.0	-	-	-	-	-
	1B	-	0.8	1.2	38.1	0.2	1.4	-	24.2	34.0	0.1	-	-	-	-
	1C	-	0.9	1.4	40.8	0.2	1.5	-	18.3	36.8	0.1	-	-	-	-
	1C	-	1.4	3.9	32.0	0.2	1.6	-	20.2	40.7	-	-	-	-	-
#2	2A	-	0.8	2.9	37.1	0.6	0.9	-	16.5	40.7	0.5	-	-	-	-
	2A	-	1.1	2.6	39.4	0.2	0.9	-	15.9	39.5	0.4	-	-	-	-
	2B	-	1.2	3.5	34.7	0.2	0.7	-	16.0	43.7	-	-	-	-	-
	2B	-	0.9	2.6	39.6	0.2	0.8	-	15.7	40.2	-	-	-	-	-
	2C	-	1.8	4.7	34.3	0.1	0.6	-	15.7	42.8	-	-	-	-	-
	2C	-	0.9	2.6	39.1	0.2	0.9	-	15.9	40.3	0.1	-	-	-	-
#3	3A	-	1.5	4.0	32.1	0.2	1.5	-	20.2	40.5	-	-	-	-	-
	3A	-	1.5	4.3	33.1	0.2	1.1	-	20.0	39.6	0.2	-	-	-	-
	3B	-	1.7	5.5	28.4	0.3	1.3	-	20.5	42.3	-	-	-	-	-
	3B	-	1.3	4.9	31.0	0.2	1.6	-	20.1	40.9	-	-	-	-	-
	3C	-	0.6	2.6	44.0	0.3	1.2	-	16.2	35.1	-	-	-	-	-
	3C	-	0.4	1.8	39.0	0.2	1.4	-	19.0	38.2	-	-	-	-	-
#4	4A	-	1.6	6.2	30.2	0.1	1.0	-	18.8	42.1	-	-	-	-	-
	4A	-	1.8	6.0	29.4	0.2	1.0	-	19.2	42.2	0.3	-	-	-	-
	4B	-	1.8	4.0	32.6	0.2	1.4	-	18.7	41.3	-	-	-	-	-
	4B	-	2.0	6.7	25.1	0.2	1.0	-	20.5	44.2	0.3	-	-	-	-
	4C	-	1.5	6.1	30.0	0.2	1.1	-	19.0	42.1	-	-	-	-	-
	4C	-	1.2	6.6	30.1	0.1	1.2	-	18.7	42.1	-	-	-	-	-
#5	5A	32.8	1.0	8.3	16.8	-	2.4	2.9	27.0	8.8	-	-	-	-	-
	5A	29.2	1.0	10.5	32.8	-	0.6	0.3	18.2	7.4	-	-	-	-	-
	5B	9.4	1.2	3.0	42.5	-	-	17.1	22.5	1.2	-	3.1	-	-	-
	5B	11.9	0.8	3.7	56.1	-	-	5.2	15.9	6.0	0.5	-	-	-	-
	5C	16.0	1.6	9.9	41.3	0.2	-	2.8	19.2	8.4	0.6	-	-	-	-
	5C	37.1	0.7	9.3	18.6	-	-	3.0	26.4	4.5	0.4	-	-	-	-
#6*	6A	5.3	2.4	7.5	28.2	1.3	1.8	1.5	18.8	30.6	0.9	-	-	-	-
	6A	1.7	1.1	3.9	60.5	-	4.3	3.7	9.8	15.0	-	-	-	-	-
	6B	2.9	0.7	3.0	51.0	2.7	4.4	1.5	10.8	12.2	-	7.5	-	-	3.3
	6B	1.7	1.1	2.6	57.5	0.4	2.7	3.7	11.5	12.0	0.4	5.9	-	-	1.5
	6C	1.2	0.7	1.6	59.4	0.8	4.4	0.3	6.1	12.0	-	9.3	-	-	4.2
	6C	1.3	0.9	2.6	51.1	1.6	4.8	1.6	10.3	13.7	0.4	8.1	-	-	3.6

* The peak for N and the peak for Sn interfere with each other in the Auger spectra. The chances are these values and those corresponding to Sn should probably be changed as follows:

	N	Sn
6A	1.8	1.5
6A	1.7	6.3
6B	1.8	4.1
6B	1.7	3.7
6C	1.8	2.9
6C	1.8	4.6

Table 1 (Cont.)

Estimated Atomic Compositions (%) From AES Data

Set	Sample	Pb	S	Cl	C	Ca	N	Sn	O	Cu	Na	Al	Si	F	Zn	K
#7	7A	11.6	1.4	2.8	35.5	1.6	-	17.1	26.3	-	2.1	1.4	-	0.2	-	-
	7A	11.7	0.8	2.0	36.5	1.4	-	17.8	29.4	-	0.4	-	-	-	-	-
	7B	7.4	0.5	0.8	44.2	0.4	-	15.9	29.3	1.2	0.3	-	-	-	-	-
	7B	9.3	0.4	1.1	33.9	0.4	-	18.3	32.3	-	0.4	-	3.9	-	-	-
	7C	12.4	0.7	3.8	32.2	0.6	-	14.1	30.0	-	2.3	-	-	-	-	3.9
#8	7C	18.4	-	-	6.1	0.3	-	23.1	44.1	-	0.6	-	6.9	-	-	0.5
	8A	2.2	0.8	0.8	50.3	0.2	-	14.0	25.5	5.0	1.1	-	-	-	-	-
	8A	12.1	1.6	2.4	37.5	-	-	13.4	27.6	5.1	0.3	-	-	-	-	-
	8B	1.2	0.9	1.0	46.9	1.8	-	9.3	24.2	14.4	0.3	-	-	-	-	-
	8B	2.1	2.3	3.3	32.6	2.2	-	8.2	26.6	22.1	0.6	-	-	-	-	-
#9	8C	-	0.5	1.3	53.8	1.4	-	3.0	17.3	21.8	0.9	-	-	-	-	-
	8C	7.2	1.4	1.9	45.0	-	-	17.0	25.9	1.6	-	-	-	-	-	-
	9A	10.8	1.0	6.2	27.1	2.2	-	5.8	24.4	1.0	15.6	3.7	-	-	-	2.2
	9A	12.5	0.5	2.0	26.4	0.4	-	21.4	36.0	-	-	-	-	-	0.8	-
	9B	7.7	0.5	0.8	35.5	0.7	-	16.8	31.0	-	-	-	4.0	-	3.0	-
#10	9B	6.5	0.3	1.0	42.6	1.7	-	15.6	29.6	-	-	-	-	-	2.7	-
	9C	5.8	0.5	0.9	61.6	1.3	-	10.0	19.0	-	0.9	-	-	-	-	-
	9C	11.8	1.0	1.4	26.2	0.1	-	19.8	34.9	-	-	-	4.1	-	0.7	-
	10A	1.4	0.8	1.9	40.9	1.9	-	21.6	28.6	-	2.9	-	-	-	-	-
	10A	3.1	0.9	2.8	49.7	0.2	-	18.8	22.8	-	1.7	-	-	-	-	-
#11	10B	-	0.2	1.6	46.1	0.5	-	23.2	26.1	-	2.3	-	-	-	-	-
	10B	-	-	0.5	49.6	0.6	-	18.0	22.3	-	1.1	-	8.0	-	-	-
	10C	-	0.1	0.6	45.7	0.3	-	25.5	26.9	-	-	-	-	-	0.9	-
	10C	-	0.1	-	61.0	0.4	-	18.2	19.4	-	-	-	-	-	0.9	-
	11A	8.1	0.7	1.8	48.1	-	-	13.5	27.8	-	-	-	-	-	-	-
#12	11A	8.3	0.1	3.9	40.0	-	-	17.2	30.5	-	-	-	-	-	-	-
	11B	4.7	0.3	3.5	70.7	-	-	9.0	11.8	-	-	-	-	-	-	-
	11B	9.7	-	1.4	50.9	-	-	12.6	25.4	-	-	-	-	-	-	-
	11C	4.2	-	1.7	49.4	0.1	-	19.0	25.6	-	-	-	-	-	-	-
	11C	7.5	0.4	2.7	54.4	-	-	12.7	22.3	-	-	-	-	-	-	-
#12	12A	-	-	-	98.4	-	-	-	1.6	-	-	-	-	-	-	-
	12A	-	0.1	0.1	95.9	-	-	-	2.6	1.3	-	-	-	-	-	-
	12B	-	-	-	98.9	-	-	-	1.1	-	-	-	-	-	-	-
	12B	-	0.1	-	99.2	-	-	-	0.7	-	-	-	-	-	-	-
	12C	-	0.1	0.1	99.1	-	-	-	0.7	-	-	-	-	-	-	-
	12C	-	0.1	0.1	99.3	-	-	-	0.5	-	-	-	-	-	-	-

Table 2

Set	Pb	S	Cl	C	Ca	N	Sn	O	Cu	Na	Al	Si	F	Zn	K
1	—	0.9	1.7	41.3	0.2	1.5		19.0	35.3	0.1	—	—	—	—	—
2	—	1.1	3.1	37.4	0.2	0.8		15.9	41.2	0.2	—	—	—	—	—
3	—	1.2	3.8	34.6	0.2	1.3		19.3	39.4	0.0	—	—	—	—	—
4	—	1.6	5.9	29.6	0.2	1.1		19.1	42.3	0.1	—	—	—	—	—
5	22.7	1.0	7.4	34.7	0.0	0.5	10.4	21.5	6.0	0.2	0.5	—	—	—	—
6	2.4	1.1	3.5	51.3	0.1	1.8	3.8*	11.2	15.9	0.3	5.1	—	2.1	—	—
7	11.8	0.6	1.8	31.4	0.8	—	17.7	31.9	0.2	1.0	0.2	1.8	0.0	—	0.7
8	4.1	1.2	1.9	44.3	0.9	—	10.8	24.5	11.7	0.5	—	—	—	—	—
9	9.2	0.6	2.0	36.6	1.1	—	14.9	29.1	0.0	2.7	0.6	1.3	—	1.2	0.4
10	0.7	0.4	1.2	48.8	0.6	—	20.9	24.4	—	1.3	—	1.3	—	0.3	—
11	7.1	0.2	2.5	52.2	0.0	—	14.0	23.9	—	0.0	—	—	—	—	—
12	—	0.1	0.1	98.5	0.0	—	0.0	1.2	0.2	0.0	—	—	—	—	—

*Using the suggested change in values given for N and Sn for set #6.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.2 AES

2.2.2.4 Discussion of Results

AES, A TRUE SURFACE ANALYSIS TECHNIQUE, IS USEFUL IN DETECTING ELEMENTS ON PW

AES is a true surface analysis technique since Auger electrons can only be detected for the first 20-30 Å of a surface; it is a useful technique for detecting elements on the surface of PW.

The only thing truly startling about the above data is the large amount of C (carbon) and O (oxygen) detected by AES. Neglecting the samples from set #12, on which was left a gross amount of rosin flux, all the other samples still have relatively large amounts of carbon. For the cleaned samples it is possible to show statistically (analysis of variance) that the null hypothesis: $\mu_1 = \mu_3 = \mu_5 = \mu_7 = \mu_9 = \mu_{11}$ (for 1 carbon) can be accepted at a 1 percent level of significance. This means we can presume the population mean for cleaned samples to be the same, with a 1 percent chance that we will be in error by accepting this hypothesis. Thus, accepting the null hypothesis, μ (cleaned samples) = 38.5 (for C).¹⁴ It can further be shown by similar statistical techniques that $\mu_1 = \mu_3 = \mu_5$ (for oxygen) can be accepted at a 1 percent level of significance for the cleaned copper-clad samples and that $\mu_7 = \mu_9 = \mu_{11}$ (for oxygen) can be accepted at a 1 percent level of significance for the cleaned copper-etched samples. Thus, for sets #1, #3, #5 we can accept the null hypothesis and $\mu = 19.9$ (for oxygen) for these sets. for sets #7, #9, #11 we can accept the hypothesis null and $\mu = 28.3$ (for oxygen) for these latter sets.

This means for the first three cleaned sets, on the average C and O account for 58.4% of the atomic composition as determined by AES and for the latter three cleaned sets C and O account for 66.8% of the atomic composition on the average as determined by AES. This means that of all the elements detected on cleaned PW by AES, C and O account for just about two-thirds. The C on the samples is probably mostly chemisorbed CO, CO₂, and hydrocarbons from the atmosphere or adsorbed solvent (1,1,1-trichloroethane). These materials adhere tenaciously to the PW surface, even under high vacuum, because they chemisorb. No doubt some of the O also comes from chemisorbed gases, including H₂O, while some of it is probably associated with various metals, Cu, Pb, Sn, as metallic oxides.

Another contaminant found on every set (although in far lesser a percentage) is S (sulfur). Again, using the F test, it is likely (1 percent level of significance) there is no difference between the amount of S on sets #1-#9 inclusive so $\mu = 0.1$ (for sulfur) for these sets. The S probably comes from the atmosphere and is absorbed onto the PW surface.

Nitrogen gas (N_2) is also found on the PW surface, particularly in the first six sets. Since N_2 is physically absorbed, there was undoubtedly much more on the surface initially but it came off under high vacuum.

In addition to the above, Cl (chlorine), Ca (calcium) and Na (sodium) are found on the PW at every stage (except stage 6, sets #11 and #12, for Ca and Na). Some of the Cl may come from the 1,1,1-trichloroethane which was used initially on all sets to degrease the PW before processing. It is known that C has a strong affinity for Cl. However, some of the Cl undoubtedly exists as chloride ions, Cl^- . Further, the Na and Ca are likely to exist as ions, viz., Ca^{2+} and Na^+ . Other positive ions, Al^{3+} (aluminum), Zn^{2+} (zinc), and K^+ (potassium) are also noted at various stages. The Al seems chiefly associated with electrolytic plating or possibly from the nonwoven aluminum oxide scrubbing brush. The Zn probably arises from the Zn used to promote better adhesion between the copper and epoxy substrate during lamination and is thus exposed after the copper has been etched away. This seems borne out by the fact that Zn is observed chiefly at stages 4 and 5. Na and Ca may come from the undemineralized water used at almost every stage of PW fabrication. Note that their concentrations drop to 0 during stage 6, at least as determined by AES. Si (silicon) is also found on some sets. It, like Zn, seems to appear on the PW surface after the copper has been etched away. It is probably Si from the glass fibers that has become exposed after etching.

Turning to the in-depth profiling, several interesting results are seen (see Figures 6-11 for representative samples). The depth profiling was performed by simultaneously sputtering away a portion of the surface with Ar^+ while applying the Auger electron beam. Only 12 samples were used, one from each set. Samples from sets #1-#4 show variation in the oxide thickness on the Cu but no other interesting results (see Figures 6 and 7). Again, the cleaned samples (1,1,1-trichloroethane followed by demineralized water) show much more oxide formation. Further, the amount of oxide runs much deeper ($>1,500$ Å) in the two cleaned samples than it does in the uncleaned. In the uncleaned samples the oxide layer falls off almost to 0 by 300 Å. Again, it is speculated that the water used in the cleaning process greatly accelerated the formation of oxides on the PW surface. The sample from set #5 (Figure 8) shows a chloride layer near the surface and a thick oxide-chloride trailoff. The sample from set #6 (Figure 9) is about the same as that from set #5 with respect to the final Cu:Sn:Pb relative intensities but lacks the surface chloride and thick oxide-chloride trailoff. In addition, a layer of Sn (oxide?) is observed at the surface of this sample.

The samples from sets #7-#12 have radically varying profiles. Examination of these shows depleted Pb on the sample from set #7, a 300 Å thick organic on the sample from set #8, good solder with little contamination on the sample from set #9 (Figure 10), a surface layer of Pb tapering off to the expected composition in the sample from set #10, a surface Sn chloride-oxide over a high Pb region in the sample from set #11 (this is the cleaned sample after flux/solder - presumably "clean" and ready for conformal coating, see Figure 11), and a very thick ($>2,000$ Å) organic layer on the sample from set #12 (this is uncleaned flux).

STRUCTURE PROBE, INC.
230 TOWNSEND STREET, MANASSAS, VA 20108
703-791-1000



Figure 5 SEM photomicrograph of crystalline deposit on Sample 11A (from Set #11).

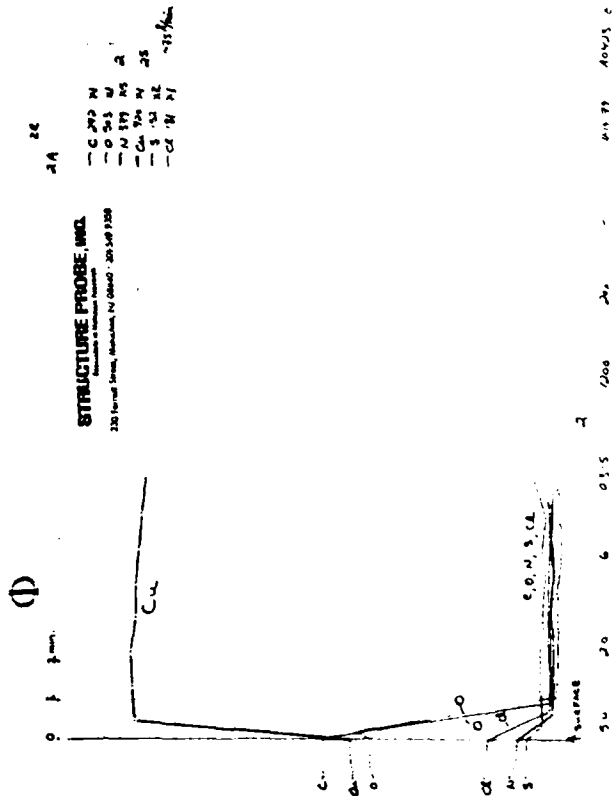


Figure 7 Auger depth profile of Sample 2A (from Set #2).

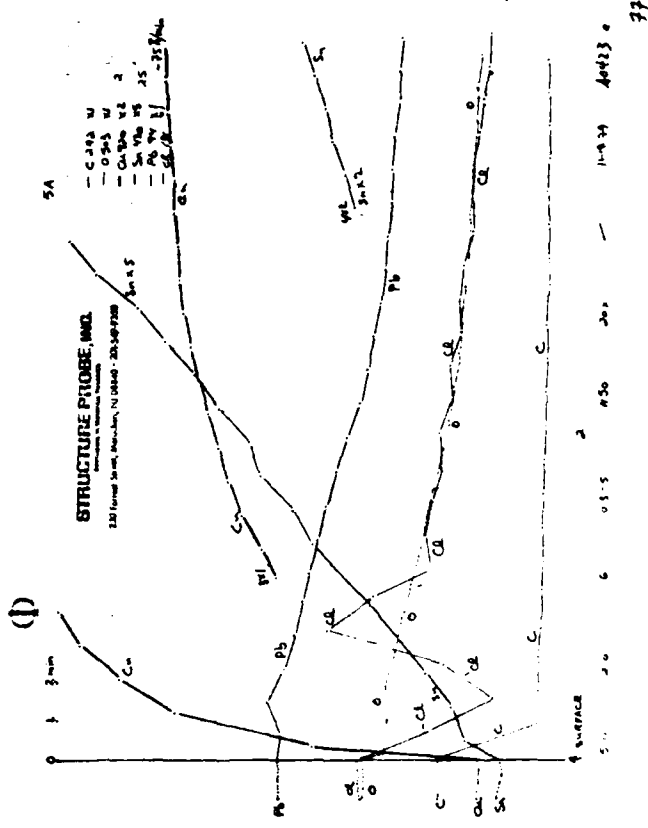


Figure 6 Auger depth profile of Sample 1A (from Set #1).

Figure 8 Auger depth profile of Sample 8A (from Set #8).

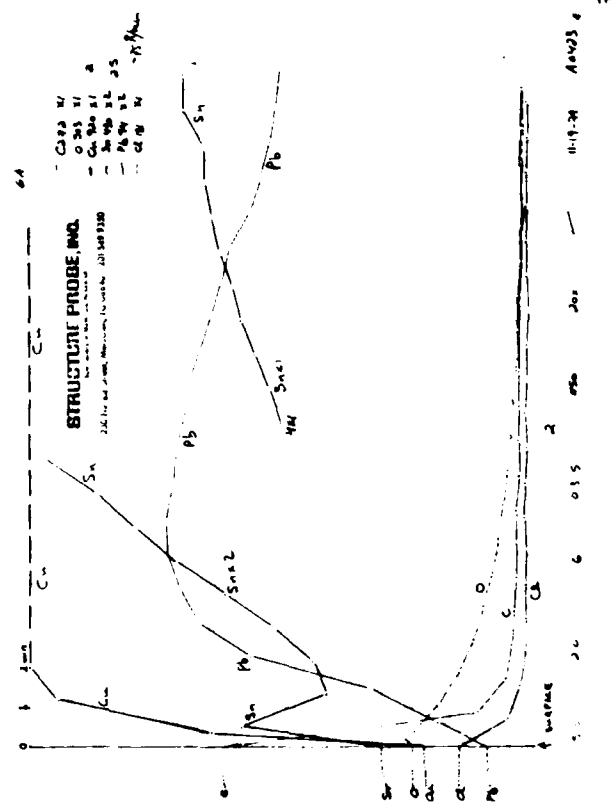


Figure 9. Auger depth profile of Sample 6A (from Set #6)

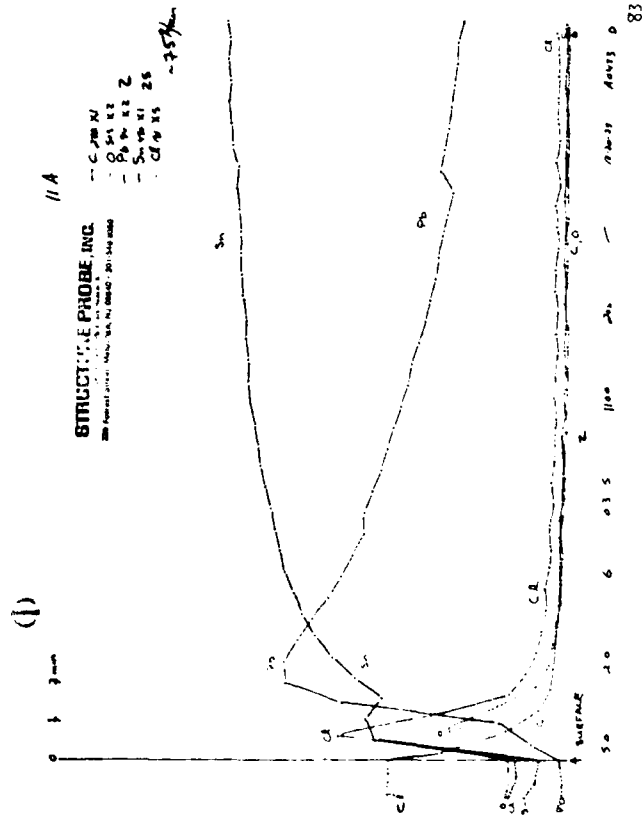


Fig. 10. 111 123

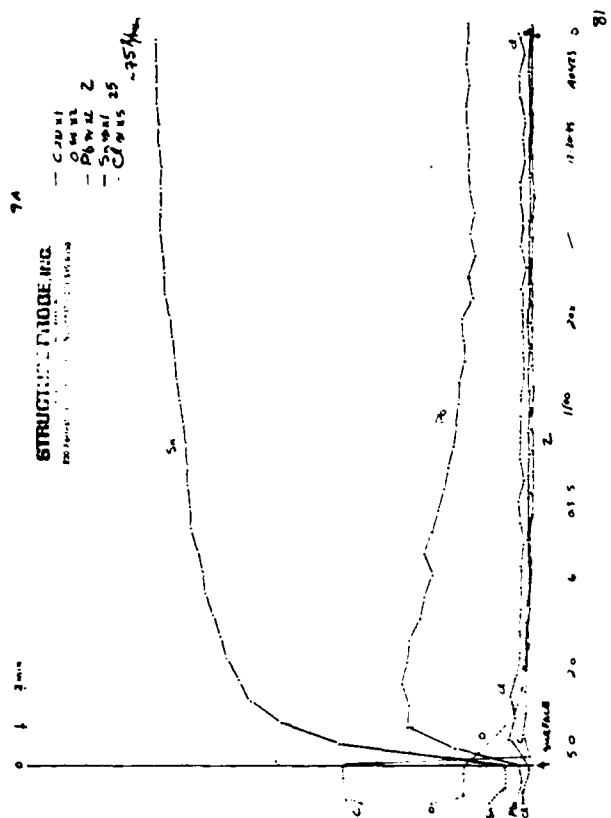
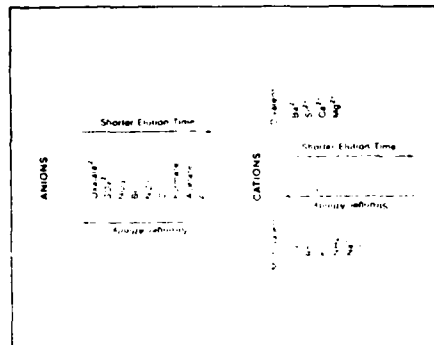


Figure 10 Anger depth profile of Sample 9A (from Set#9)



Figure 12. SEM photomicrograph of epoxy surface at 7,000x.

[illegible]

Like the SEM/EDX, AES is useful in detecting elements on PW. However, unlike EDX, AES is a true surface analysis technique since Auger electrons can only be detected for the first 20-30 Å of a given surface. Thus AES is useful in defining the surface elements on PW. The chief problem with this technique is choosing a representative spot on the surface. The Auger beam covers an area typically 200-300 μm^2 . Since the surface of PW is very large compared to the area covered by the Auger beam, a PW having an area of 100 cm^2 will have a ratio of about 3×10^{-8} of beam area: PW area. That is, the Auger beam covers about 1/100,000,000 of the board surface. Examining three or four spots on several separate but identically manufactured PWBs will provide more confidence in this analytical technique, but this is more expensive.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.3 ESCA

2.2.3.1 Discussion of Method

ELECTRON SPECTROSCOPY FOR CHEMICAL ANALYSIS (ESCA) MAKES USE OF A MONOENERGETIC X-RAY BEAM TO IRRADIATE SAMPLE SURFACE

The ESCA uses a monoenergetic x-ray beam to irradiate the PW surface knocking out electrons (photoelectrons) from core shells of atoms.

Electron Spectroscopy for Chemical Analysis (ESCA) or as it is sometimes called, X-ray Photoelectron Spectroscopy (XPS), makes use of a monoenergetic beam of x-rays to irradiate a sample surface. The excitation source in ESCA is an x-ray beam of predominantly $MgK\alpha$ x-rays. The x-rays (photons) possess sufficient energy to knock out electrons from core shells of atoms in the sample. Electrons from atoms within the top 20-30 Å of the surface have enough energy to escape and are available for detection as photoelectrons. The energy equation governing these photoelectrons is:

$$K. E. (1/2 mv^2) \text{ of the photoelectron} = h\nu - B.E. - \phi_w.$$

where $h\nu$ is the energy carried by the photon, B.E. is the binding energy and ϕ_w is the work function of the surface. The ESCA spectra are plotted with binding energy on the horizontal axis and electron intensity on the vertical axis. ESCA has an advantage over AES, namely, it can be applied to polymeric surfaces whereas AES cannot, the electron beam being too highly destructive of organic material to gain useful information. With ESCA, elemental identification is possible by merely comparing the measured electron peak energy to the tabulated values. As with AES, all elements except H (hydrogen) and He (helium) can be detected. However, ESCA is a potentially more powerful method than AES, chiefly because the photoelectron binding energy can be measured so precisely that shifts in energy due to changes in chemical bonding can be studied resulting in much information about chemical compounds present in the analyzed layer. This method is known as High Resolution (HR) ESCA.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.3 ESCA

2.2.3.2 Procedure

ESCA SPECTRA OBTAINED AT ONE POINT ON PW EPOXY SURFACE AND EIGHT HIGH RESOLUTION ESCA MADE AT SELECTED POINTS

ESCA elemental scans were made at one independent point on each sample surface; high resolution ESCA were made at select sample sites on PW surfaces.

See 2.2.2.2 Procedure.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.3 ESCA

2.2.3.3 Data

DATA CONSISTS OF ESCA ELEMENTAL SCANS AND HIGH RESOLUTION PROFILES

The ESCA data consists of 18 elemental scans and 3 high resolution profiles to reveal bonding information of elements on PW surfaces.

The data for ESCA presenting the elemental analyses were taken at a particular point on the epoxy surface as opposed to AES, where the data were derived necessarily from a metallic portion of the PW. See Figure 12 for a SEM photomicrograph of an epoxy surface at 7,000x. The calculations of the ESCA data are basically the same as for AES. The data are presented in Table 3. Again, since the data in Table 3 are unwieldy, the arithmetic mean for the data for each set was computed and is presented in Table 4. Table 5 gives the results for the high resolution ESCA.

concentrations. The amount of copper detected by the ICP was actually somewhat less for the uncleaned samples than for those cleaned. This may be because the water rinse after each fabrication stage solubilizes more of the copper which subsequently appears in the extract. Also, the amount of copper falls precipitously in stage 3 whereas the amount of lead rises quite dramatically. At this stage (copper and solder deposited on PW surface electrolytically), apparently, much less of the copper forms ionic species whereas the lead does. No doubt lead ionization also suppresses copper ionization, probably through a common ion (anion) effect. After the etching operation the amount of copper falls considerably, which is to be expected; during and after this stage lead salts constitute the major form of contaminant in the PW extracts. The tin in the extracts naturally starts occurring at stage 3, only in relatively small amounts though (<0.1 ppm). Phosphorus and silicon show up in many of the PW extracts after the etching operation. They may arise as extraneous contamination or they may somehow come from the glass fiber portion of the epoxy laminate. The zinc that is observed during and after stage 4 undoubtedly arises from that used to promote better adhesion between the copper and epoxy substrate during lamination and is thus exposed after the copper has been etched away. Chromium, which was detected by ESCA (but not AES) was not detected by the ICP, possibly because its concentration was too far below the detection limit of the instrument.

The most severe metallic contaminants per the ICP on the PW surface are:

- 1 Copper in stages 1 and 2 especially
- 2 Lead in stages 3 through 6
- 3 Calcium, stage 3 especially
- 4 Phosphorus in stages 5 and 6 especially
- 5 Silicon in stages 5 and 6 especially.

There are several things to be said regarding the ICP emission spectrophotometer used in the experiment. Although this device makes very rapid analyses (it can easily analyze for more than 40 separate elements in a liquid sample and report their concentrations in ppm in less than one minute), it also suffers several drawbacks.

The chief drawback of the ICP is this. Even though values for the elements aluminum, Al; potassium, K; phosphorus, P; palladium, Pd; iron, Fe; and sodium, Na, were detected in the PW extracts, the values obtained \approx detection limit concentration.¹⁷ Hence, the precision of such measurements is poor. It is presumed the accuracy will also be poor. The detection limits on the ICP are:

Table 8

<u>Element</u>	<u>Detection Limit in ppm</u>
Al	0.030
Ca	0.010
Cr	0.006
Cu	0.004
Fe	0.006
K	0.300
Na	0.010
P	0.080
Pb	0.050
Pd	0.080
Si	0.025
Sn	0.050

The detection limit of an element is typically defined as the concentration in solution of that element which can be detected with 95 percent certainty. This is that quantity of the element that gives a reading equal to twice the standard deviation of a series of at least ten determinations at or near blank level. This means that at concentrations near the detection limit an element may be detected with reasonable statistical certainty. However, the precision of determinations at such low concentrations will normally not be satisfactory for normal quantitative purposes.

It is speculated that the aluminum arises from the mechanical cleaning operation since a non-woven abrasive aluminum oxide brush was used both for deburring the PW panels and for mechanical scrubbing. The amount of aluminum seems relatively independent of whether the board was cleaned or not. The calcium and sodium probably arise from the undemineralized water used to wash PWBs during processing. Note the steadily increasing rise in calcium concentrations, especially on the two PWBs from set #6. After the etching operation (stage #4), the amount of calcium drops considerably. Note some of the test boards have sodium, always in small concentrations, and some do not. Note also the copper

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.1 ICP-ES

2.3.1.4 Discussion of Results

WITHIN BOUNDS ICP USEFUL IN PROFILING CONTAMINANTS IN PW EXTRACTS

The results demonstrate that in general the ICP can profile contaminants in PW extracts, but for some elements its detection limits may be too high.

The results obtained using the ICP are indeed startling. Perusing especially Table 7, it can readily be seen that the number of micrograms of positive ions/cm² of PW surface ($\mu\text{g}/\text{cm}^2$) is quite high even during the initial two first stages (1 drill, deburr, chemical and mechanical clean; 2 electroless plate). It is quite apparent this is due to copper salts (generally only moderately soluble) which went into solution. During stage 3 (apply resist, develop image, electrolytic plate with copper and solder, strip resist), the number of $\mu\text{g}/\text{cm}^2$ rises due now to both lead and copper salts going into solution. Note that lead salts now account for much of the corresponding $\mu\text{g}/\text{cm}^2$ figure. Also note that tin salts play very little part.

Proceeding to stage 4 (etch image), the removal of the copper off the surface by the etchant is seen to cause the number of $\mu\text{g}/\text{cm}^2$ to drop drastically. Proceeding to the next two stages (solder reflow and routing; stuff components and flux/solder), there is a definite increase in the number of $\mu\text{g}/\text{cm}^2$ so that the total amount of contaminants at stage 6 for the cleaned PWAs (set #11) is practically the same as for the uncleaned PWBs of set #1. Again, note that lead salts account for a great percentage of the positive ion contamination in set #11 (this is the cleaned set after flux/solder - presumably "clean" and ready for conformal coating). It is obvious that the uncleaned rosin flux left on the PWAs in set #12 prevented a fair amount of the contaminants from entering the extract solution (demineralized water).

From perusing Tables 6 and 7, it is seen that the only elements present for certain in the PW solvent extracts are: calcium, Ca; copper, Cu; lead, Pb; silicon, Si; tin, Sn; and zinc, Zn. It is also highly likely that aluminum, Al; potassium, K; phosphorus, P; palladium, Pd; iron, Fe; and sodium, Na, are to be found. The only elements to occur in the extracts in quantities >0.1 ppm are: calcium, Ca, in Set #6; copper, Cu, in Sets #1-#5, Set #8 and Set #10 (sample 2); and lead, Pb, in Sets #5-#12.

Table 6

Results from ICP in ppm (parts-per million)^a

Element Analyzed	Stage 1		Stage 2		Stage 3		Stage 4		Stage 5		Stage 6	
	Set #1	Set #2	Set #3	Set #4	Set #5	Set #6	Set #7	Set #8	Set #9	Set #10	Set #11	Set #12
	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned
Al	-	0.017	0.002	0.015	0.014	0.025	0.019	0.024	0.035	0.038	0.013	0.007
Ca	0.007	0.006	0.023	0.022	0.006	0.009	0.004	0.004	0.006	0.006	0.018	0.033
Cr	-	-	-	-	-	-	-	-	-	-	-	-
Cu	2.318	1.740	1.678	1.438	2.186	2.794	1.929	1.534	0.942	0.147	0.077	0.012
Fe	-	-	-	-	-	-	-	-	-	-	-	-
K	-	-	-	-	-	-	-	-	-	-	-	-
Mg	-	-	-	-	-	-	-	-	-	-	-	-
Mn	0.001	-	0.004	0.002	0.001	0.002	0.003	0.004	0.006	0.003	0.004	0.004
P	-	0.003	-	-	-	-	-	-	-	-	-	-
Pb	-	-	-	-	-	-	-	-	-	-	-	-
Sr	-	-	-	-	-	-	-	-	-	-	-	-
Si	-	0.015	0.004	-	-	-	-	-	-	-	-	-
Sn	-	-	-	-	-	-	-	-	-	-	-	-
Zn	-	-	-	-	-	-	-	-	-	-	-	-
Hg	-	-	-	-	-	-	-	-	-	-	-	-

^aTwo samples were used from each set. The second sample for Set #7 was destroyed in transit, hence, no results under that column. Values are in ppm after the average blank values have been subtracted out. A - = not detectable. The ICP has a given sensitivity for each individual element. The figures reported above take this into account and only significant values are included.

Table 7

Results from ICP in $\mu\text{g}/\text{cm}^2$ (micrograms-per-square-centimeter)^a

Element Analyzed	Stage 1		Stage 2		Stage 3		Stage 4		Stage 5		Stage 6	
	Set #1	Set #2	Set #3	Set #4	Set #5	Set #6	Set #7	Set #8	Set #9	Set #10	Set #11	Set #12
	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned	Cleaned	Not Cleaned
Al	-	8	1	7	12	17	19	3	9	6	3	1
Ca	3	11	3	4	27	23	30	36	138	121	14	18
Cr	-	-	-	-	-	-	-	-	-	-	-	-
Cu	1159	870	839	719	1093	1167	965	762	471	73	13	6
Fe	-	-	-	-	-	-	-	-	-	-	-	-
K	-	-	-	-	-	-	-	-	-	-	-	-
Mg	1	2	1	1	1	4	4	1	1	2	7	7
P	-	-	-	-	-	-	-	-	-	-	-	-
Pb	-	-	-	-	-	-	-	-	-	-	-	-
Pd	-	-	-	-	-	-	-	-	-	-	-	-
Si	-	-	-	-	-	-	-	-	-	-	-	-
Sn	-	-	-	-	-	-	-	-	-	-	-	-
Sr	-	-	-	-	-	-	-	-	-	-	-	-
Zn	-	-	-	-	-	-	-	-	-	-	-	-
Hg	-	-	-	-	-	-	-	-	-	-	-	-
$\sum \mu\text{g}/\text{cm}^2$	1163	880	893	731	1104	1159	1001	799	1450	1086	1539	1368
	9.46	7.15	7.26	5.94	8.98	9.42	8.14	6.50	11.79	8.83	12.51	11.12
									192	501	519	707
									4.07	4.72	5.75	5.86
									823	720	1018	1051
									6.69	5.85	8.25	8.25
									539	559	4.38	4.54

^aThe area of the test printed wiring used = 123 cm^2 .

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.2.1 ICP-ES

2.3.1.3 Data

DATA FROM ICP REPORTED IN PARTS-PER-MILLION FOR DIFFERENT CONTAMINANT SPECIES

The data from the ICP consists of concentrations of the different contaminant elements reported in ppm; these values were converted to $\mu\text{g}/\text{cm}^2$ of PW surface.

Table 6 contains the data for PW extracts run on the ICP. The results are given in parts-per-million (ppm).¹⁵ Since 500 ml of each sample was used in the experiment, it is easy to convert the values given in ppm (Table 6) into so many micrograms (μg)/ cm^2 of PW area for each element. Summing these values for any given sample yields the total number of $\mu\text{g}/\text{cm}^2$ for any given sample. See Table 7. The significance for reporting the results in $\mu\text{g}/\text{cm}^2$ stems from a recently published paper stating that $1.0 \mu\text{g}/\text{cm}^2$ of sodium chloride or its equivalent represents the threshold concentration of ionic material beyond which functional degradation of PW takes place.¹⁶

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.2.1 ICP-ES

2.3.1.2 Procedure

PW EXTRACTS FROM TWO SAMPLES PER SET ANALYZED BY ICAP-ES

The ICP was used to profile twelve different elements in PW extracts during the first three stages and fifteen elements the last three stages.

Two samples per set were used in the experiment. The extracts were prepared by allowing the test PW to remain in pure demineralized water for six days in 500 ml polypropylene mason jars. After six days the PW were then carefully removed from the jars and the extracts therein were analyzed on the ICAP.

This device was used to profile PW extracts in pure demineralized water prepared from PW test boards. The extracts for the first three stages were analyzed for the following twelve elements: aluminum, Al; calcium, Ca; chromium, Cr; copper, Cu; iron, Fe; lead, Pb; palladium, Pd; phosphorus, P; potassium K; silicon, Si; sodium, Na; and tin, Sn. Many, if not all, of these particular elements were expected to occur on PW surfaces after each successive stage during the manufacturing process. The elements barium, Ba; zinc, Zn; and magnesium, Mg, were also run for the last three stages.

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.1 ICP-ES

2.3.1.1 Discussion of Method

INDUCTIVELY-COUPLED PLASMA (ICP-ES) ANALYZES LIGHT EMITTED BY CONTAMINANT ELEMENTS

The ICP is a system utilizing a plasma generated torch and nebulizer system to analyze emitted light for contaminant elements.

Because of the drawbacks suggested above regarding direct surface analysis techniques for profiling contaminants on the surface of PW, another method strongly recommends itself. This method can be called solvent extraction/contaminant profiling because it first necessitates making a solvent extraction of the PW followed by analyzing the solvent extract for various contaminants. Not only should the presence of a particular contaminant be detected (qualitative analysis) but the amount of the particular contaminant in question should be quantified (quantitative analysis).

Inductively-Coupled Plasma Emission Spectrophotometry (ICP-ES) makes use of an inductively-coupled argon plasma flame and nebulizer system to atomize a liquid sample and thermally excite the atoms in the sample. Thus excited, the different atomic species emit light at determined frequencies. A precisely aligned optical system collimates and directs the emitted light through an entrance slit onto a concave grating surface. The grating diffracts the different wavelengths of light to a series of exit slits precisely positioned along the spectrometer's focal curve. Photomultiplier tubes behind these exit slits convert the emitted light into electrical energy proportional to the intensity of the spectral lines. A computer converts the signals into desired concentration units (generally parts-per-million).

The chief problem of any of the above methods as applied to the analysis of PW is this. Surface analysis techniques by their very nature can be applied only to an exceedingly small area of the total PW surface area. Data from several (>3) areas would undoubtedly have to be gathered and, even then, there might exist some question as to whether these data were truly representative of the surface as a whole. Further, the necessary equipment is quite expensive (approximately \$300K-500K) and requires a highly skilled operator to perform the analyses. In addition, the results from the direct surface analysis techniques are expressed in atomic percent concentrations which cannot be converted into μg of contaminant/cm² of PW surface.

Surface analysis techniques do have limitations associated with their application to ascertaining production cleanliness of PW. Their use may provide relevant information in solving some of the problems associated with PW contamination.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.4 GENERAL DISCUSSION

SURFACE ANALYSIS TECHNIQUES CAN BE USED TO PROFILE CONTAMINANTS ON PW BUT ARE VERY EXPENSIVE

Surface analysis techniques can be applied only to exceedingly small areas of total PW surface area.

The surface analysis techniques outlined above, viz., SEM/EDX, AES, ESCA (survey and high resolution) can be used to profile contaminants left on PW. Something positive can be said of each method.

With SEM/EDX photomicrographs of the surface can be made along with a general analysis of the chief elements down to about 10,000-50,000 Å. On occasion the SEM may reveal an anomalous surface morphology and EDX may reveal gross abnormalities in composition. To cite two examples, the SEM was used to detect crystalline-like deposits on the solder surface, on PWAs of set #11. The concurrent use of elemental distribution maps indicates the material is most probably organic in nature. It is speculated that it is flux which did not come off by the conventional cleaning techniques. Further, the use of EDX revealed a case where the amount of tin in a tin/lead trace was grossly deficient.

It is often not clear, however, whether a given morphology is anomalous or not. This is the chief problem with SEM. In the case of EDX, it is not a true surface analysis technique since it "sees" far into the material.

With AES only elemental analysis is possible. However, AES is a true surface method since the analysis extends only 20-30 Å into the material. AES also suffers from the limitation that it cannot be used on polymeric surfaces because it is too destructive of these surfaces.

ESCA is more versatile than AES. ESCA can be applied to both metallic and nonmetallic surfaces. It is a true surface method since the analysis likewise extends only 20-30 Å into the material. Further ESCA data (photoelectron spectra) lend themselves more readily to yielding different chemical states of the elements, thus suggesting molecular groupings. Of the three methods outlined above, it is the most powerful in terms of the amount of useful surface information it affords.

Both AES and ESCA can be used in conjunction with sputtering of the surface. AES may be performed simultaneously with the sputtering whereas the sputtering must precede ESCA analysis. However, there is one caution. Sputtering often changes the valence states of the atoms at or near the area being sputtered. Thus, identification of the remaining chemical states may not accurately reflect the initial composition.

On the spot from a board from set #6 (6A Solder/Cu) HR-ESCA again revealed adsorbed material some of which is undoubtedly hydrocarbon in nature, a Sn (tin) oxide, metallic and/or ionic copper, Cu^0 or Cu^+ , and lead chloride-organic (organo-metallic).

On the spot from the board from set #8 made on the epoxy (8A Epoxy) HR-ESCA revealed again adsorbed material some of which is organic in nature, some evidence of a metal oxide of some kind, and again a lead chloride-organic (organo-metallic). On the spot made at the solder/epoxy interface (8A Solder/Epoxy) HR-ESCA revealed, in addition, traces of metallic and ionic copper, Cu^0 and Cu^{2+} , Sn oxide, and evidence of a tin chloride-organic (organo-metallic).

From the board from set #10 made on the epoxy (10A Epoxy) HR-ESCA revealed adsorbed material, a metal oxide of some kind and elemental tin, Sn^0 . From the spot made at the solder/epoxy interface (10A Solder/Epoxy) HR-ESCA showed in addition Sn oxide and a tin chloride-organic (organo-metallic).

Finally, from the board from set #11 made on the epoxy (11A Epoxy) HR-ESCA exhibited adsorbed organic material, Sn oxide, Pb oxide, lead chloride-organic and evidence of a organic chloride (probably 1,1,1-trichloroethane). On the spot made at the solder/epoxy interface (11A Solder/Epoxy) basically the same was found as at 11A Epoxy.

The boards from set #11 represent those that were flux/soldered and cleaned using conventional PW cleaning techniques. Presumably they were "clean" and were now ready for conformal coating. However, evidence from HR-ESCA indicates that such PWAs still have a wide variety of compounds and materials on the PW surface, albeit in relatively small amounts. The presence of these compounds may not be sufficient to degrade the electrical, mechanical, or chemical properties of the PW in the present state-of-the-art. However, their presence and formation should be noted.

2.2 DIRECT SURFACE ANALYSIS TECHNIQUES

2.2.3 ESCA

2.2.3.4 Discussion of Results

ESCA, A TRUE SURFACE ANALYSIS TECHNIQUE, IS USEFUL IN DETECTING ELEMENTS ON PW AND REVEALING BONDING INFORMATION

ESCA is a true surface analysis technique since ESCA photoelectrons are only detectable from the first 20-30 Å of a surface; it is a useful technique for detecting elements on the surface of PW and revealing bonding information.

Keeping in mind that the elemental analyses for the ESCA were made only on the epoxy surface (thus only sets #7-#12 were involved), it is evident some elements show up here that did not with AES. Here the amount of C (carbon) and O (oxygen) is even higher (approx. 82%) since the analysis takes place directly on the epoxy surface. The analyses were made at a fair distance from the Sn/Pb pads and conductor traces. Note that a fair amount of Sn and Pb occurs even on the bare epoxy. Cr (chromium) occurs on all samples except samples from set #12 where the flux was purposely left on the PW. The Cr undoubtedly appears on sets #7-#11 because at this point the copper has been etched away, revealing Cr. Chromium oxide was used by the laminator as a passivating agent in treating copper. In similar fashion Zn (zinc) arises after the copper has been etched away. The Zn is used to treat the copper surface to which the epoxy will be bonded to improve adhesion. Br (bromine) also appears after the copper has been etched away. The Br is incorporated into the epoxy structure and acts as a fire retardant. Cl (chlorine) appears, either as ionic or possibly from adsorbed chlorocarbon compounds, such as 1,1,1-trichloroethane. Note that on some of the sets Cu (copper), Ba (barium - why this appears is not yet certain), P (phosphorus - possibly from exposed glass), Si (silicon - same source as P) and S (sulfur - probably adsorbed) also appear.

High Resolution (HR) ESCA was performed on eight samples. A representative sample from the first four sets was chosen (4A). This board still had its Cu surface. Another was chosen from set #6 (6A) which had copper and solder traces. The HR-ESCA was performed at a solder/Cu interface. Two different spots on a board from set #8 were chosen (8A Epoxy and 8A Solder/Epoxy), two different spots from a board from set #10 (10A Epoxy and 10A Solder/Epoxy), and two different spots from a board from set #11 (11A Epoxy and 11A Solder/Epoxy).

On the spot from the board from set #4 (4A) HR-ESCA revealed adsorbed material some of which is undoubtedly hydrocarbon, metal oxide (undoubtedly a form of copper oxide) and evidence of Cu^+ . Perhaps the copper oxide is Cu_2O .

Table 5

Summary of High Resolution ESCA Results

<u>Sample</u>	<u>Corrected Element Binding Energy (eV)</u>	<u>Possible Identification</u>
4A	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 531.5	Metal oxide or organic
	Cl _{2p} _{3/2} 199.3	Metal or organic chloride
	Cu _{2p} _{3/2} 932.7	Cu ⁰ or Cu ⁺
	Cu Auger 337.0	Cu ⁺
6A Solder/Cu	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 531.6	Metal oxide or organic
	Sn _{3d} _{5/2} 486.7	Sn oxide
	Pb _{4f} _{7/2} 138.7	Pb-Cl organic
	Cu _{2p} _{3/2} 932.3	Cu ⁰ or Cu ⁺
8A Epoxy	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 525.6	?
	528.5	?
	530.7	Adsorbed or metal oxide
	Pb _{4f} _{7/2} 139.7	Pb-Cl organic
8A Solder/Epoxy	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	286.4	Methyl organic
	Cu _{2p} _{3/2} 930.6	Cu ⁰ ?
	933.2	Cu ²⁺
	Pb _{4f} _{7/2} 140.9	Pb-Cl organic
10A Epoxy	Sn _{3d} _{5/2} 487.7	Sn oxide/Sn-Cl organic
	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 528.1	?
	530.4	Adsorbed or metal oxide
	Sn _{3d} _{5/2} 484.7	Sn ⁰
10A Solder/Epoxy	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 532.0	Adsorbed or organic
	533.7	Adsorbed or organic
	Sn _{3d} _{5/2} 486.5	Sn oxide
	487.0	Sn oxide/Sn-Cl organic
11A Epoxy	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 528.2	?
	530.5	Adsorbed or metal oxide
	Sn _{3d} _{5/2} 486.2	Sn oxide
	Pb _{4f} _{7/2} 138.5	Pb oxide/Pb-Cl organic
11A Solder/Epoxy	Cl _{2p} _{3/2} 198.2	Metal or organic chloride
	Cl _{1s} 284.6	Adsorbed/hydrocarbon
	O _{1s} 530.9	Adsorbed or metal oxide
	531.7	Metal oxide or organic
	Sn _{3d} _{5/2} 486.7	Sn oxide
	Pb _{4f} _{7/2} 138.4	Pb oxide/Pb-Cl organic
	138.8	Pb-Cl organic

Table 4

<u>Sample</u>	<u>Cu</u>	<u>Ba</u>	<u>Cr</u>	<u>O</u>	<u>Sn</u>	<u>C</u>	<u>Zn</u>	<u>Cl</u>	<u>Br</u>	<u>S</u>	<u>Pb</u>	<u>P</u>	<u>Si</u>
7	--	--	3.7	29.8	4.4	58.0	0.2	1.4	1.2	--	0.7	0.5	--
8	2.5	--	5.2	34.6	4.1	46.1	0.2	1.7	0.5	1.1	0.3	0.7	--
9	--	0.6	2.9	30.5	12.2	49.3	0.0	1.7	0.8	--	2.0	--	--
10	--	--	2.0	24.4	4.2	67.9	0.1	0.4	1.0	--	0.2	--	--
11	--	--	1.5	19.3	15.3	60.6	--	1.3	0.3	--	1.6	--	--
12	--	--	--	1.7	--	97.7	0.1	--	--	--	--	--	0.5

Table 3

Estimated Atomic Compositions (%) From ESCA Data

<u>Set</u>	<u>Sample</u>	<u>Cu</u>	<u>Ba</u>	<u>Cr</u>	<u>O</u>	<u>Sn</u>	<u>C</u>	<u>Zn</u>	<u>Cl</u>	<u>Br</u>	<u>S</u>	<u>Pb</u>	<u>P</u>	<u>Si</u>
#7	7A	-	-	3.0	27.9	3.6	61.8	0.2	1.2	1.3	-	1.0	-	-
	7B	-	-	3.5	27.8	4.8	59.7	0.2	1.0	1.3	-	0.2	1.5	-
	7C	-	-	4.7	33.8	4.7	52.6	0.2	2.1	0.9	-	1.0	-	-
#8	8A	2.6	-	3.8	35.2	3.7	50.2	0.2	1.6	0.5	1.1	0.3	0.8	-
	8B	1.4	-	6.4	39.8	4.4	43.3	0.3	1.4	0.4	0.9	0.3	1.4	-
	8C	3.6	-	5.3	37.9	4.1	44.9	0.2	2.0	0.5	1.2	0.3	-	-
#9	9A	-	0.6	4.0	34.0	4.6	52.8	0.1	1.8	0.7	-	1.4	-	-
	9B	-	0.7	2.8	27.2	13.9	51.0	-	1.5	0.9	-	2.0	-	-
	9C	-	0.6	1.9	30.2	18.0	44.1	-	1.8	0.8	-	2.6	-	-
#10	10A	-	-	2.5	24.6	6.8	63.7	0.1	1.1	0.9	-	0.3	-	-
	10B	-	-	1.9	24.5	3.5	68.8	0.1	-	1.1	-	0.1	-	-
	10C	-	-	1.7	23.9	2.2	71.0	0.1	-	1.0	-	0.1	-	-
#11	11A	-	-	1.6	21.2	12.3	61.0	-	1.4	0.4	-	2.1	-	-
	11B	-	-	1.4	16.6	22.6	57.8	-	0.9	-	-	0.7	-	-
	11C	-	-	1.6	20.2	10.9	63.0	-	1.6	0.6	-	2.1	-	-
#12	12A	-	-	-	2.5	-	96.4	0.1	-	-	-	-	-	1.0
	12B	-	-	-	1.4	-	98.0	-	-	-	-	-	-	0.6
	12C	-	-	-	1.3	-	98.6	0.1	-	-	-	-	-	-

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.2 IC

2.3.2.1 Discussion of Method



ION CHROMATOGRAPHY (IC) ANALYZE IONS IN SOLUTION

The IC uses a system involving ion exchange separation followed by eluent suppression and conductivity detection to analyze for ions in solution.


Although an ICP or equivalent spectrophotometer is useful for analyzing the positive ionic species in PW extracts, another method must be employed to profile the negative ionic species in such extracts. It is suggested that an ion chromatograph be used for making such an analysis.

An IC analyses ions in solution. It accomplishes this by an ion exchange separation followed by eluent suppression and conductivity detection. For an ion analysis, the eluent (usually 0.003M NaHCO₃/0.0024M Na₂CO₃) and separator column (containing an anion resin in the HCO₃⁻/CO₃²⁻ form) cause the sample ions to split into distinct bands. The retention time of each anion is governed by the affinity of that ion, the eluent used, the length of column, and the eluent flow rate. Figure 13 shows the relationship between affinity and relative retention time for both anions and cations.

The effluent from the separator column is then fed to the suppressor column. Two reactions occur in the suppressor. First, the resin (a strong acid resin in hydrogen form) removes Na⁺ and protonates the HCO₃⁻/CO₃²⁻ to H₂CO₃, viz.,



Second, all the sample anions exit from the suppressor as an acid since the sample cations are exchanged for H⁺ in the suppressor.



The analysis of cations utilizes the same physical design. However, the separator column contains a cation resin and the suppressor column contains an anion resin in hydroxide form. In this case, the acidic element is neutralized by the suppressor resin and the cations are detected as hydroxides.

Using the 0.3 μ MHO full scale sensitivity of the ion chromatograph and a 250 μ l sample loop, the minimum detection limits (MDL)¹⁹ for several ions of interest are as follows:

<u>Ion</u>	<u>MDL</u>
Na^+ , NH_4^+ , K^+	5-20 pb
Mg^{2+} , Ca^{2+}	
F^- , Cl^-	5-10 ppb
PO_4^{3-} , NO_3^- , SO_4^{2-}	20-30 ppb.

For normal samples, these MDLs are more than sufficient. However, for certain applications it is necessary to analyze at 1 ppb or less; the use of concentrator columns is necessary to achieve this.

A concentrator column is a short (3 x 50 mm) column that replaces the sample loop. When a large amount of sample water is passed across an anion concentrator column, the anions are stripped out and held on the concentrator column. Then when the loaded column is switched into the eluent stream, the ions are eluted from the concentrator column and separated as usual by the separator column. If the initial loading onto the concentrator were 25 ml, the concentration factor would be 100 when compared to the 250 μ l sample loop. Hence, the MDLs can be lowered by a factor of 100, and analysis at less than 1 ppb can be done routinely.

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.2 IC

2.3.2.2 Procedure

PW EXTRACTS FROM TWO SAMPLES PER SET ANALYZED BY IC

The IC was used to profile nine different ionic species in PW extracts.

Two samples per set were used in the experiment. The extracts were prepared by allowing the test PW to remain in 75% demineralized water/25% Reagent Grade isopropyl alcohol for six days in 500 ml polypropylene mason jars. After six days the PW were then carefully removed from the jars and the extracts therein were analyzed on the IC. The extracts were analyzed for the following cations: sodium, Na^+ ; ammonium, NH_4^+ ; potassium, K^+ ; calcium, Ca^{2+} ; and magnesium, Mg^{2+} . The same samples were also analyzed for the following anions: chloride, Cl^- ; phosphate, PO_4^{3-} ; nitrate, NO_3^- ; and sulfate, SO_4^{2-} .

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.2 IC

2.3.2.3 Data

DATA FROM IC REPORTED IN PARTS-PER-MILLION⁰ FOR DIFFERENT CONTAMINANT SPECIES

The data from the IC consists of concentrations of different contaminating ionic species reported in ppm; these values were converted to $\mu\text{g}/\text{cm}^2$ of PW surface.

Table 9 contains the data for PW extracts run on the IC. The results are given in parts-per-million (ppm). Again, the values given were converted into so many micrograms (μg)/ cm^2 of PW area for each element. Summing these values for any given sample yields the total number of $\mu\text{g}/\text{cm}^2$ for any given sample. See Table 10.

Results from IC in ppm (part-per-million)*

*Two samples were used from each set. However, many of the samples were partially or totally destroyed in transit. All blank spaces under a particular column indicate the sample was destroyed. Values are in ppm after the average blank values have been subtracted out. A- = not detectable.

Table 10

Results from IC in $\mu\text{g}/\text{cm}^2$ (micrograms-per-square-centimeter)**[illegible]

**The area of the test printed wiring used = 123 cm².

2.3 SOLVENT EXTRACTION/ANALYSIS TECHNIQUES

2.3.2 IC

2.3.2.4 Discussion of Results

THE IC USEFUL FOR PROFILING IONIC CONTAMINANTS IN PW EXTRACTS

The results show that the IC can profile ionic contaminants in PW extracts but more work needs to be done to better define the process.

In terms of $\mu\text{g}/\text{cm}^2$ of ionic material as determined by the IC, the results are much lower. Note, however, that no heavy metal ion concentrations such as copper, lead, tin, or zinc could be made using the IC. The results for sodium and potassium differ considerably from those obtained on the ICAP. This is probably because of the rather high detection limits for those two elements on the ICAP. Except for those in stage 3, the calcium values are in reasonably good agreement. The chloride values show a marked steadily rising increase from stage 1 through stage 6. Except for a few exceptions, phosphate and sulfate do not constitute serious contaminants. Nitrate as a contaminant is practically nonexistent. It might be pointed out there were several unidentified peaks in the chromatograms. It is suspected one of the peaks belongs to fluoride (F^-) but further investigation is needed to confirm this. Also, no attempt was made to check for organic anions, some of which might have been present.

2.4 SURFACE ANALYSIS TECHNIQUES SOMETIMES USEFUL BUT SOLVENT EXTRACTION/CONTAMINANT PROFILING ANALYSIS OF PW EXTRACTS MORE PROMISING

A general discussion of the merits of surface analysis techniques versus solvent extraction/analysis techniques.

At this point we shall summarize the key points regarding direct surface analysis techniques versus solvent extraction/analysis techniques.

Surface analysis techniques can be applied only to exceedingly small areas of the total PW surface area. These techniques, viz., SEM/EDS, AES, and ESCA (survey and high resolution) can be used to profile contaminants left on PW. Something positive can be said of each method.

With SEM/EDS photomicrographs of the surface can be made along with a general analysis of the chief elements down into the surface to about 10,000-50,000 Å ($\approx 10^{-4}\text{cm}$). On occasion the SEM may reveal an anomalous surface morphology and EDS may reveal gross abnormalities in composition. To cite two examples, the SEM was used to detect crystalline-like deposits on the solder surfaces on some of the PWAs of set #11. It is highly probable that the material was organic in nature.

It is speculated that it was flux which did not come off by the conventional cleaning techniques. The use of EDS revealed a case where the amount of tin in a tin/lead trace was grossly deficient.

It was often not clear, however, whether a given morphology was anomalous or not. This is the chief problem with employing SEM. In the case of EDS, it is not really a true surface analysis technique since it "sees" far into the material.

With AES only elemental analysis is possible. However, AES is a true surface analysis method since the analysis extends only 20-30 Å into the material. AES also suffers from the limitation that it cannot be used on polymeric surfaces because its electron beam is too destructive of these surfaces.

ESCA is more versatile than AES. ESCA can be applied to both metallic and nonmetallic surfaces. It too is a true surface method since the analysis likewise extends only 20-30 Å into the material. Further, ESCA data (photoelectron spectra) lend themselves more readily to yielding different chemical states of the elements, thus suggesting molecular groupings and arrangements. Of the three direct surface analysis techniques, it is the most powerful in terms of the amount of useful surface information it affords.

Both AES and ESCA can be used in conjunction with sputtering of the surface. AES may be performed simultaneously with the sputtering whereas the sputtering must of necessity precede ESCA analysis. However, there is one caution. Sputtering often changes the valence states of the surface atoms at or near the area being sputtered. Thus, identification of the surface chemical states may not accurately reflect the initial composition.

The chief problem of all of the direct surface analysis methods as applied to profiling contaminants on the surface of PW is this. Surface analysis techniques by their very nature can be applied only to an exceedingly small area of the total PW surface area. Data from several (>3) areas would undoubtedly have to be gathered and, even then, there might exist some question as to whether these data were truly representative of the surface as a whole. The problem is compounded by the lack at the present time of adequate ways of standardizing the instruments. In addition, the results from the direct surface analysis techniques are expressed in atomic percent concentrations which cannot be converted into μg of contaminant/ cm^2 of PW surface.

The conclusion is that direct surface analysis techniques do have definite limitations associated with their application for determining production cleanliness of PW. However, their use can provide relevant and useful information, and they will sometimes prove beneficial in solving problems of PW contamination. In point of fact, it is estimated that approximately 5% of all PW contamination problems will require direct surface analysis techniques for successfully resolving the problem.

The data generated from the experiment on production PW also indicate that the solvent extraction/analysis techniques will also function adequately as contaminant profiling devices for determining production cleanliness of PW. In particular, they do not suffer from the chief drawback of the direct surface analysis techniques, for the solvent extraction is made over the entire surface. The only problem with their application is to establish the proper extraction time to ensure that the contaminants have been rinsed into the extract and no longer remain on the PW surface. The results, normally reported in ppm (parts-per-million), can easily be converted into micrograms of contaminant/cm² of PW surface ($\mu\text{g}/\text{cm}^2$) provided the volume of extract is measured. It is estimated that approximately 95% of all PW contamination problems will be amenable by solvent extraction/analysis techniques.

2.5 THE COSTS

A cost analysis of the different methods of detecting surface contaminants on PW can be performed.

The conclusion drawn from the PW experiment data is that both direct surface analysis techniques and solvent/extraction/analysis techniques can be used successfully to profile contaminants on the surface of PW. It is estimated that the solvent extraction/analysis techniques are somewhat superior because they have less problems attendant to their use. However, it is appropriate now to turn to the costs.

We first construct an effectiveness versus cost scale, which is presented in Figure 14. Bear in mind that

Alternative 1 = extract resistivity testing (ERT)

Alternative 2 = laser beam scanning

Alternative 3 = direct surface analysis techniques (SEM, AES, ESCA)

Alternative 4 = solvent extraction/analysis techniques (ICP-ES, IC).

Since alternative 2 is not viable, it does not appear in Figure 14.

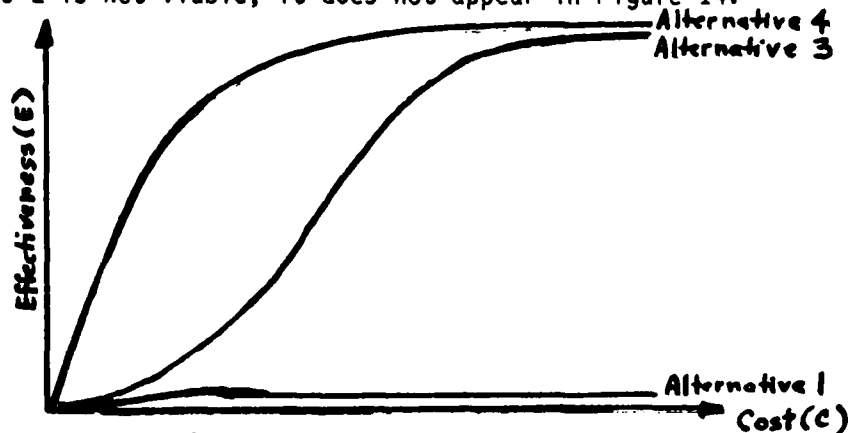


Figure 14. Effectiveness vs. cost for the three alternatives.

Using the terminology of capital budgeting, we are here dealing with mutually exclusive alternatives. That is, each alternative under consideration represents an alternative method for meeting the same objective. Once one alternative is chosen to do the job, the others will be dropped from consideration. Applying discounted cash flow techniques to the above two alternatives holding the highest promise, viz., direct surface analysis techniques and solvent extraction/analysis techniques, we obtain the following table below. The net present worth (NPW) technique is employed to compare the two alternatives.²⁰

Table 11

Net Present Worth for Two Mutually Exclusive Projects

	Direct Surface Analysis Techniques	Solvent Extraction/ Analysis Techniques
First Cost:	\$328K	\$174K
Life:	10 yr	10 yr
Salvage value	25K	10K
Annual operating disbursements	29K	22K
Minimum return in investment = 14%		
First Cost:	\$328K	\$174K
First replacement = (328-25) (P/F, 14%, 10):	82K	
= (174-10) (P/F, 14%, 10):		45K
Operating disbursements = 29 (P/A, 14%, 10):	152K	
= 22 (P/A, 14%, 10):		115K
Less salvage value @ 10 = 25 (P/F, 14%, 10):	-7K	
= 10 (P/F, 14% 10):		-3K
Net present worth cost	\$555K	\$331K

The cost analysis of the two competing projects leads us to choose alternative 4, solvent extraction/analysis techniques (ICP-ES and IC).

2.6 THE BENEFITS

The benefits for selecting the solvent extraction/analysis techniques are widespread for PW manufacturing.

The most desirable method to pursue detecting contaminants on the surface of PW is seen from the above discussion to be solvent extraction/analysis techniques. It is suggested that such a system be put together where the analytical instrumentation is directly combined with a minicomputer. This system will be called a contaminant profiling (C/P) system. It will provide a higher degree of confidence in PW cleaning and manufacturing processes.

On-line monitoring of the types and levels of various contaminants, especially the ionic contaminants, by means of a contaminant profiling system under the direct control of a minicomputer will result in the rapid detection of processes, manufacturing and/or cleaning, out of control. It will also lead to improved field performance and higher PW reliability. Such a system can be designed to function with a GO/NO GO test procedure affording early detection of a failure situation. Thus, the manufacturing process in question can be halted before a great number of faulty PW are produced.

Such a system will give a high degree of statistical confidence to the manufacturing and cleaning processes used. The sensitivity of the contaminant profiling system based on solvent extraction/analysis instrumentation will be such that detection of submicrogram ($<10^{-6}$ g) quantities of various contaminant species in an extract solution will be feasible. This resolving power far exceeds that obtainable by present methods. Such an integrated system is not only applicable now, but will be even more pertinent in the future when conductor line widths/spacings are expected to be <0.002 in.

The use of a minicomputer to integrate the system will result in automatic calibration, system process control, fault diagnosis, and analysis and computation of the resulting data. Thus, the contaminant profiling (CP) system will fit easily within an on-line PW manufacturing production line where it will provide efficient monitoring of the production and cleanliness processes. The establishment of this system will substantially reduce failures of PWAs due to contaminants remaining on their surfaces.

2.7 THE CRITERION

The cost/benefits analysis for the two competing projects was made.

In the case of ascertaining the production cleanliness of PW, it is clear that Alternative 4 (solvent/extraction/analysis techniques) dominates the others at all levels of investment and effectiveness. Based on this outcome of benefits and effectiveness versus costs, Alternative 4 is the preferred method for realizing the objective.

2.8 THE SOLUTION

Build a contaminant profiling (C/P) system to detect and quantify contaminants on the surface of PW.

Design, assemble, and integrate a system having the capability of yielding a detailed profile of all ionic contaminant species. Very little fabrication of parts is expected since all parts, or components, needed for the system already exist as separate entities with the exception of the extraction tank/pumping component. The contaminant profiling (C/P) system will consist of:

- 1 Inductively-coupled plasma spectrophotometer/graphite furnace
- 2 Ion chromatograph
- 3 Minicomputer and computing integrator unit
- 4 Extraction tank/pumping unit
- 5 Water purification unit.

The inductively-coupled plasma (ICP)/graphite furnace unit will be used to detect and quantify the levels of metallic and quasi-metallic elements, such as copper, tin, lead, chromium, phosphorus, silicon, etc., which are routinely expected to be found in extracts made from production PW. The ion chromatograph will be employed to detect and quantify anionic species such as chloride, fluoride, sulfate, and small organic acid anions appearing in many fluxes, both rosin-based and water-based. The extraction tank/pumping unit will be used to contain the PW during the extraction phase of the test cycle. The water purification unit will ensure the highest purity water for preparing the PW extracts. The computing integrator unit will be employed in conjunction with the ion chromatograph. It will automatically compute and integrate the areas under the curve which is the case for chromatographic data. Finally, the minicomputer will be used for C/P system control, data handling and analysis, and total system integration. Data and programs can be displayed on the CRT. Data handling and analysis will include statistical treatment of all data generated to ensure the secure foundation of a data base for PW production cleanliness criteria. A schematic of the C/P system is presented in Figure 15.

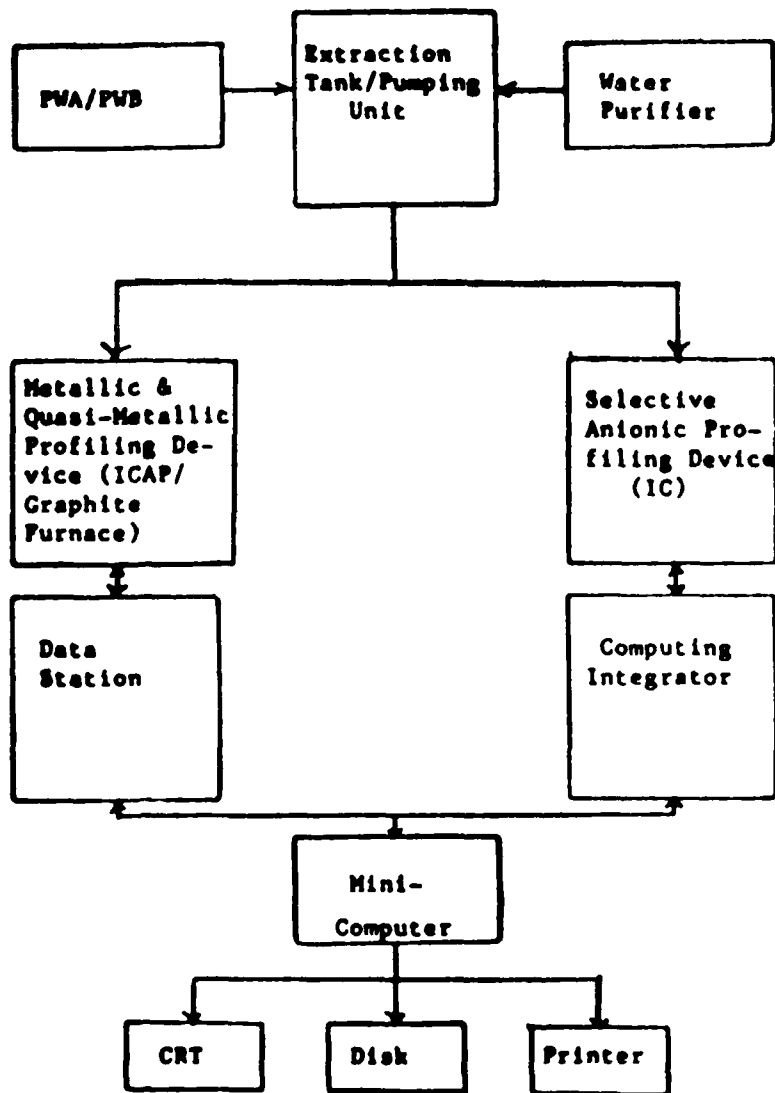


FIGURE 15. Schematic Diagram of The Mini Computer-Controlled Contaminant Profiling System

This concludes the systems analysis approach to determining the production cleanliness of PW. One can see during the discussion how the five phases of the systems approach were interweaved in the process of selecting the most appropriate alternative to build a C/P system. These five phases were:

- 1 Formulation
- 2 Search
- 3 Evaluation
- 4 Interpretation
- 5 Verification.

NOTES

1. See E.S. Quade and W.I. Boucher, Systems Analysis and Policy Planning (New York: Elsevier, 1968), pp. 12-13.
2. Each individual set consisted of 18 test PWBs whose size was 2.375" x 4.0".
3. All of the test PWBs (except those in Set #11) in the cleaned sets (odd numbered) were cleaned following this procedure:
 - 1 2 minutes over boil sump
 - 2 2 minutes spray rinse - each side of the board sprayed 1 minute
 - 3 Each test individually rinsed 1 minute on each side with demineralized water.

In steps 1 and 2, the degreaser contained stabilized 1,1,1-trichloroethane.

The test PWAs in set #11, however, were batch cleaned following this procedure:

- 1 2 minutes complete immersion in stabilized 1,1,1-trichloroethane
- 2 2 minutes over boil sump (raised every 30 seconds to cool then lowered over boil sump again)
- 3 2 minutes immersion in rinse sump
- 4 2 minutes spray rinsed with solvent - each side of the assembly sprayed 1 minute
- 5 Each test PWA individually rinsed 1 minute on each side with demineralized water.

In steps 2-4, the degreaser contained stabilized 1,1,2-trichloro-2,2,1-trifluoroethane.

4. All panels used in the experiments were initially cleaned before any fabricated steps following this procedure:
 - 1 2 minutes over boil sump
 - 2 2 minutes spray rinse - each side of the panel sprayed 1 minute.

The degreaser contained stabilized 1,1,1-trichloroethane. However, only the test PWBs in the odd numbered sets were cleaned after reaching the end of the appropriate manufacturing stage (six stages). See note 3 for the cleaning procedure used.

5. Transmission Electron Microscopy (TEM) was also employed; however, except for revealing not especially noteworthy differences in morphological characteristics among samples, the TEM is not a useful technique for profiling contaminants on PW. Hence, no discussion of the TEM or the results obtained therewith are included in this report.
6. Model JSM-U3 scanning electron microscope (marketed by JEOL, USA, Inc. of Peabody, MA). EDX spectra were obtained from areas of interest using a Si(Li) detector (manufactured by Princeton Gamma Tech, Inc. of Princeton, NJ) coupled to a Proxan III energy analysis system (marketed by Elscint, Inc. of Hackensack, NJ).
7. Model 549 ESCA/AES/SAM surface analysis (manufactured by Perkin-Elmer, Physcial Electronics Division of Eden Prairie, MN).
8. Same as Note. 7.
9. An Ionograph (Alpha Metals) was also used to test the PW for the Extract Resistivity Test (ERT). The ERT is based on measuring the specific resistivity, ρ , or its reciprocal κ (the specific conductance), of an isopropyl alcohol/water extract solution of PW. Two ERT devices widely used throughout the PW industry are the Omega-Meter and the Ionograph. The Ionograph is calibrated to read directly in micrograms of sodium chloride ($\mu\text{g NaCl}$) or equivalent. Dividing the reading by the PW surfate area in cm^2 yields the amount of $\mu\text{g NaCl}$ or equivalent/ cm^2 . These are the results found using the Ionograph. All data are given in $\mu\text{g}/\text{cm}^2$ (the figures give here are based on taking the arithmetic means of the readings).

Results from IONOGRAPH in $\mu\text{g}/\text{cm}^2$

	Cleaned	Not Cleaned
Stage 1	Set #1 0.02	Set #2 0.07
Stage 2	Set #3 0.01	Set #4 1.13
Stage 3	Set #5 0.06	Set #6 1.06
Stage 4	Set #7 0.07	Set #8 0.29
Stage 5	Set #9 1.19	Set #10 1.30
Stage 6	Set #11 2.72	Set #12 25.1

However, the ERT merely indicates the presence of ions and affords only a rough order of magnitude of the ionic concentration. It does not give any indication whatsoever of the specific ionic species causing the PW degradation. Since ERT is nonspecific regarding the

```

530 WRCUR(256*LINE+47):
    INPUT "",P(N)
540 IF P(N)<1 OR P(N)>6 OR P(N)≠INT(P(N)) THEN WRCUR(5642):
    PRINT"ILLEGAL PROGRAM NUMBER":
    WRCUR(256*LINE+47):
    PRINT" ":
    GOTO530
550 WRCUR(5642):
    PRINT
560 NEXT N
570 WRCUR(5642):
    INPUT "PRESS HOLD - PRINT ON 5000. PRESS RETURN TO CONTINUE
    ",O$:
    WRCUR(5642):
    PRINT
580 WRCUR(5642):
    PRINT"READING ELEMENT FILES"
590 FOR N=1TO1
    600 F$="MFD1:"+ELE$(N)+".GR"
    610 ON ERROR GOTO 830
    620 OPEN "I",#2,F$
    630 LINPUT #2,P$(N)
    640 PRINT #6:
        PRINT #6,"PROGRAM #";P(N),"ELEMENT FILE NAME:
        ";ELE$(N):
        PRINT#6,P$(N)
    650 CLOSE #2
    660 NEXT N
670 PRINT#4,"A":
    INPUT#5,CHK$
680 FOR N=1TO1
    690 LET A$="P"+RIGHT$(STR$(P(N)),1)
    700 PRINT#4,A$
    710 INPUT#5,CHK$
    720 PRINT#4,P$(N)
    730 INPUT#5,CHK$
    740 NEXT N
750 PRINT#6
760 PRINT#6,"THE FOLLOWING PROGRAMS HAVE BEEN LOADED INTO THE 5000:":
    PRINT#6
770 PRINT#6,TAB(25);"ELEMENT","PROGRAM":
    PRINT#6
780 FOR N=1TO1
    790 PRINT#6,TAB(25);ELE$(N);TAB(50);P(N)
    800 NEXT N
810 PRINT#6
820 CLOSE:
    GOTO20
830 P$(N)="0000100000100000100005110001100000100005103000500100007000300000
    1100010001040000000027"
840 PRINT#6:
    PRINT#6,ELE$(N);" NOT IN LIBRARY. PROGRAM LOCATION "P(N);
    "WILL CONTAIN 5000 DEFAULT VALUES."
850 ELE$(N)="DEFAULT"
860 RESUME 650
870 RESUME 370

```

FIGURE 20C.

```

240 WRCUR(256*7+10):
    PRINT "PRESS HOLD - PRINT ON 5000."
250 WRCUR(256*8+10):
    PRINT "PRESS RETURN ON DATA STATION TO STORE IN LIBRARY."
260 INPUT "",W$
270 PRINT#4,"A":
    INPUT#5,CHK$
280 PRINT#4,"D1"
290 LINPUT #5,P$
300 ON ERROR GOTO 870:
    F$="MFD1:"+ELE$+".GR":
    OPEN" I",#2,F$:
    CLOSE #2
310 WRCUR(5642):
    PRINT ELE$:
    INPUT" ALREADY EXISTS IN LIBRARY. OVERWRITE (Y/N) ",O$
320 IF O$="Y" GOTO 370
330 IF O$<>"N" GOTO 310
340 WRCUR(5642):
    INPUT "NEW ELEMENT FILE NAME (PRESS RETURN TO EXIT).....",ELE$
350 IF ELE$="" GOTO 90
360 WRCUR(1034):
    PRINT ELE$:
    WRCUR(5642):
    PRINT
370 OPEN "O",#2,F$
380 PRINT#2,P$
390 CLOSE #2
400 PRINT #6:
    PRINT #6,ELE$
410 PRINT #6:
    PRINT #6,P$
420 CLOSE:
    GOTO 20
430 PRINT C$:
    WRCUR(529):
    PRINT#3,INIT$
440 WRCUR(256*7+17):
    INPUT "NUMBER OF ELEMENTS (6 MAX.)...",I
450 IF I<1 OR I>6 OR I<>INT(I) THEN WRCUR(1809):
    PRINT:
    GOTO 440
460 PRINT C$:
    WRCUR(529):
    PRINT#3,INIT$
470 WRCUR(256*5+23):
    PRINT "ELEMENT          PROGRAM # (1-6)"
480 WRCUR(256*6+23):
    PRINT "-----"
490 FOR N=1 TO I
    500 LINE=6+N
    510 WRCUR(256*LINE+24):
        INPUT "",ELE$(N):
        IF LEN(ELE$(N))>5 OR LEN(ELE$(N))=0 THEN WRCUR(5642):
            PRINT "ILLEGAL ELEMENT FILE NAME":
            WRCUR(256*LINE+24):
            PRINT " ":
            GOTO 510
520 WRCUR(5642):
    PRINT

```

FIGURE 20B.

[illegible]

FIGURE 20A. Program for Loading Various Atomic Absorption Operating Parameters in BASIC

DATE 80/11/14 <<<<<<<<MFD1:CR.BA >>>>>>>> TIME 10:07

```
10 C$=CHR$(27)+CHR$(75)
20 PRINT C$
30 WRCUR(256*1)
40 PRINT"    Communication Routine"
50 PRINT
60 PRINT"    Data Station - Model 5000"
70 PRINT
80 PRINT"    Enter character strings to be sent to Model 5000"
90 PRINT"    after prompt."
100 PRINT
110 PRINT"    Model 5000's reply will be printed."
120 OPEN "O",#4,"COMW:"
130 OPEN "I",#5,"COMR:"
140 CLEAR 200
150 WRCUR(256*12):
    PRINT:
    WRCUR(256*12)
160 INPUT "STRING....",A$
170 PRINT #4,A$:
    INPUT #5,CHK$
180 WRCUR(256*14):
    PRINT:
    PRINT:
    WRCUR(256*14)
190 PRINT CHK$
200 OPEN "O",#1,"AUXW:"
    PRINT#1:PRINT#1,A$:
    PRINT#1,CHK$:
    PRINT #1:CLOSE#1
210 GOTO140
```

FIGURE 19. Program for Establishing Two-Way Communication between 5000 and Data System in BASIC

```

760 FOR I=1TON
    770 CALL HSYMB(@E,@H(I),@V(I),@SYMS)
    780 NEXT I
790 V1=(125*M+B):
    V2=(625*M+B)
800 H1=(25-B)/M:
    H2=(200-B)/M
810 IF V1>=0 GOTO 850
820 IF V2<=200 GOTO 840
830 CALL LINE(@E,@H1,25,@H2,200,1):
    GOTO 880
840 CALL LINE(@E,@H1,25,625,@V2,1):
    GOTO 880
850 IF V2<=200 GOTO 870
860 CALL LINE(@E,125,@V1,@H2,200,1):
    GOTO 880
870 CALL LINE(@E,125,@V1,625,@V2,1)
880 WRCUR 256*20+25:
    PRINT USING "CORRELATION COEFFICIENT = +.####";RHO
890 GOTO 590
900 WRCUR 256*20+14:
    PRINT CHR$(136);"MAXIMUM ENTRY = NINE POINTS";CHR$(128):
    GOTO 590
910 CALL GRINIT(@E):
    CLOSE:
    PRINT C$:
    WRCUR 256*1
920 SYSTEM

```

FIGURE 18C.

```

NEXT I
310 Y=Y(1)
320 FOR I=2 TO N:
    IF Y<Y(I) THEN Y=Y(I):
        NEXT I
330 FOR I=1 TO N:
    X(I)=X(I)/X*500+125:
    Y(I)=Y(I)/Y*175+25:
    H(I)=X(I)+44:
    V(I)=Y(I)+24:
    NEXT I
340 FOR I=1 TO 5:
    S(I)=0.0:
    NEXT I
350 FOR I=1 TO N
    360 S(1)=S(1)+X(I)
    370 S(2)=S(2)+Y(I)
    380 S(3)=S(3)+X(I)*Y(I)
    390 S(4)=S(4)+X(I)*X(I)
    400 S(5)=S(5)+Y(I)*Y(I):
    NEXT I
410 THETA=N*S(3)-S(1)*S(2)
420 PHI=N*S(4)-S(1)*S(1)
430 CHI=N*S(5)-S(2)*S(2)
440 Q1=CHI/N
450 Q2=THETA^2/(N*PHI)
460 Q3=N-2
470 M=THETA/PHI
480 B=(S(2)-M*S(1))/N
490 M2=(Q1-Q2)/Q3
500 SB=SQR(ABS(M2*N/PHI))
510 SA=SQR(ABS(Q2*S(4)/PHI))
520 RHO=THETA/SQR(PHI*CHI)
530 REM INTERCEPT = B +/- SA
540 REM SLOPE = M +/- SB
550 REM CORREL. COEFF.=RHO
560 GOTO 550
570 WRCUR 256*20+14:
    PRINTCHR$(136);"DATA INSUFFICIENT FOR LINEAR REGRESSION";CHR$(128)
580 RESUME 590
590 CLOSE
600 OPEN "D:",#1,"CONS1:":
    PRINT#1,"STRIKE";CHR$(136);"RETURN";CHR$(128);"TO CONTINUE..."
610 WRCUR 256*24+36:
    INPUT" ",X$
620 PRINT C$
630 PRINT #1,"LR
640 GOTO 50
650 PRINT C$
660 WRCUR 256*23+10:
    PRINT CHR$(136);"GRAPHICS MODE";CHR$(128)
670 CALL LINE(0E,125,25,125,200)
680 CALL LINE(0E,121,200,125,200,1)
690 CALL LINE(0E,125,25,625,25)
700 CALL LINE(0E,625,22,625,25,1)
710 H$="CONCENTRATION"
720 CALL HSYMB(0E,380,25,0H)
730 V$="ABSORBANCE"
740 CALL VSYMB(0E,125,100,0V)
750 SYM$="*"

```

FIGURE 18B.

DATE 80/11/14

<<<<<<<<MFD1:LR.BA >>>>>>>> TIME 10:06

```
1  REM      *** GRAPHITE FURNACE STANDARDS SELECTION ROUTINE ***
2  REM
3  REM      THIS PROGRAM IS DESIGNED TO AID THE ANALYST IN THE SELECTION OF
4  REM      STANDARDS FOR THE HGA-500 GRAPHITE FURNACE.
5  REM
6  REM      ABSORBANCE VALUES FOR UP TO 9 STANDARDS MAY BE ENTERED.
7  REM      THE
8  REM      PROGRAM WILL PERFORM A LINEAR REGRESSION ANALYSIS
9  REM      OF THE ENTERED
10 REM      VALUES AND PLOT THE RESULTS ON THE SCREEN, USING THE GRAPHICS
11 REM      CAPABILITIES OF THE MODEL 3500 DATA STATION. THE CORRELATION
12 REM      COEFFICIENT IS ALSO DISPLAYED.
13 REM
14 REM      PRINTER OUTPUT IS NOT AVAILABLE AT THIS TIME.
15 REM
20 DEFINT H,V
30 LIBRARY "GRUTL.LB"
40 ON ERROR GOTO 570
50 C$=CHR$(27)+CHR$(75)
60 FOLD
70 F=0
80 CALL GRINIT(0E)
90 PRINT C$:
    WRCUR 256*2+20
100 PRINT "GRAPHITE FURNACE METHODS DEVELOPMENT"
110 WRCUR 256*4+21
120 PRINT "LINEAR REGRESSION GRAPHICS ROUTINE"
130 WRCUR 256*23+10:
    PRINT CHR$(136);"DATA ENTRY MODE";CHR$(128)
140 CLOSE:
    OPEN "O",#1,"CONS1.":
    PRINT#1,"ENTER";CHR$(136);"O";CHR$(128);"TO EXIT"

150 WRCUR 256*8:
    INPUT "ENTER NUMBER OF STDS...(2-9)...";N
160 PRINT#1,"LR
    CLOSE
170 IF N=0 THEN 910
180 IF N<2 THEN ERROR 10
190 IF N>9 GOTO 900
200 WRCUR 256*8
210 PRINT "STANDARD #","CONC. (PPB)","ABSORBANCE"
220 PRINT "-----","-----","-----"
230 PRINT "BLANK"
240 FOR I=1 TO N:
    PRINT," ";I:
    NEXT I

250 N=N+1
260 FOR I=1 TO N:
    WRCUR 256*(I+9)+31:INPUT"";X(I)
    270 WRCUR 256*(I+9)+45:
    INPUT "";Y(I)
    280 NEXT I
290 X=X(1)
300 FOR I=2 TO N:
    IF X<X(I) THEN X=X(I):
```

FIGURE 18A. Linear Regression Analysis Program for Data from graphite Furnace in BASIC

- 4 RF Power Supply
- 5 Data System
- 6 HGA-500 Graphite Furnace
- 7 AS-40 Autosampler (for furnace)
- 8 PR-80 Printer.

The emission spectrophotometer, i.e., plasma torch, will be used to detect high to fairly high levels of the metallic and quasi-metallic elements (≈ 0.5 ppm and greater), whereas the furnace will be employed only for levels lower than those detectable using the torch.

The other units making up the ICP 5000 are auxiliary units. The RF Power Supply is required to supply the energy needed to decompose Argon (Ar) gas into a plasma. The autosamplers are used to hold sample cups and to present the appropriate sample to be analyzed to the torch or to the furnace, as the case may be. Light emitted by the torch must pass into the 5000 Spectrophotometer via the Optical Interface for optical, hence elemental, analysis. Light absorbed in the Graphite Furnace must also be analyzed in the 5000 Spectrophotometer; however, the furnace is an integral part of the 5000 as constructed and requires no special Optical Interface. The Data System is a microcomputer having two I/O devices attached directly on it - a CRT and a keyboard. Accompanying this is a Printer which is software selectable to produce up to 132 characters per line of hardcopy.

Figures 18A, B, C display a program in the BASIC language for performing a linear regression analysis of data obtained from the Graphite Furnace. Using this program, it is possible to plot on the CRT standard concentrations versus absorbances and to visually display the linearity of the resulting graph. In this way discrepancies and deviations from linearity can easily be checked.

The operation of the 5000 is completely controlled by its built-in microprocessor, or it may be controlled by the external Data System through a two-way RS-232C interface. Figure 19 shows a BASIC program used to establish two-way communication between the 5000 and the Data System. In this way, the 5000 becomes controllable through the Data System.

Figures 20 A, B, C represent a BASIC program for loading various atomic absorption operating parameters, e.g., absorbance wavelength, slit width, lamp current, etc., for Graphite Furnace use into the 5000 from the Data System. Figures 21 A, B represent the hardcopy output of the various parameters for the different elements to be run in the furnace. Note that the long number strings are the particular way the 5000 stores its parameters.

- 4 Allowance of cause/effect correlation by determining the species source and species related latent failures
- 5 Allowance of the use of water-soluble fluxes since contaminant levels can be determined with confidence.

It is a truism that printed wiring assemblies (PWAs) are rapidly becoming more complex. Driven by tighter packaging requirements and the necessity for greater component densities, product lines for advanced missile systems will soon be almost exclusively PWAs having smaller line widths/line spacings and having ceramic chip carriers (C³s) as components. See Figure 17 for an illustration of this trend in PW manufacturing. It is anticipated that the C/P system will greatly aid in testing for cleanliness for such complex PWAs.

3.1 THE INDUCTIVELY COUPLED PLASMA EMISSION/ATOMIC ABSORPTION SPECTROPHOTOMETER

One of the most important analytical instruments in the contaminant profiling system is the inductively coupled plasma emission/atomic absorption spectrophotometer.

In order to better place the following discussion in perspective, it is appropriate to describe in greater detail the PW contaminant profiling (C/P) system. Recall that this system consists of five major components:

- 1 Inductively-coupled plasma spectrophotometer/graphite furnace, ICP/GF
- 2 Ion chromatograph, IC
- 3 Minicomputer and computing integrator unit
- 4 Extraction tank/pumping unit
- 5 Water purification unit.

However, some of the above C/P system components can be considered a system in their own right, i.e., they can be further decomposed or broken down into subunits or subcomponents. The best case in point is the ICP/GF (Perkin-Elmer ICP 5000). The ICP 5000 can be considered a system in its own right composed of the following units:

- 1 Model 5000 Spectrophotometer
- 2 ICP Source (torch)
- 3 Optical Interface between 1 and 2

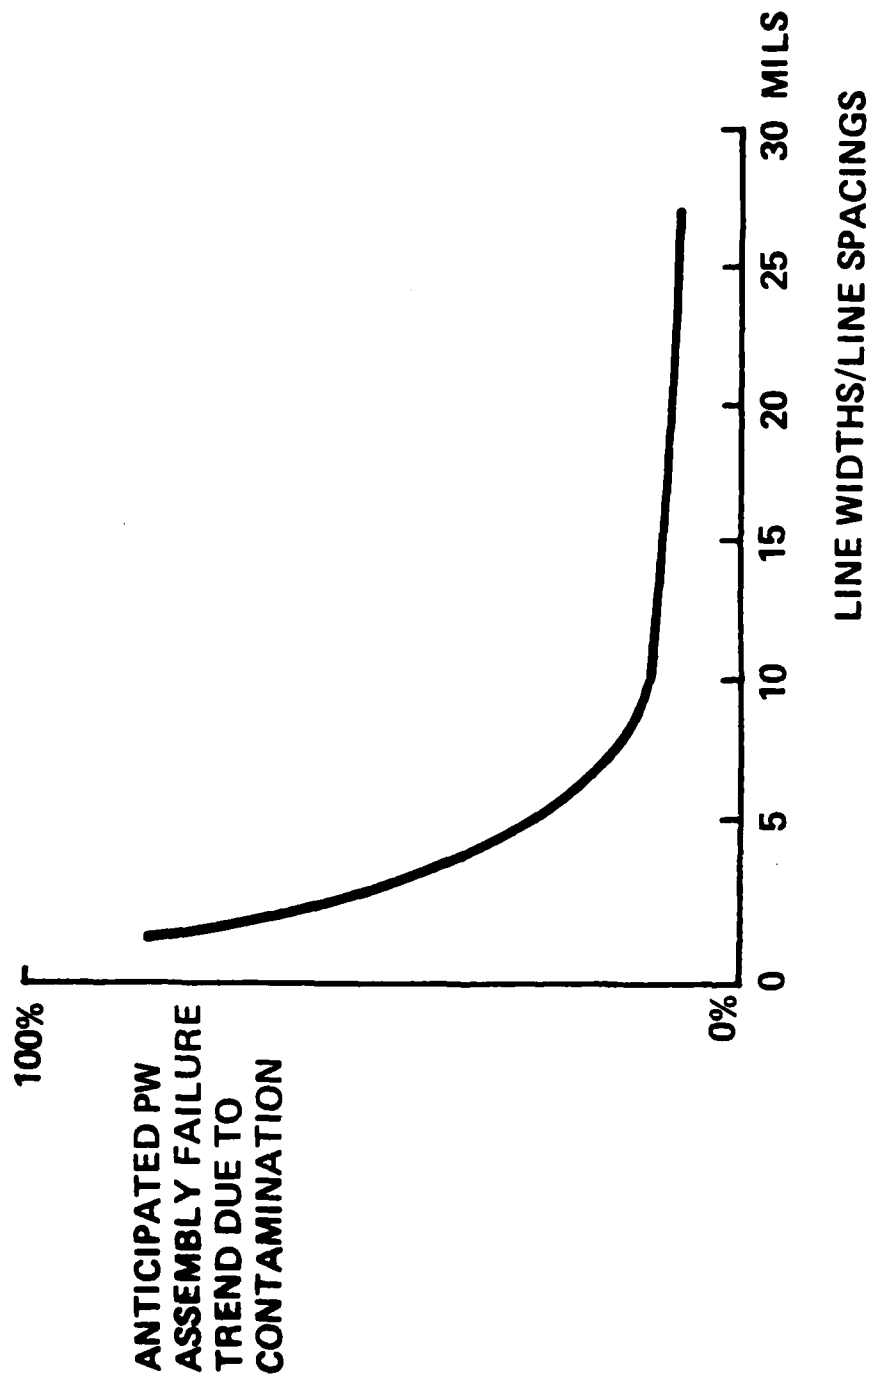


FIGURE 17. Implications of Advanced Packaging Trends

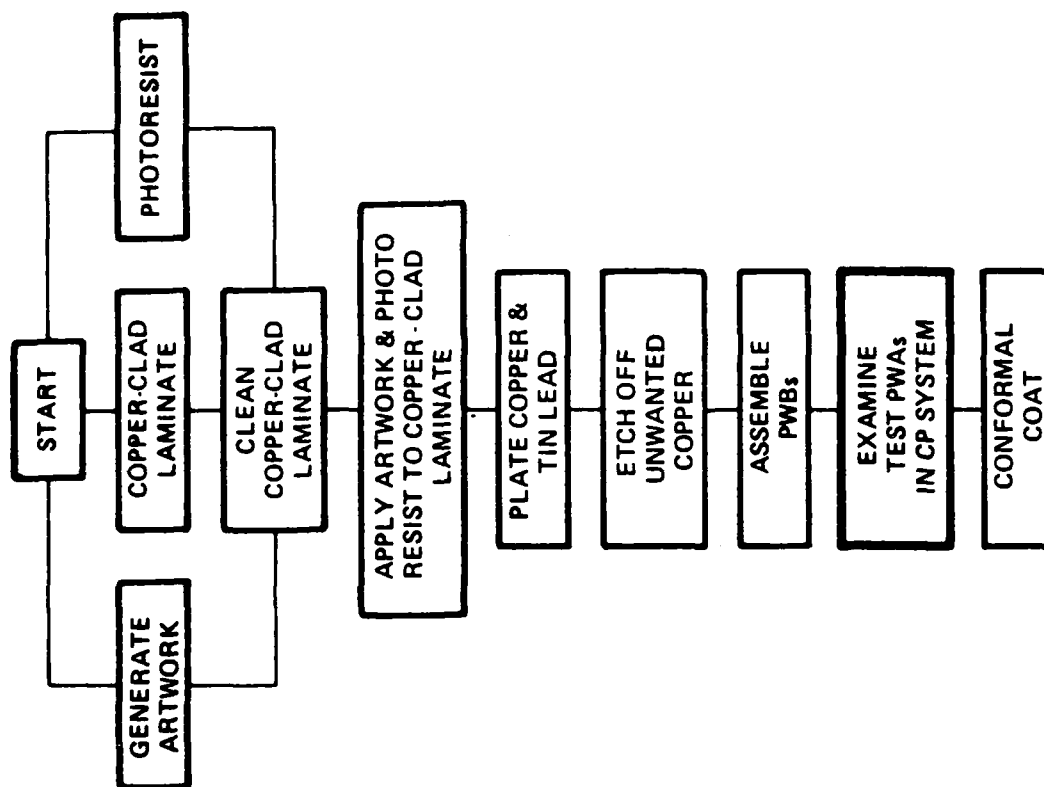


FIGURE 16. Position of Contaminant Profiling System in Double-Sided Printed Wiring Manufacturing Line

3.0 DEVELOPMENT OF THE CONTAMINANT PROFILING SYSTEM

Based on the results of systems analysis, a contaminant profiling (C/P) system for establishing printed wiring cleanliness criteria was designed and integrated.

To produce highly reliable PW requires a more rigorous method for detecting and quantifying contaminants on PW. This method will provide a much higher degree of confidence in PW cleaning and manufacturing processes. The method is called Contaminant Profiling.

Designate the act of detecting contaminant species and assaying their individual concentrations as Contaminant Profiling (C/P). One will be especially concerned with the detailed profiling of all ionic species, allowing a rapid determination to indicate if a particular process is in control or not. If it is not in control, C/P will indicate this and allow remedial steps to be taken without too great a loss in time. Hence, it will be cost-saving and economical in the long run. Further, C/P of special solvent extract solutions of PW entities to ascertain their cleanliness will provide information of the kind and concentration of all solvated ionic species at levels far below what can be achieved by extract resistivity or insulation resistance testing. Contaminant Profiling, then, will reveal whether the cleaning processes used on PW entities are truly performing as they ought. This technique will be an absolute must to ensure adequate cleanliness levels for PW assemblies having 0.002 inch conductor spacings or less.

The task objectives were:

- 1 Develop and build a contamination detection and measuring system for printed wiring (PW).
- 2 Increase PW reliability by in-line testing and monitoring of PW production cleanliness.
- 3 Implement the contamination detection and measuring system in a PW manufacturing environment.

Figure 16 shows an abbreviated typical manufacturing process for double-sided PW boards and the inclusion of the C/P system into the manufacturing line.

The advantages of the C/P systems are:

- 1 Identification of different contaminant species
- 2 Quantification of the contamination level of each species
- 3 In-line detection - modular and minicomputer controlled

15. By definition, 1 ppm = 1 milligram/liter = 1 microgram/milliliter, i.e., 1 ppm = 1 $\mu\text{g/ml}$. Also note that 1 ppm = 1000 ppb (parts-per billion).
16. According to a recent investigator, Dr. W. Bernard Wargotz, 1.0 $\mu\text{g/cm}^2$ represents the threshold concentration beyond which rapid and progressive deterioration of the PW electrical functions begins. See Wargotz, "Quantification of Contaminant Effects upon Electrical Behavior of Printed Wiring", IPC Technical Paper, Sept. (1977), 13. In his experiment, Wargotz used PW having conductor spacings of 0.009 inch. He used sodium chloride as the ionic material to produce the degradation. Sodium chloride, NaCl, however, is a readily soluble salt. Whether the 1.0 $\mu\text{g/cm}^2$ figure represents a threshold concentration for only slightly soluble ionic salts (such as many of those of copper, lead, and tin) remains to be determined. It may even be that 1.0 μg of NaCl or equivalent/ cm^2 of PW surface is too high an acceptable limit for PW. It is easy to show that this amount of sodium chloride amounts to 7 to 10 monolayers of salt assuming completely even distribution over the surface area. As conductor spacings become narrower, we may want to limit the acceptable amount to less than this.
17. For some of the elements in PW extracts, an atomic absorption spectrophotometer (AAS) with an accompanying graphite furnace (GF) would be better because of improved detection limits.
18. When the $\text{CO}_3^{2-}/\text{HCO}_3^-$ eluent is used, a negative "water dip" is observed on the chromatogram before the Cl^- peak.
19. Defined as twice the noise level.
20. See John R. Canada, Intermediate Economic Analysis for Management and Engineering (Englewood Cliffs, N.J.: Prentice Hall, Inc., 1971, Chap. 4, pp. 48-59).

ionic species, it cannot be classified as a detailed contaminant profiling test. See Table 7 for a comparison of these figures with those found using the ICP.

10. Model 965 Plasma Atom Comp emission spectrophotometer (marketed by Jarrell-Ash of Waltham, MA).
11. Models 12 and 14 AutoIon ion chromatographs (marketed by DIONEX Corporation of Sunnyvale, CA).
12. A discussion with the laminate vendor revealed that the following elements may be observed from the materials used to make the glass fiber cloth within the epoxy: B (boron as B_2O_3 , 5-10%, rarely observed), Ca (calcium as CaO , 16-25%), Al (aluminum as Al_2O_3 , 2-16%), Si (silicon as SiO_2 , 52-56%) Na and K (sodium and potassium as Na_2O and K_2O , 0-2%), Ti (titanium as TiO_2 , 0-0.8%), Fe (iron as Fe_2O_3 , 0.05-0.4%), P (phosphorus, 0-1%). Br (bromine) shows up in epoxy functioning as a fire retardant.
13. Elemental distribution maps can be obtained to show the distribution on the sample of an element of interest. The brightness of the recording CRT is modulated such that a series of dots appears on the photograph with their density related to the concentration of the element, i.e., more dots indicate more of the element. The elemental distribution shown on the photograph (dot map) can then be qualitatively related to the sample topography shown in a SEM secondary electron photograph taken of the same area. It should be emphasized that only differences in dot density are significant since some dots will be produced by the white radiation background. For the crystalline-like material in question, elemental distribution maps were made for Pb, Sn, Cu and Br in this area since these were the major elements in that area. The distribution maps revealed that the crystalline material was not composed of any of these elements.
14. To show this statistically, the so-called F function must be calculated where:

$$F = \frac{\text{estimate of } \sigma^2 \text{ based on variation among } \bar{X}s}{\text{estimate of } \sigma^2 \text{ based on variation within samples}}$$

For the percent of C on the cleaned samples (sets #1, #3, #5, #7, #9, #11), it can be shown that estimate of σ^2 based on variation among $\bar{X}s$ = 335.03 and estimate of σ^2 based on variation within samples = 135.68. There are six sets of size 6; therefore, the number of degrees of freedom of the numerator is 5 (6-1) and the number of degrees of freedom of the denominator is 30 (6x5). Now $F = 335.03/135.68 = 2.47 < 3.70$ where $F_{.01} = 3.70$.

PROGRAM # 1 ELEMENT FILE NAME: AL001
 000010000010000010000510000110000010050012000000010000708030932222??0111009109130
 000==

PROGRAM # 2 ELEMENT FILE NAME: K001
 0000100000100000100005100001100000100500120000000200007080766521222??0112009109130
 000<4

PROGRAM # 3 ELEMENT FILE NAME: P001
 0000100000100000100005100001100000100500120000000300002080213620222??0113009309130
 00095

PROGRAM # 4 ELEMENT FILE NAME: PB001
 000010000010000010000510000110000010050012000000040000708021702222??0114009109130
 00009

PROGRAM # 5 ELEMENT FILE NAME: SN001
 000010000010000010000510000110000010050012000000050000708022462222??0115009109130
 00030

PROGRAM # 6 ELEMENT FILE NAME: ZN001
 000010000010000010000510000110000010050012000000060000708021372222??0116009109130
 0003-

THE FOLLOWING PROGRAMS HAVE BEEN LOADED INTO THE 5000:

ELEMENT	PROGRAM
AL001	1
K001	2
P001	3
PB001	4
SN001	5
ZN001	6

PROGRAM # 1 ELEMENT FILE NAME: CA001
 000010000010000010000510000110000010050012000000011000708042272222730121009109130
 00013

PROGRAM # 2 ELEMENT FILE NAME: CR001
 000010000010000010000510000110000010050012000000022500708035792222550122009109130
 00065

PROGRAM # 3 ELEMENT FILE NAME: CU001
 000010000010000010000510000110000010050012000000031500708032472222730123009109130
 00087

PROGRAM # 4 ELEMENT FILE NAME: FE001
 000010000010000010000510000110000010050012000000043000208024832222730125009109130
 00089

PROGRAM # 5 ELEMENT FILE NAME: NA001
 000010000010000010000510000110000010050012000000050800408058902322630125009109130
 00093

PROGRAM # 6 ELEMENT FILE NAME: MG001
 000010000010000010000510100013000010050012000000060000708028522022??0126009309130

THE FOLLOWING PROGRAMS HAVE BEEN LOADED INTO THE 5000:

ELEMENT	PROGRAM
CA001	1
CR001	2
CU001	3
FE001	4
NA001	5
MG001	6

PROGRAM # 1 ELEMENT FILE NAME: NI001
 000010000010000010000510000110000010050012000000012500208023202222700131009110030
 000??

PROGRAM # 2 ELEMENT FILE NAME: AU001
 000010000010000010000510000110000010050012000000021000708024282222810132009110030
 000:0

PROGRAM # 3 ELEMENT FILE NAME: SI001
 000010000010000010000510000110000010050012000000034000208025162222780133009110030
 000=8

PROGRAM # 4 ELEMENT FILE NAME: PD001
 000010000010000010000510000110000010050012000000043000208024762222800134009110030
 000??


EMPTY NOT IN LIBRARY. PROGRAM LOCATION 5 WILL CONTAIN 5000 DEFAULT VALUE

EMPTY NOT IN LIBRARY. PROGRAM LOCATION 6 WILL CONTAIN 5000 DEFAULT VALUE

THE FOLLOWING PROGRAMS HAVE BEEN LOADED INTO THE 5000:

ELEMENT	PROGRAM
NI001	1
AU001	2
SI001	3
PD001	4
DEFAULT	5
DEFAULT	6

FIGURE 21B.

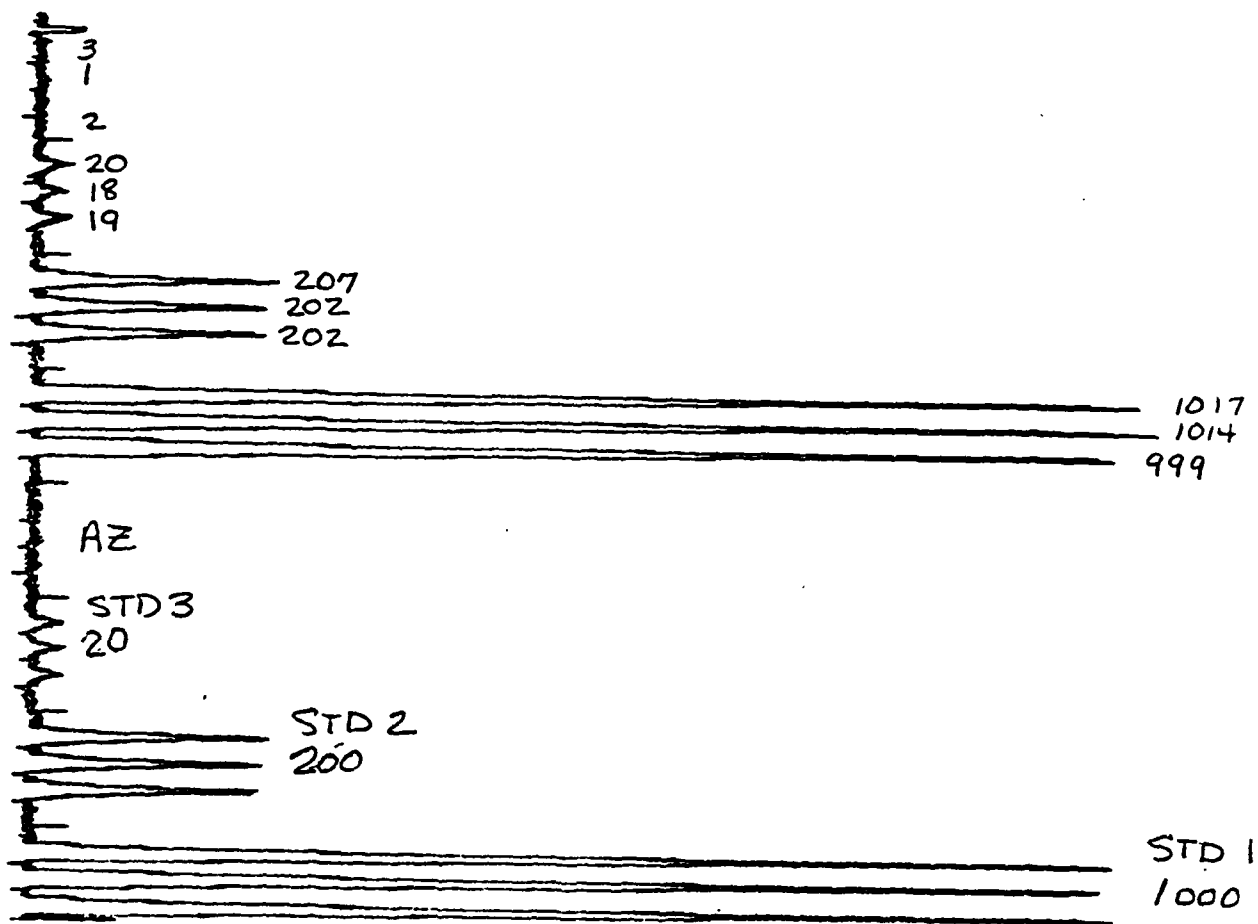

Cr Analysis

STD 1 1000 PPB-AZ, Read Same Order
 " 2 200 PPB
 " 3 20 PPB

FIGURE 22A. Torch Analysis of Chromium

10170000 SINGLE ELEMENT ANALYSIS VER 3.01 DATE 00/10/10 TIME 10:11

 ELEMENT FILE NAME CRWRK
 WAVELENGTH, NM 200.50 BKGD CORR INTERVALS, NM L 0.10 H 0.10
 READ DELAY, SEC 45 INTEGRATION TIME, SEC 3.0 REPLICATES 3
 STANDARDS: STD 1 1000 STD 3 20 STD 4 0.00 STD 5 0.00
 STD 2 200
 DYNAMIC/STATIC (D/S) D INTERNAL STANDARD FILE NAME GAIN 0
 REMARKS: DEC 0.2 NG/L

STD 1	CRWRK	CH	131420	CONC	1000	GAIN	777
		CH	131600				
		CH	132402				
		AV	131807	SD	320.0	CV	0.4
STD 2		CH	27121	CONC	200		
		CH	26730				
		CH	27200				
		AV	27042	SD	700.0	CV	2.0
STD 3		CH	3132	CONC	20		
		CH	3174				
		CH	3141				
		AV	3147	SD	22.3	CV	0.7
BLANK		CH	502	CONC	0		
		CH	410				
		CH	105				
		AV	300	SD	170.0	CV	49.0

CORRELATION COEFFICIENT 1.000

SAMPLE 1			777				
			1014				
			1017				
		AV	1010	SD	7.0	CV	1.0
SAMPLE 2			202				
			202				
			207				
		AV	204	SD	2.0	CV	1.4
SAMPLE 3			17				
			19				
			20				
		AV	17	SD	1.0	CV	5.0
SAMPLE 4			2				
			1				
			1				
		AV	2	SD	3.0	CV	170.0

FIGURE 22B. Data System Printout of Figure 22A

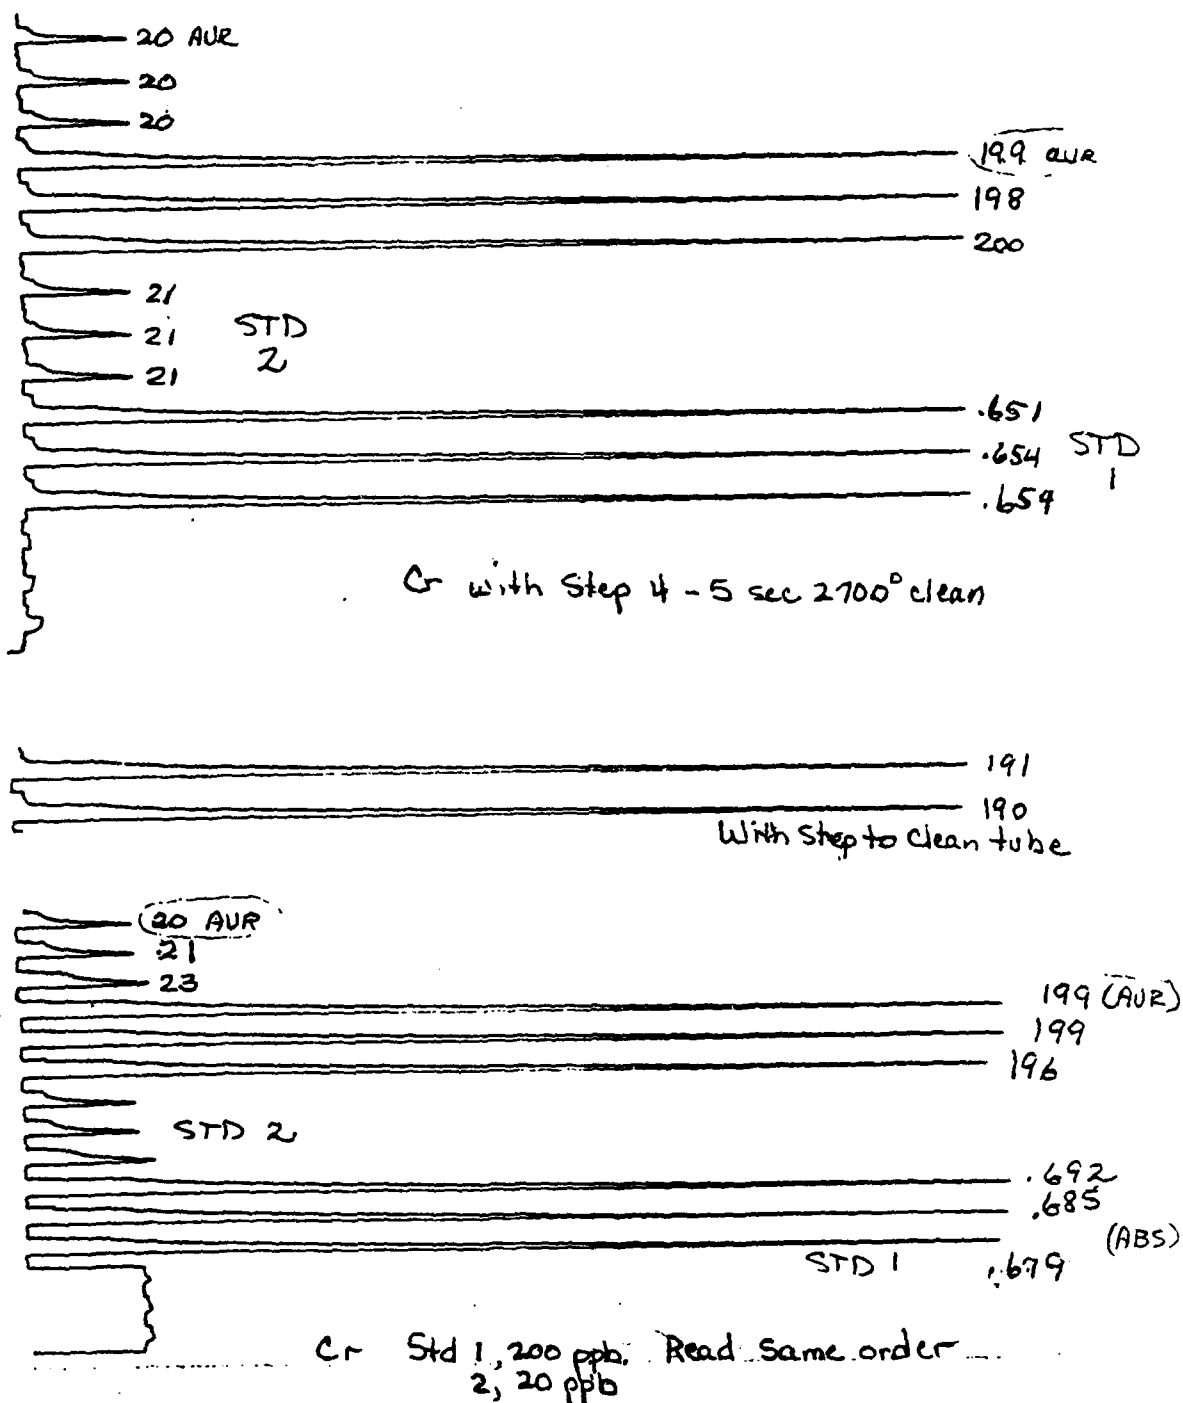


FIGURE 22C. Furnace Analysis of Chromium

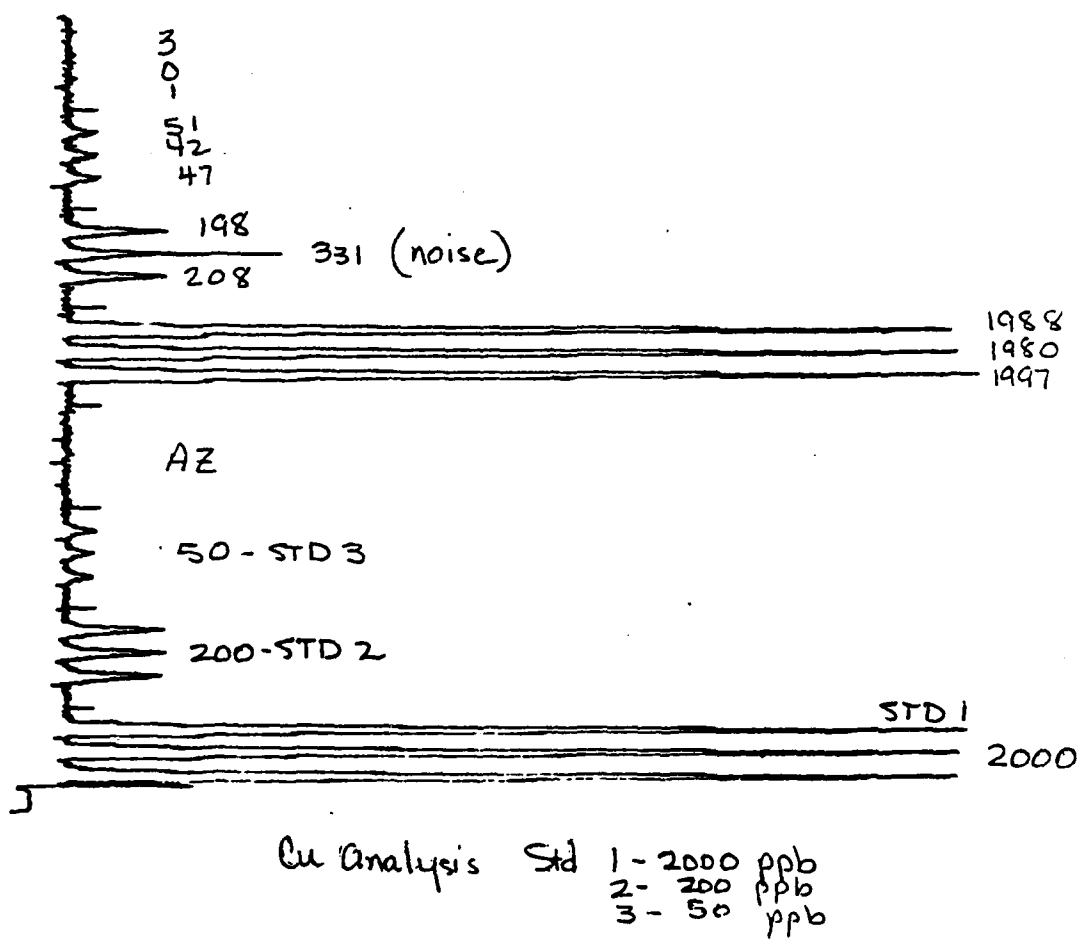


FIGURE 23A. Torch Analysis of Copper

STD 1	LYNCH	CH	122140	CONC	1000	GAIN	921
		CH	122054				
		CH	121770				
		AV	122020	SD	600.1	CV	0.5
STD 2		CH	12040	CONC	200		
		CH	12270				
		CH	12110				
		AV	12070	SD	700.0	CV	2.0
STD 3		CH	3440	CONC	50		
		CH	3421				
		CH	3430				
		AV	3430	SD	12.0	CV	0.4
BLANK		CH	151	CONC	0		
		CH	150				
		CH	150				
		AV	150	SD	222.1	CV	54.0

CORRELATION COEFFICIENT 1.000


SAMPLE 1			1777				
			1761				
			1760				
		AV	1760	SD	0.0	CV	0.4
SAMPLE 2			200				
			201				
			199				
		AV	200	SD	70.0	CV	30.1
SAMPLE 3			47				
			47				
			47				
		AV	47	SD	4.0	CV	0.0
SAMPLE 4			1				
			1				
			1				
		AV	1	SD	1.0	CV	0.0

ICP/5000 SINGLE ELEMENT ANALYSIS VER 3.01 DATE 09/10/13 TIME 10:11

ELEMENT FILE NAME CUMRK
 WAVELENGTH, NM 224.70
 READ DELAY, SEC 40
 STANDARD: STD 1 2000
 STD 2 200
 DYNAMIC/STATIC (D/S) 0
 REMARKS: SEC 0.2 MG/L

INTEGRATION TIME, SEC 3.0
 REPLICATED 3
 STD 3 50
 STD 4 0.00
 STD 5 0.00
 INTERNAL STANDARD FILE NAME
 GAIN 0

FIGURE 23B. Data System Printout of Figure 23A

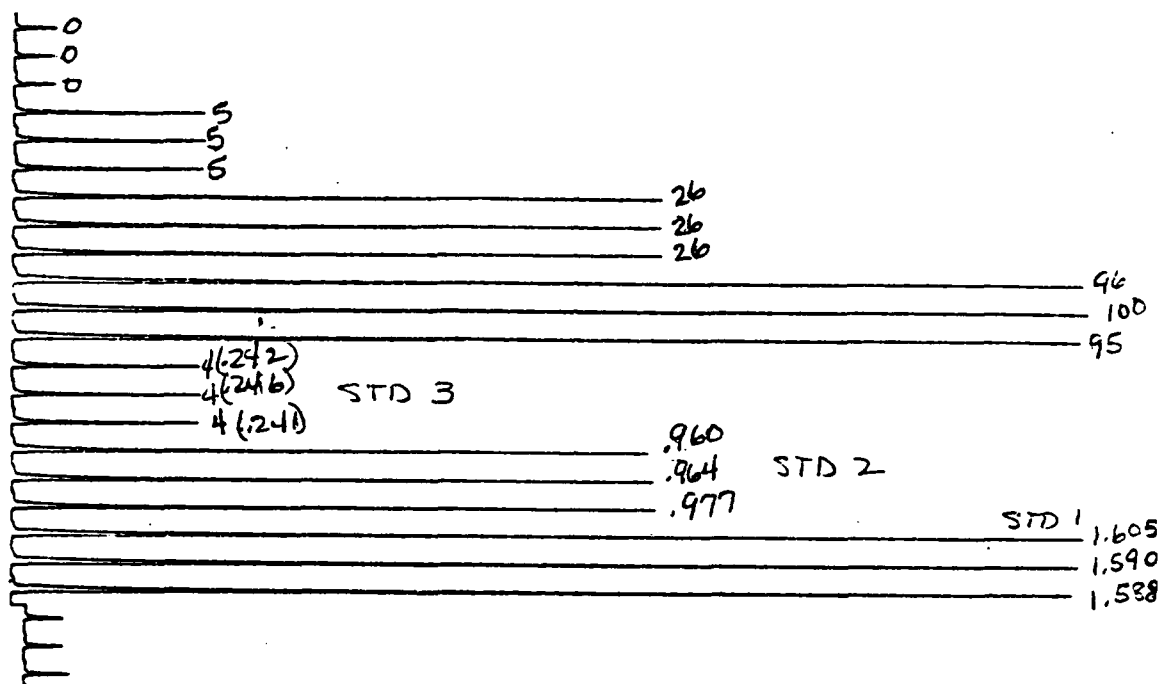

Cu Analysis

std 1 100 ppb Then read same order.
 2 25
 3 5

FIGURE 23C. Furnace Analysis of Copper

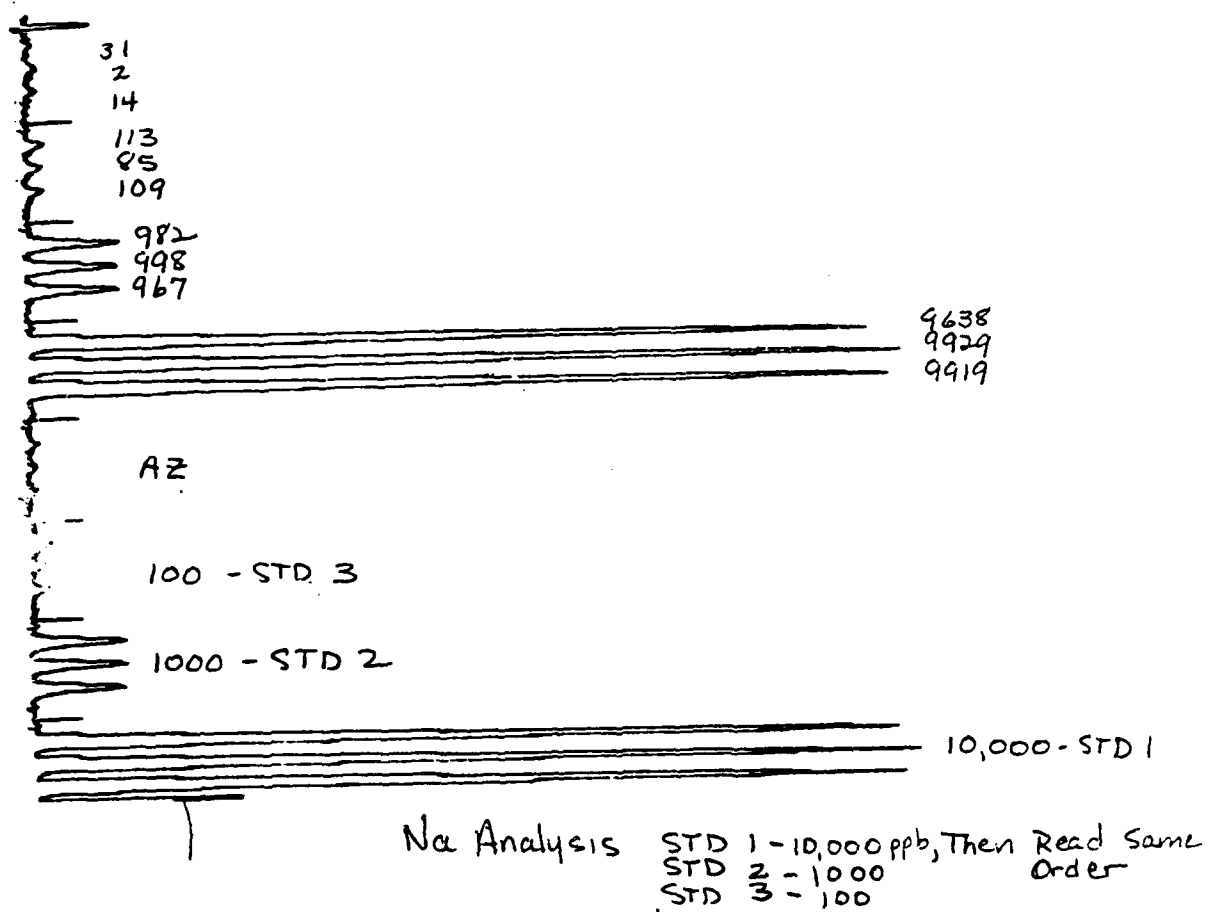


FIGURE 24A. Torch Analysis of Sodium

UNCLASSIFIED

10100000 SINGLE ELEMENT ANALYSIS VER 3.01 DATE 08/13/10 TIME 14123
 ELEMENT FILE NAME HAWRK
 WAVELENGTH, NM 507.57 BKGD CORR INTERVAL, NM L 0.25 H 0.35
 READ DELAY, SEC 45 INTEGRATION TIME, SEC 3.0 REPLICATES 3
 STANDARDS: STD 1 10000 STD 2 1000 STD 3 100 STD 4 0.00 STD 5 0.00
 DYNAMIC/STATIC (D/S) D INTERNAL STANDARD FILE NAME GAIN 0
 REMARKS: DEC 2 MG/L

STD	NAME	CH	CONC	CV
STD 1	HAWRK	110007	10000	0.77
		110003		
		110001		
		117204	1120.7	1.0
STD 2		120033	1000	
		120027		
		120470		
		120002	55.2	0.5
STD 3		2072	100	
		2092		
		2060		
		2074	7.2	0.3
BLANK		1271	0	
		723		
		1202		
		1129	204.0	17.7

CORRELATION COEFFICIENT 1.000

SAMPLE	CH	CONC	CV
SAMPLE 1	7717		
	7727		
	1000		
	7827	105.2	1.7
SAMPLE 2	767		
	770		
	702		
	760	11.7	1.2
SAMPLE 3	107		
	85		
	110		
	103	10.1	14.7
SAMPLE 4	14		
	11		
	11		
	14	10.0	114.0

FIGURE 24B. Data System Printout of Figure 24A

The next set of figures (22 A-C, 23 A-C, 24 A-B) pertain also to the inductively-coupled spectrophotometer (plasma torch)/graphite furnace. Recall that this component of the C/P system is being used to detect and quantify levels of metallic and quasi-metallic elements. Based on the experiment performed on actual production PW, these will be the elements sought for using the ICAP torch/furnace:

aluminum, Al	nickel, Ni (only if applicable)
calcium, Ca	palladium, Pd
carbon, C	phosphorus, P
chromium, Cr	potassium, K
copper, Cu	silicon, Si
gold, Au (only if applicable)	sodium, Na
iron, Fe	tin, Sn
lead, Pb	zinc, Zn
magnesium, Mg	

The emission spectrophotometer, i.e., the plasma torch, will be used to detect high to fairly high levels of the above elements (≈ 0.5 ppm and greater) whereas the furnace will be employed only for levels lower than those detectable on the torch. Figures 22 A-C deal with the analysis of chromium, Cr, on both the torch and the furnace. Figure 22 A presents the torch analysis of chromium. Three standards were run to determine the low level limit of the torch. These standards were 1000 ppb, 200 ppb, and 20 ppb. Note the excellent reproducibility and the extremely stable and reproducible peaks in the lower range. From these data, the torch lower limit for Cr is estimated at < 20 ppb. Figure 22 B is a Data System printout of A. Figure 22 C deals with the furnace analysis of Cr. Two standards were run to determine the acceptable point to cross over from torch analysis to furnace analysis. In the first run (bottom portion of figure), heavily tailing peaks in conjunction with peak height buildup on high level samples and falloff on low level samples indicate incomplete atomization. The addition of a 5 sec. 2700° cleaning step after atomization resulted in consistent peaks (top portion of graph). A cross-over from torch to furnace is suggested at 50 ppb, which should allow a single standard to be used on the furnace.

Figures 23 A-C deal with the analysis of copper, Cu, on both the torch and the furnace. Again, three standards were run to determine the low level limit of the torch. In this case these standards were 2000 ppb, 200 ppb, and 50 ppb. A preliminary run with a standard of 20 ppb indicates lack of reproducibility at that level. The noise peak in one of the 200 ppb standards (upper portion of figure) was caused by nebulizer drainage. Again, Figure 23 B is a Data System printout of 23 A. Three standards were run to determine the acceptable point to

cross over from torch to furnace. The extreme sensitivity of the furnace to Cu suggests use of the lowest possible cross-over point and multiple standards since the linear range for furnace analysis is 10 ppb. A cross-over from torch to furnace is indicated at 100 ppb with a minimum of three standards used during furnace analysis.

Figures 24 A-B deal with the analysis of sodium, Na, on the torch only. Three standards were used: 10,000 ppb (10 ppm), 1000 ppb, and 100 ppb. There is good freedom from noise down to 100 ppb. Figure 24 B is a Data System printout of 24 A.

The utilization of the ICP 5000 (plasma torch) requires the development of specific analytical techniques to assure the accuracy and reproducibility of the results. Plasma torch parameter optimization is one of the most important of these. Using manganese (Mn) as a calibration element, the Background Equivalent Concentration (BEC), measure of the signal to noise ratio (S/N ratio), was measured for a multi-dimensional variable matrix consisting of viewing height, power, nebulization pressure, and plasma argon flow. The combination of these variables giving the lowest BEC and hence, the best S/N ratio, is to be used in all further development.

For any given torch/load coil configuration, there is one set of operating parameters that gives the best S/N ratio for the system. S/N in a plasma system is measured as the BEC which is defined as the concentration of analyte species that gives an emission signal equal to the background emission at the wavelength of interest. It may be calculated from the emission signal at any concentration by the formula:

$$\frac{(\text{Background})(\text{Concentration})}{(\text{Analyte} - \text{Background})}$$

Where:

Background = background emission at λ

Concentration = [analyte species]

Analyte = emission for [analyte species] at λ

λ = wavelength of interest

1 ppm manganese is chosen as the analyte for convenience. Four parameters influence the BEC:

- 1 viewing height in the plasma
- 2 plasma power
- 3 nebulizer pressure
- 4 argon flow.

Preliminary development work suggests varying the parameters in the order given above.

Figures 25A 1-3 show the results of varying the viewing height while holding power at 1250 W, neb. pressure at 30 psi and argon flow at 15 liters/min. A viewing height of 13 mm gave the best (lowest) BEC and was chosen as the optimum viewing height on this basis. Figures 25 B 1-2 show the result of varying the power of the torch while holding the viewing height at 13 mm. 1000 W was chosen as optimum torch power. Figures 25 C 1-2 show the results of varying neb. pressure. View ht = 13 mm, power = 1000 W. 28 psi gave the lowest BEC. Figures 25 D 1-2 show the result of varying argon flow. 17 liters/min was chosen as optimum. Figures 25 D 1 and 3 show a test run with the final parameters of:

View height = 13 mm

Power = 1000 W



Neb pressure = 28 psi

Argon flow = 17 l/min.

Good torch stability and excellent BEC (.022 ppm avr) were obtained. The manufacturer's guaranteed BEC for Mn is .05 ppm. Optimization has resulted in a 2X increase in the sensitivity of the torch.

Standards were procured from SPEX Industries that contain all 16 elements of interest (Al, Ca, Cr, Cu, Fe, Na, Pb, Mg, Zn, Ni, Pd, Sn, K, P, Si, Au) in a single matrix. This will permit the multi-element analysis to be run on the ICP-5000 using one standardization without the necessity of correcting for the contamination resulting from compiling a mixed element matrix from single-element standards.

During the development of the ICP 5000 torch, it did not prove feasible to analyze 15 distinct elemental species by one software file. Accumulating evidence and a consultation with the vendor's leading applications chemist indicated it would be more profitable in terms of error reduction to switch to three separate analyte files, each accommodating five (5) elemental species. After the decision had been made to switch to three separate files, an error analysis was conducted to determine realistic torch lower limits. To keep total analysis time at a minimum and to promote torch stability, the three 5 element files were grouped in order of increasing analyte wavelength. To generate the error analysis, concentration levels of 5,000; 1,000; 200, and 50 parts-per-billion (ppb), or expressed in parts-per-million (ppm), 5,000; 1,000; 0.200; and 0.050, for each analyte element were run in quadruplicate-- two (2) times as a single file of 15 elements and two (2) times as three files of 5 elements. The results were hard-copy printed by the contaminant profiling (C/P) system's printer and shown in Figures 26A, 26B, and 26C. In the figures, the phrase "single run"

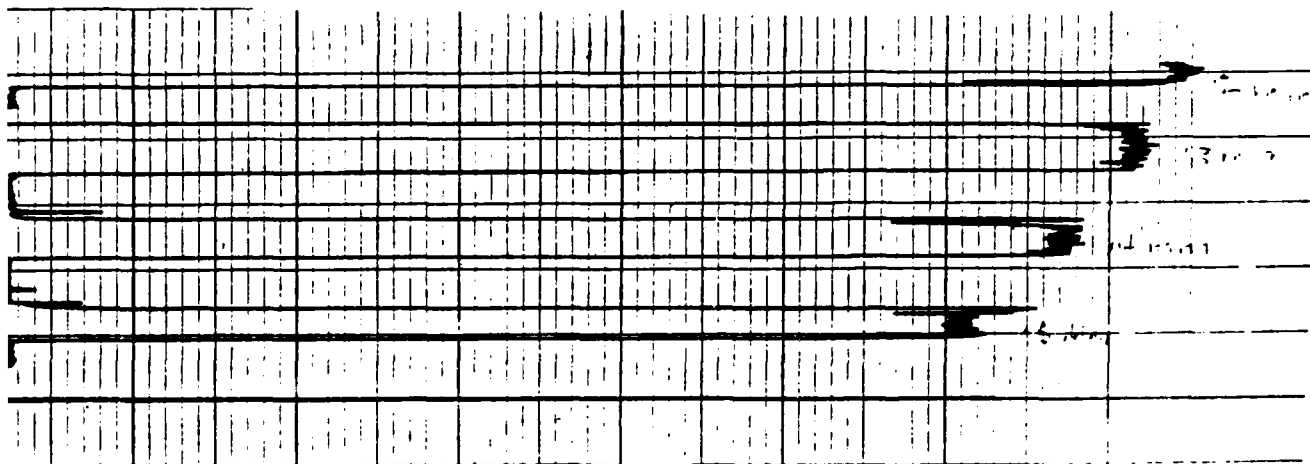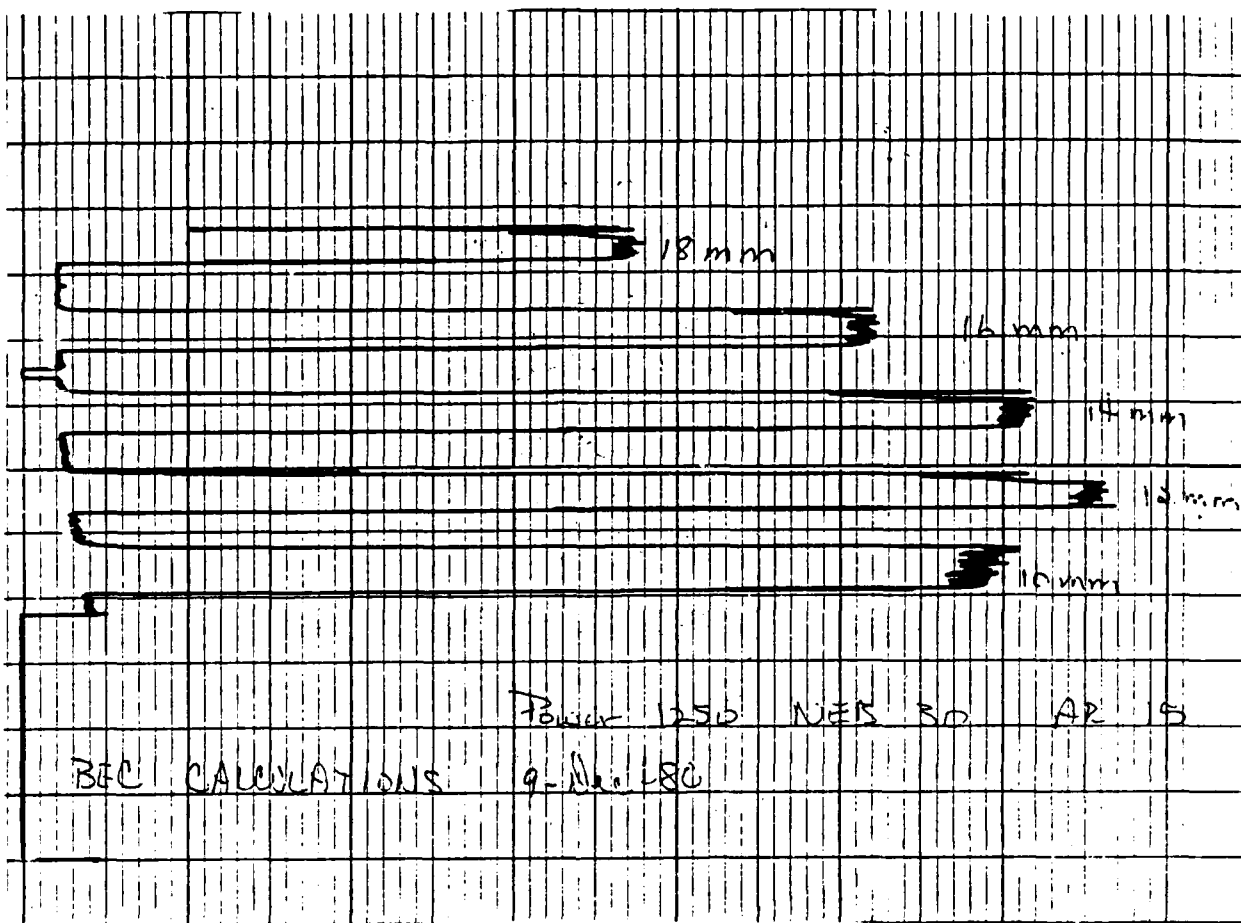

Results of First Run - View Height

FIGURE 25A. 1. Varying the View Height to Optimize BEC

AD-A151 952

ESTABLISHMENT OF PRODUCTION CLEANLINESS CRITERIA AND
PROCESSES FOR PRINTING (U) MARTIN MARIETTA AEROSPACE
ORLANDO FL J K BONNER DEC 81 OR-16668


2/3


UNCLASSIFIED

DARK-48-78-C-0114

F/G 9/5

NL

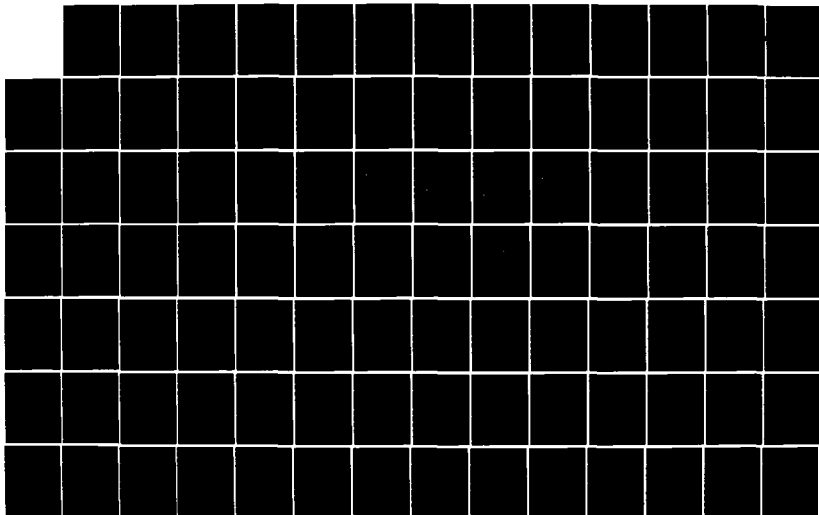

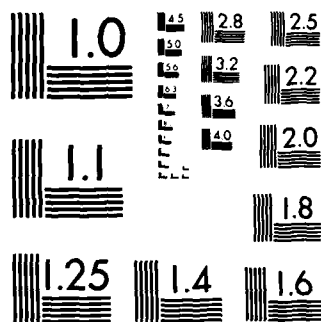

MICROCOPY RESOLUTION TEST CHART
NATIONAL BUREAU OF STANDARDS 1963-A

***** BEC CALCULATIONS *****

VIEW HT = 10MM (POWER = 1250 NEB = 30 AR = 15)

BACKGROUND READING = 84.
ANALYTE READING = 1194.
BEC = 0.07568

VIEW HT = 12

BACKGROUND READING = 65.
ANALYTE READING = 1329.
BEC = 0.05142

VIEW HT = 14

BACKGROUND READING = 52.
ANALYTE READING = 1237.
BEC = 0.04388

VIEW HT = 16

BACKGROUND READING = 48.
ANALYTE READING = 1045.
BEC = 0.04814

VIEW HT = 18

BACKGROUND READING = 43.
ANALYTE READING = 744.
BEC = 0.06134

FIGURE 25A. 2.

***** BEC CALCULATIONS *****

VIEW HT = 12MM

BACKGROUND READING = 56.
ANALYTE READING = 1511.
BEC = 0.03849

VIEW HT = 13MM

BACKGROUND READING = 51.
ANALYTE READING = 1453.
BEC = 0.03638


VIEW HT = 14MM

BACKGROUND READING = 49.
ANALYTE READING = 1367.
BEC = 0.03718

VIEW HT = 15MM

BACKGROUND READING = 52.
ANALYTE READING = 1237.
BEC = 0.04388

FIGURE 25A. 3.

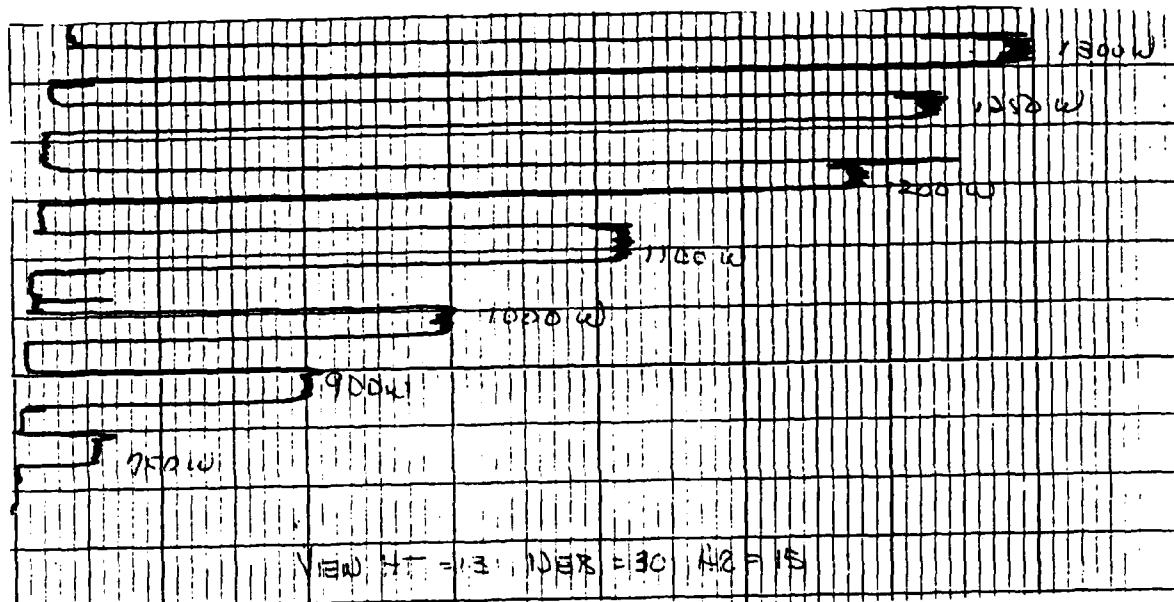

RESULTS OF SECOND RUN - POWER

FIGURE 25B. 1. Varying the Power to Optimize BEC

***** BEC CALCULATIONS *****

POWER = 750 (VIEW HT = 13MM NEB = 30 AR = 15)

BACKGROUND READING = 6.
ANALYTE READING = 112.
BEC = 0.05660

POWER = 900

BACKGROUND READING = 11.
ANALYTE READING = 408.
BEC = 0.02771

POWER = 1000

BACKGROUND READING = 16.
ANALYTE READING = 597.
BEC = 0.02754

POWER = 1100

BACKGROUND READING = 25.
ANALYTE READING = 850.
BEC = 0.03030

POWER = 1200

BACKGROUND READING = 39.
ANALYTE READING = 1174.
BEC = 0.03436


POWER = 1250

BACKGROUND READING = 46.
ANALYTE READING = 1278.
BEC = 0.03734

POWER = 1300

BACKGROUND READING = 54.
ANALYTE READING = 1398.
BEC = 0.04018

FIGURE 25B. 2.

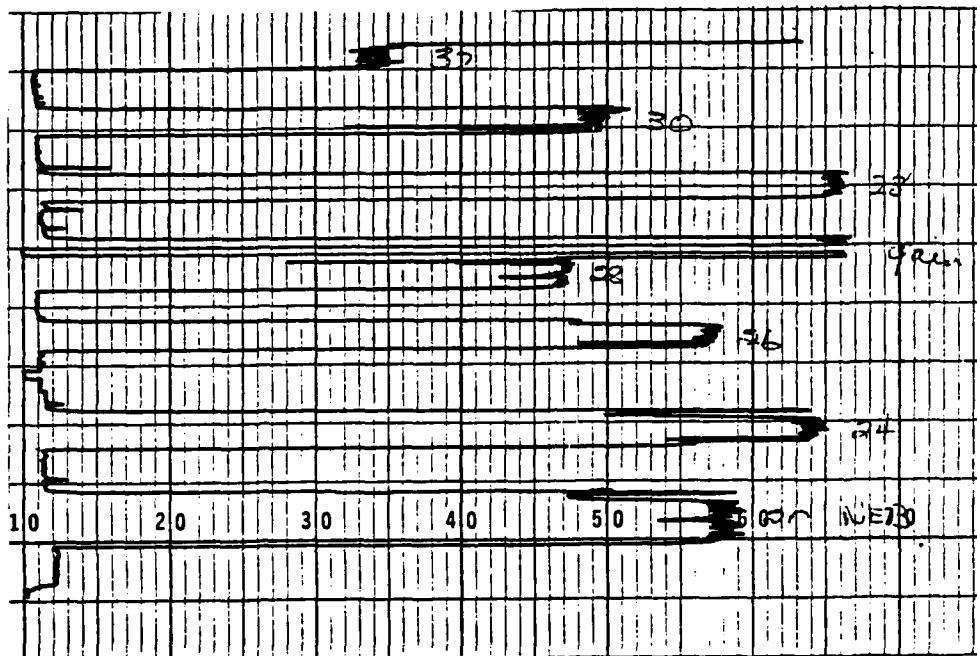

RESULTS OF THIRD RUN - NEBULIZER PRESSURE

FIGURE 25C. 1. Varying the Nebulizer Pressure to Optimize BEC

***** BEC CALCULATIONS *****

NEB = 20 (POWER = 1000 VIEW HT = 13 AR = 15)

BACKGROUND READING = 47.
ANALYTE READING = 975.
BEC = 0.05065

NEB = 24

BACKGROUND READING = 29.
ANALYTE READING = 1096.
BEC = 0.02718

NEB = 26

BACKGROUND READING = 25.
ANALYTE READING = 957.
BEC = 0.02682

NEB = 28

BACKGROUND READING = 19.
ANALYTE READING = 756.
BEC = 0.02578

NEB = 28 AUTO-GAIN

BACKGROUND READING = 28.
ANALYTE READING = 1131.
BEC = 0.02539


NEB = 30

BACKGROUND READING = 22.
ANALYTE READING = 796.
BEC = 0.02842


NEB = 32

BACKGROUND READING = 18.
ANALYTE READING = 496.
BEC = 0.03766

FIGURE 25C. 2.

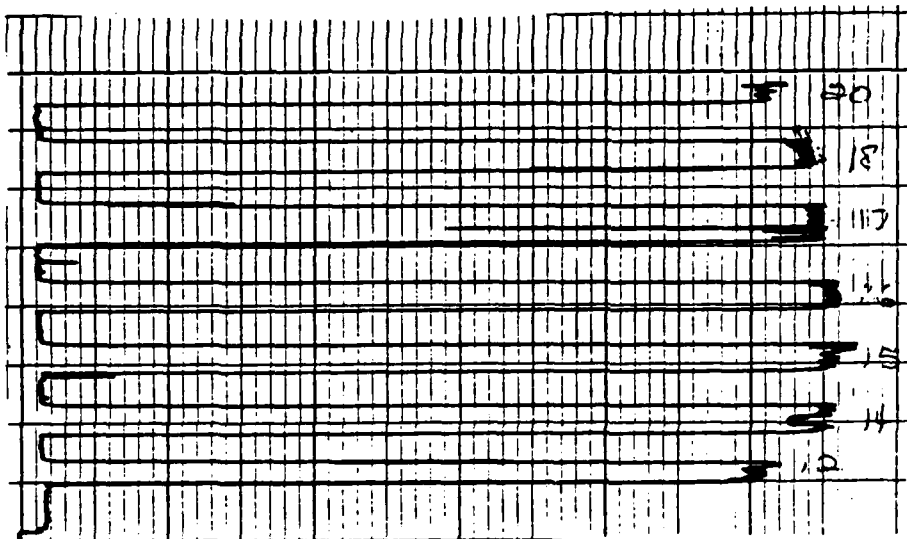

RESULTS OF FOURTH RUN - ARGON FLOW

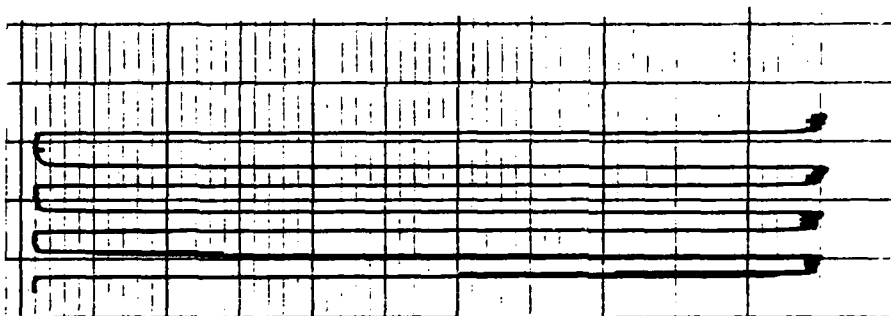

RESULTS OF FINAL RUN - TEST

VIEW HT = 13mm POWER = 1000W

NEBULIZER PRESSURE = 30 PSI

ARGON FLOW = 17 LITERS / MIN

FIGURE 25D. 1. Varying the Argon Flow to Optimize BEC

***** BEC CALCULATIONS *****

AR = 12 (POWER = 1000 VIEW HT = 13 NEB = 28)

BACKGROUND READING = 37.
ANALYTE READING = 1024.
BEC = 0.03749

AR = 14

BACKGROUND READING = 31.
ANALYTE READING = 1105.
BEC = 0.02886

AR = 15

BACKGROUND READING = 29.
ANALYTE READING = 1125.
BEC = 0.02646

AR = 16

BACKGROUND READING = 28.
ANALYTE READING = 1132.
BEC = 0.02536

AR = 17

BACKGROUND READING = 26.
ANALYTE READING = 1112.
BEC = 0.02394

AR = 18

BACKGROUND READING = 28.
ANALYTE READING = 1093.
BEC = 0.02629

AR = 20

BACKGROUND READING = 26.
ANALYTE READING = 1038.
BEC = 0.02569

FIGURE 25D. 2.

***** BEC CALCULATIONS *****

001 VIEW HT = 13 POWER = 1000 NEB = 28 AR = 17

BACKGROUND READING = 24.
ANALYTE READING = 1109.
BEC = 0.02212

002

BACKGROUND READING = 23.
ANALYTE READING = 1109.
BEC = 0.02118

003

BACKGROUND READING = 25.
ANALYTE READING = 1111.
BEC = 0.02302

004

BACKGROUND READING = 25.
ANALYTE READING = 1115.
BEC = 0.02294

FIGURE 25D. 3. Test Run with Final Torch Parameters

ERROR ANALYSIS

***** SN ***** SN ***** SN *****

5000 1000 200 50

SINGLE RUN 1	4.86 %	2.6 %	5.5 %	-104 %
SINGLE RUN 2	5.38 %	3.9 %	16 %	-8 %
METHOD RUN 1	9.1 %	21.6 %	68.5 %	62 %
METHOD RUN 2	5 %	11.6 %	0 %	4 %

***** CR ***** CR ***** CR *****

5000 1000 200 50

SINGLE RUN 1	2.9 %	.4 %	-5 %	-28 %
SINGLE RUN 2	4.28 %	4.5 %	4 %	-12 %
METHOD RUN 1	9.24 %	11.3 %	10 %	6 %
METHOD RUN 2	3.1 %	8.9 %	6 %	18 %

***** SI ***** SI ***** SI *****

5000 1000 200 50

SINGLE RUN 1	5.34 %	-13.7 %	-81 %	-678 %
SINGLE RUN 2	100 %	100 %	100 %	100 %
METHOD RUN 1	5.78 %	64.3 %	269 %	880 %
METHOD RUN 2	-4.66 %	70.1 %	222 %	880 %

***** ZN ***** ZN ***** ZN *****

5000 1000 200 50

SINGLE RUN 1	.7 %	.1 %	-4 %	-24 %
SINGLE RUN 2	.72 %	.5 %	-5.5 %	-24 %
METHOD RUN 1	3.52 %	5.9 %	3 %	-4 %
METHOD RUN 2	1.46 %	4 %	2 %	-8 %

***** PB ***** PB ***** PB *****

5000 1000 200 50

SINGLE RUN 1	-.16 %	8.5 %	14 %	208 %
SINGLE RUN 2	-100 %	-100 %	-100 %	-100 %
METHOD RUN 1	5.38 %	-7.9 %	-94 %	-270 %
METHOD RUN 2	4.16 %	-3.3 %	-32.5 %	-222 %

***** CU ***** CU ***** CU *****

5000 1000 200 50

SINGLE RUN 1	.92 %	-1.5 %	-13.5 %	0 %
SINGLE RUN 2	-1.08 %	.7 %	0 %	8 %
METHOD RUN 1	.94 %	1.5 %	7.5 %	14 %

METHOD RUN 2 1.16 % 1.9 % 13.5 % 42 %

***** NI ***** NI ***** NI *****

5000 1000 200 50

SINGLE RUN 1 1.3 % 2.6 % 4.5 % -22 %
SINGLE RUN 2 1.08 % 3.4 % 6 % 10 %
METHOD RUN 1 3.14 % 8.4 % 4 % 24 %
METHOD RUN 2 .58 % 3.6 % 13 % 6 %

***** AU ***** AU ***** AU *****

5000 1000 200 50

SINGLE RUN 1 1.82 % 4.9 % -4.5 % -46 %
SINGLE RUN 2 -100 % -100 % -100 % -100 %
METHOD RUN 1 2.58 % 3.4 % 8 % 26 %
METHOD RUN 2 -.28 % -.1 % -6.5 % -36 %

***** FE ***** FE ***** FE *****

5000 1000 200 50

SINGLE RUN 1 6.4 % 6.5 % 11 % 18 %
SINGLE RUN 2 -.2 % 1.1 % 4.5 % 22 %
METHOD RUN 1 4.58 % 7 % 11.5 % 32 %
METHOD RUN 2 .1 % 2.9 % -1 % -4 %

***** MG2 ***** MG2 ***** MG2 *****

5000 1000 200 50

SINGLE RUN 1 2.02 % 2.6 % -3 % 6 %
SINGLE RUN 2 -.14 % 2.4 % -3.5 % -10 %
METHOD RUN 1 6.78 % 9.1 % 7 % 14 %
METHOD RUN 2 3.38 % 5.3 % 4 % 10 %

***** PD ***** PD ***** PD *****

5000 1000 200 50

SINGLE RUN 1 -3.28 % -1.5 % 10 % -56 %
SINGLE RUN 2 -.46 % -1.9 % -9 % -176 %
METHOD RUN 1 6.96 % 6.9 % 10.5 % -72 %
METHOD RUN 2 4.68 % 4.5 % -6 % -48 %

***** CA2 ***** CA2 ***** CA2 *****

5000 1000 200 50

SINGLE RUN 1 -2.66 % -1.5 % -3 % 8 %
SINGLE RUN 2 -2.2 % 1.6 % -2.5 % 8 %
METHOD RUN 1 9.34 % 13.7 % 14.5 % 44 %

FIGURE 26B.

METHOD RUN 2 3.82 % 6.9 % 7 % 22 %

*****	AL2	*****	AL2	*****	AL2	*****
	5000	1000	200	50		
SINGLE RUN 1	.78 %	3.4 %	-10 %	-32 %		
SINGLE RUN 2	-1.66 %	-.7 %	-28.5 %	-126 %		
METHOD RUN 1	13.42 %	11.7 %	-2 %	-64 %		
METHOD RUN 2	3.46 %	2.1 %	-21 %	-114 %		

*****	NA	*****	NA	*****	NA	*****
	5000	1000	200	50		
SINGLE RUN 1	-.24 %	1.1 %	-4 %	-108 %		
SINGLE RUN 2	-.4 %	-1.8 %	-11 %	-164 %		
METHOD RUN 1	-3.34 %	-9.3 %	-5.5 %	-62 %		
METHOD RUN 2	2.12 %	-1.4 %	-40 %	-156 %		

*****	K	*****	K	*****	K	*****
	5000	1000	200	50		
SINGLE RUN 1	-.72 %	-12.9 %	-92 %	-282 %		
SINGLE RUN 2	-100 %	-100 %	-100 %	-100 %		
METHOD RUN 1	-1.44 %	-42.9 %	-172 %	-674 %		
METHOD RUN 2	3.94 %	-27.4 %	-280.5 %	-1166 %		

FIGURE 26C.

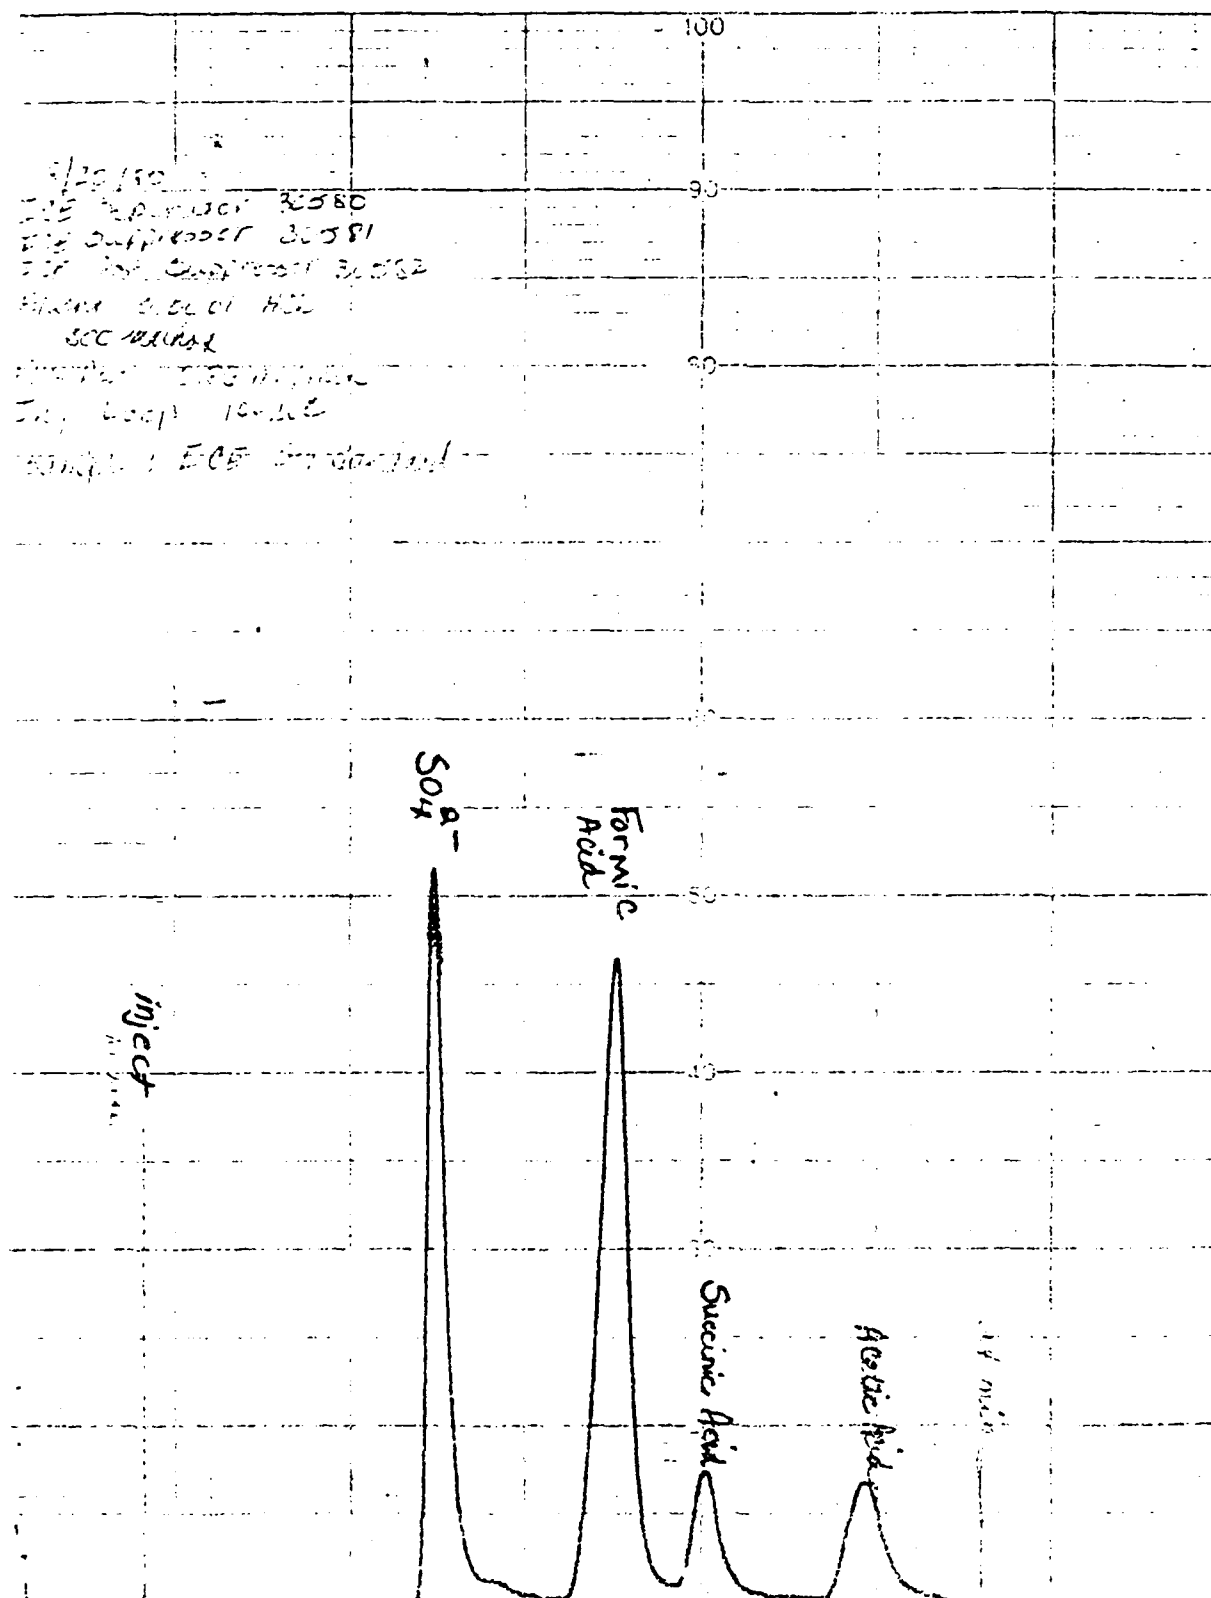


FIGURE 31. Analysis of a Standard Small Organic Anion Sample on the Ion Chromatograph.

column 30032
 detector 30170
 processor 30044
 100 μ mol/L
 150. 15V
 5.0 ANION SALT
 9/10/80

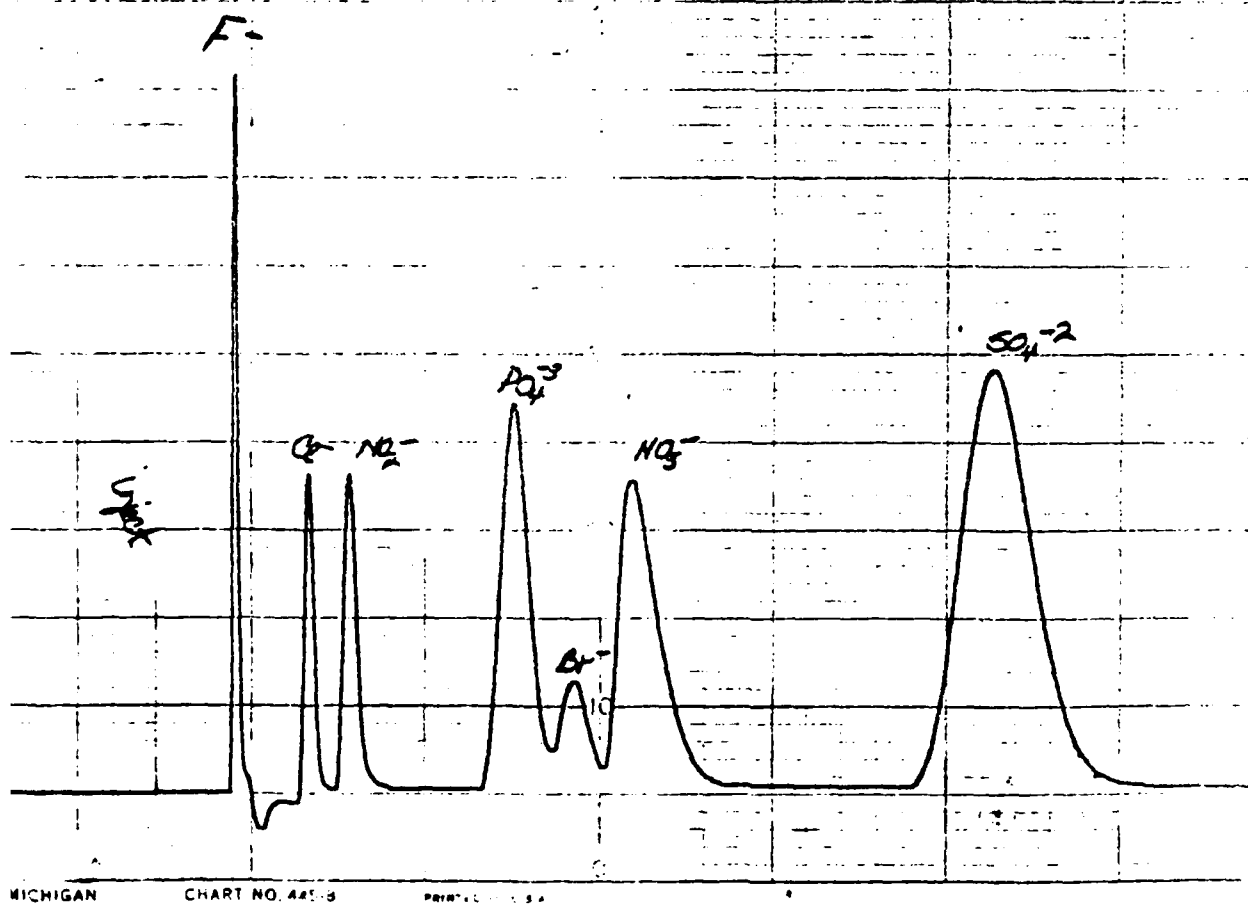


FIGURE 30. Analysis of a Standard Anion Sample on the Ion Chromatograph

3.2 THE ION CHROMATOGRAPH

The second most important analytical instrument in the contaminant profiling system is the ion chromatograph.

The ion chromatograph (IC) is the system component being used to detect and quantify individual negative ionic species (anions).

The next four figures deal with development work on the IC. Figure 30 illustrates the analysis of a standard anion sample using appropriate anion columns. Note that the peaks indicating each kind of anion are well defined and exhibit good resolution. The following anions with their respective concentrations were separated by the IC: fluoride (F^-), 3 ppm; chloride (Cl^-), 4 ppm; nitrite (NO_2^-), 10 ppm; phosphate (PO_4^{3-}), 50 ppm; bromide (Br^-), 10 ppm; nitrate (NO_3^-), 30 ppm; and sulfate (SO_4^{2-}), 50 ppm. Figure 31 presents the analysis of a standard small organic anion sample using different columns (ICE columns; ICE = Ion Chromatograph Exclusion Mode). Again, excellent resolution is obtained for each peak. The following small organic anions with their respective concentrations were separated by the IC: sulfate (SO_4^{2-}), 10 ppm (the only nonorganic); formate ($HCOO^-$), 20 ppm; succinate [CH_2COO^-]₂, 20 ppm; and acetate (CH_3COO^-), 20 ppm.

Naturally, it will be necessary to run such standards each day analyses are performed in order to calibrate the IC to run unknown samples. Once the standards are run, then unknown samples can be. The unknown samples will be extracts made from production PW. The computer-integrator (C/I) attached to the IC is used to make the identification and compute the concentrations of ionic species found in the unknown sample. Basically, the C/I compares retention times of ionic species in the unknown sample with the retention times of ionic species in the standard. If the retention time⁴ of an ionic species in the unknown sample is the same as the retention time of chloride ion in the standard, say, then the unknown sample has chloride ion in it. In this way qualitative identification is made. To determine the quantitative amount, the C/I integrates the areas under the curves for the ionic species in the standard and compares these to the integrated areas under the curves for ionic species in the unknown sample. Figures 32 and 33 show two successive analyses of the same flux, in this case a water-based flux. An analysis was made only of the common anions, not small organic acid anions. In the case of this particular flux, only fluoride (F^-) and chloride (Cl^-) ion were detected by the IC. The results are:

<u>6</u>	Phosphorus, P ₃	}	Analytical group 2, turret #2
<u>7</u>	Silicon, Si		
<u>8</u>	Calcium, Ca		
<u>9</u>	Sodium, Na		
<u>10</u>	Potassium, K		
<u>11</u>	Copper, Cu		
<u>12</u>	Zinc, Zn	}	Analytical group 3, turret #3
<u>13</u>	Lead, Pb		
<u>14</u>	Tin, Sn		

As noted, each analytical group has corresponding to it a turret number.

The atomic absorption operating parameters are shown in Figures 27 A, 27 B, and 27 C. Taking the first element, chromium, Cr, its absorbance wavelength is 357.9 nm; lamp 1 is the Cr lamp operating on a current of 25mAmps; 3 standards are used - 100 ppb, 25 ppb, 10 ppb; the operation mode is AA-BC (background correction)/concentration; the integration time is 6 sec; low (L) slit widths used for furnace work; 3 replicates are used to determine the mean and the coefficient of variation (CV) is determined.

At this point, it becomes necessary to determine the maximum analyte level permissible for each of the above species as determined by the achievement of a 0.6 Absorbance (ABS) signal. Due to relatively high analytical limits for certain elements (notably Si, K, Pb, and Sn) it is likely that less sensitive lines for these elements will allow avoidance of gaps in their analytical range.

Figures 28 and 29 A and 29 B illustrate the preliminary HGA-500 (graphite furnace) settings for all analyte species.

This concludes the section on the inductively-coupled plasma emission spectrophotometer/graphite furnace. It is now appropriate to turn to the development of the ion chromatograph.

ELEMENT	TYPE TUBE	INJ. VOL.	STEE	TEMP	RAMP	HOLD	GAS	REC.	READ
Ni (AA-BG)	pyro coated	20	1	110	10	10			
			2	250	10	5			
			3	1000	10	5			
			4	2300	0	5	50	-10	X
			5	20	1	5		X	
Au (AA-BG)	pyro coated	20- 100 (greater volume for sensitivity)	1	110	10	10	(if >20ul injection volume used, add 10 sec to steps 1-3.)		
			2	250	10	5			
			3	600	10	10			
			4	1600	0	5	0	-10	X
			5	2600	1	5		X	
Fe (AA-BG)	pyro coated	20	1	110	10	10			
			2	250	10	5			
			3	1200	10	10			
			4	2000	0	5	50	-10	X
			5	20	1	5		X	
Mg (AA-BG)	pyro coated	20	1	110	10	10			
			2	250	10	5			
			3	1000	10	10			
			4	2400	1	5	50	-10	X
			5	20	1	5		X	
Pd				Should be determined on the ICP/5000					
Ca (AA-BG)	standard	20	1	110	10	10			
			2	250	10	5			
			3	1200	10	5			
			4	2600	1	5	50	-10	X
			5	20	1	5		X	
Al (AA-BG)	pyro coated	20	1	110	10	10			
			2	250	10	5			
			3	1500	10	5			
			4	2400	0	5	50	-10	X
			5	20	1	5		X	
Na (AA-BG)	standard	20 severe environmental contamination	1	110	10	10			
			2	250	10	5			
			3	900	10	5			
			4	2600	1	5	50	-10	X
			5	20	1	5		X	
K (AA-BG)	standard	20	1	110	10	10			
			2	250	10	5			
			3	950	10	5			
			4	2600	1	5	50	-10	X
			5	20	1	5		X	

ELEMENT	TYPE TUBE	ul INJECTION VOL.	STEP	TEMP	RAMP	HOLD	GAS	REC.	READ
Sn (AA-BG)	standard	20	1	110	10	10			
			2	250	10	5			
			3	500	5	5			
			4	2500	1	5	50	-10	X
			5	20	1	5		X	
Cr (AA-BG)	pyro coated	20	1	110	10	10			
			2	250	10	5			
			3	1200	10	5			
			4	2300	0	5	0	-10	X
			5	20	1	5		X	
Si (AA-BG)	standard	20	1	110	10	10			
			2	250	10	5			
			3	1400	10	5			
			4	2700	0	5	50	-10	X
			5	20	1	5		X	
Zn (AA-BG)	standard	20 severe environmental contamination	1	110	10	10			
			2	250	10	5			
			3	400	5	5			
			4	2200	1	5	50	-10	X
			5	20	1	5		X	
Pb (AA-BG) EDL	standard	20	1	110	10	10			
			2	250	10	5			
			3	500	5	5			
			4	2300	1	5	2-300	-10	X
			5	20	1	5		X	
P (AA-BG) EDL	standard -ADD EQUAL VOL. OF .1% La as La(NO ₃) ₂	20	1	110	10	10			
			2	250	10	5			
			3	1400	10	5			
			4	2700	0	5	50	-10	X
			5	20	1	5		X	
Cu (AA-BG)	standard	20	1	110	10	10			
			2	250	10	5			
			3	900	10	5			
			4	2600	1	5	50	-10	X
			5	20	1	5		X	

FIGURE 29A. Preliminary Graphite Furnace Settings
for Analyte Species (continued)

ELEMENT	PYRO COATED TUBE	ATOMIZE TEMP	RAMP	SET PHOTODIODE AND ATOMIZE TEMP	
Cr	(Specify Ringsdorf tubes) ↓	2300	0	2400	ANALYTICAL GROUP 1 5000 set with 6 sec integration time, peak height or peak area
Ni		2300	0	2400	
Au		1600	0	2400	
Fe		2000	0	2400	
Al		2400	0	2400	
Mg		2400	1	----	
P	Standard tube ↓	2700	1	2700	ANALYTICAL GROUP 2 5000 set with 6 sec t, peak height or peak area
Si		2700	0	2700	
Ca		2600	1	----	
Na		2600	1	----	
K		2600	0	----	
Cu		2600	1	----	
Zn	Standard tube ↓	2200	1	----	ANALYTICAL GROUP 3 5000 set with 6 sec t, peak height or peak area
Pb		2300	1	----	
Sn		2500	1	----	

MULTI-ELEMENT ANALYSIS

FIGURE 28. Preliminary Graphite Furnace Settings for Analyte Species

ANALYTICAL GROUP 3; TURRET #3

PARAMETERS

=====

12:07

81/06/10

7N IN PROGRAM MEMORY #1

WAVELENGTH	213.9	LAMP	1	CURRENT	0	INT TIME	6
STATS CV		AVERAGE	3	MODE AA-BG, CONC		SIGNAL PEAK HT	
STD 1	100	STD 2	25	STD 3	10	SLIT	0.70 L

PB IN PROGRAM MEMORY #2

WAVELENGTH	217	LAMP	2	CURRENT	0	INT TIME	6
STATS CV		AVERAGE	3	MODE AA-BG, CONC		SIGNAL PEAK HT	
STD 1	1000	STD 2	200	STD 3	50	SLIT	0.70 L

SN IN PROGRAM MEMORY #3

WAVELENGTH	224.6	LAMP	3	CURRENT	0	INT TIME	6
STATS CV		AVERAGE	3	MODE AA-BG, CONC		SIGNAL PEAK HT	
STD 1	1000	STD 2	200	STD 3	50	SLIT	0.70 L

FIGURE 27C. Analytical Group 3,
Turret #3

ANALYTICAL GROUP 2; TURRET #2

PARAMETERS
=====

12:07 81/06/10

P IN PROGRAM MEMORY #1			
WAVELENGTH 213.6	LAMP 1	CURRENT 0	INT TIME 6
STATS CV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 1000	STD 2 250	STD 3 100	SLIT 0.20 L

SI IN PROGRAM MEMORY #2			
WAVELENGTH 251.6	LAMP 2	CURRENT 40	INT TIME 6
STATS CV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 2000	STD 2 500	STD 3 250	SLIT 0.20 L

CA IN PROGRAM MEMORY #3			
WAVELENGTH 422.7	LAMP 3	CURRENT 10	INT TIME 6
STATS CV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100	STD 2 25	STD 3 10	SLIT 0.70 L

NA IN PROGRAM MEMORY #4			
WAVELENGTH 589	LAMP 4	CURRENT 8	INT TIME 6
STATS CV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100	STD 2 25	STD 3 10	SLIT 0.40 L

K IN PROGRAM MEMORY #5			
WAVELENGTH 766.5	LAMP 5	CURRENT 0	INT TIME 6
STATS CV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 1000	STD 2 200	STD 3 50	SLIT 0.70 L

CU IN PROGRAM MEMORY #6			
WAVELENGTH 324.7	LAMP 6	CURRENT 15	INT TIME 6
STATS AV	AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100	STD 2 25	STD 3 10	SLIT 0.70 L

FIGURE 27B. Analytical Group 2,
Turret #2

ANALYTICAL GROUP 1; TURRET #1

PARAMETERS
=====

12:07 81/06/10

CR IN PROGRAM MEMORY #1				
WAVELENGTH	357.9	LAMP 1	CURRENT 25	INT TIME 6
STATS CV		AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100		STD 2 25	STD 3 10	SLIT 0.70 L

NI IN PROGRAM MEMORY #2				
WAVELENGTH	232	LAMP 2	CURRENT 25	INT TIME 6
STATS CV		AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100		STD 2 25	STD 3 10	SLIT 0.20 L

AU IN PROGRAM MEMORY #3				
WAVELENGTH	242.8	LAMP 3	CURRENT 10	INT TIME 6
STATS CV		AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100		STD 2 25	STD 3 10	SLIT 0.70 L

FE IN PROGRAM MEMORY #4				
WAVELENGTH	248.3	LAMP 4	CURRENT 30	INT TIME 6
STATS CV		AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100		STD 2 25	STD 3 10	SLIT 0.20 L

AL IN PROGRAM MEMORY #5				
WAVELENGTH	309.3	LAMP 5	CURRENT 0	INT TIME 6
STATS CV		AVERAGE 3	MODE AA-BG, CONC	SIGNAL PEAK HT
STD 1 100		STD 2 25	STD 3 10	SLIT 0.70 L

FIGURE 27A. Analytical Group 1,
Turret #1

Condition 1 - Analyte concentration gap between torch and furnace.

$FLL \leq \text{Concentration (1) of analyte species}_1 \leq FUL <$

$\text{Concentration (2) of analyte species}_1 < TLL \leq$

$\text{Concentration (3) of analyte species}_1.$

That is, since concentration (2) falls somewhere between the furnace upper limit (FUL) for that species and the torch lower limit (TLL), concentration (2) would be undetectable by either furnace or torch. Steps are being taken to avoid this situation. What we want to achieve is this:

Condition 2 - No analyte concentration gap between torch and furnace.

$FLL \leq \text{Concentration (1) of analyte species}_1 \leq FUL$

$\approx TLL \leq \text{Concentration (2) of analyte species}_1$

The use of the symbol \approx indicates there is no concentration range lying between the FUL and the TLL, hence, no gap.

As a departure point for the development, the principal spectral lines for each analyte species have been chosen per the HGA-500 (graphite furnace) Methods Development Manual. Also it must be remembered that the graphite furnace method utilizes atomic absorption as opposed to the torch which is atomic emission. This was the principal reason for choosing the ICP-5000, it combined the analytical capabilities of both atomic emission and atomic absorption. The real contaminant profiling (C/P) system lower limits are the furnace lower limits (FLLs). The FLLs are expected to be about 1 part-per-billion (1 ppb) for most of the analyte elements.

The fact that we are using atomic absorption techniques for the furnace dictates that a light source (analyte lamp) having as its cathode the analyte element in question must be used for each separate analyte element to be detected by use of the graphite furnace. These lamps must be loaded into a lamp turret (maximum no. of lamps per turret = 6). It is assumed that we will be operating in the non-linear portion of the absorbance curve for most elements. Therefore, a multilevel calibration with non-linear curve fitting has been chosen. This requires that several analyte standards be run for each element. The analyte species that will be detected by the graphite furnace are:

1 Chromium, Cr

2 Nickel, Ni

3 Gold, Au

4 Iron, Fe

5 Aluminum, Al

} Analytical group 1, turret #1

Regarding the type of line, symbols I and A, ion lines (I) are the better of the two. Ion lines are less sensitive to torch conditions; therefore, elements determined using one of their ion lines are less likely to exhibit significant analysis error. To achieve ion line analyses, low gas flows, low nebulizer pressures, and high torch viewing heights are necessary. The latter three conditions result in longer residence times of the sample's elemental species in the torch flame, and longer residence times are more likely to give rise to the formation of analyte ions. In short, it is easier to optimize the torch running conditions using ion lines. However, for some elements, such as gold, palladium, sodium, etc., atom lines must be used since either there are no ion lines available for such elements within the ICP 5000's wavelength range capacity (175 to 900 nm) or the ion lines, if they exist, are of too low sensitivity for the 5000. In either case, one of the analyte's atom lines must be used.

Regarding the TLLs, it must be kept in mind that these do not represent the C/P system's lower limits for such analyte species. Rather, the TLLs serve merely to mark the necessary switch from torch analysis mode to graphite furnace analysis mode. That is, if a given analyte element's concentration in a PW extract is less than its TLL, the MINC will prompt the analyst that further analysis will be required on the ICP 5000 graphite furnace, which has the capability of detecting concentrations of elements less than the TLLs. For example, suppose during a torch analysis the concentration of copper, Cu, is below 75 ppb (0.075 ppm). This information would be communicated to the MINC which would then call the graphite furnace routing (FURNCE) for analysis of copper. Thus, the graphite furnace lower limits (FLLs) rather than the torch lower limits (TLLs) represent the C/P system's real lower limits. The FLLs are about 1 ppb for most of the analyte elements.

As suggested before, a suitable data base of PW contaminants ought to be established. This data base would relate specific contaminant species and their amounts in PW extracts to PW manufacturing processes and to PW failures, both in the test mode and the field service mode. Building such a data base will allow C/P to be used as an improved statistical control tool and enable the PW industry to proceed in confidence (statistically speaking) to manufacture PWAs with increased component densities and decreased line widths/line spacings. Such PWAs will be mandatory for high reliability military/aerospace advanced missile systems.

The analytical limits for the ICP torch have been established. These are the torch lower limits (TLLs). Methods had to be developed for the graphite furnace that will permit a continuous range of instrumental analytical capability of all analyte levels. That is, the furnace upper limits (FULs) should be as coterminous as possible with the TLLs for each analyte species; otherwise, a concentration gap would exist in which the analyte element(s) in question would be undetectable by either torch or furnace. This can perhaps more readily be illustrated like this:


Table 12

Element ²	Torch Lower Limit (TLL), in ppb	Wavelength (w) in nm	Type of Line ¹
(1) Tin, Sn	1000	189.99	I
(2) Chromium, Cr	50	205.55	I
File 1 (3) Silicon, Si	3000	212.41	A
(4) Zinc, Zn	50	213.86	A
(5) Lead, Pb	1000	220.35	I
(6) Copper, Cu	75	224.70	I
(7) Nickel, Ni	50	231.60	I
File 2 (8) Gold, Au	100	242.80	A
(9) Iron, Fe	50	259.94	I
(10) Magnesium, Mg	50	279.55	I
(11) Palladium, Pd	200	340.46	A
(12) Calcium, Ca	50	393.37	I
File 3 (13) Aluminum, Al	200	396.15	A
(14) Sodium, Na	200	589.59	A
(15) Potassium, K	1000	766.50	A

refers to a single file run of 15 elements and the phrase "method run" to one of the three files of 5 elements. Actually, the results in the error analysis are averages, i.e., arithmetic means. Three separate readings in each case were averaged. Consider the case of tin, Sn, the first element presented in Figure 26A. At 5000 ppb for single run 1, the error of 4.86% is in reality the arithmetic mean of three (3) separate readings. Hence, in point of fact for each numerical error datum there were three (3) readings per element per concentration per file. The results of each analysis were automatically compared by the C/P system's MINC minicomputer to the known concentration. The MINC then computed the error percents (3) for each analysis, computed the arithmetic mean for each analysis, and printed the results in hard-copy form utilizing the C/P system's on-line printer. The torch lower limits (TLLs) are presented in Table 12 below in order of ascending analyte wavelength.

Spectra-Physics

091

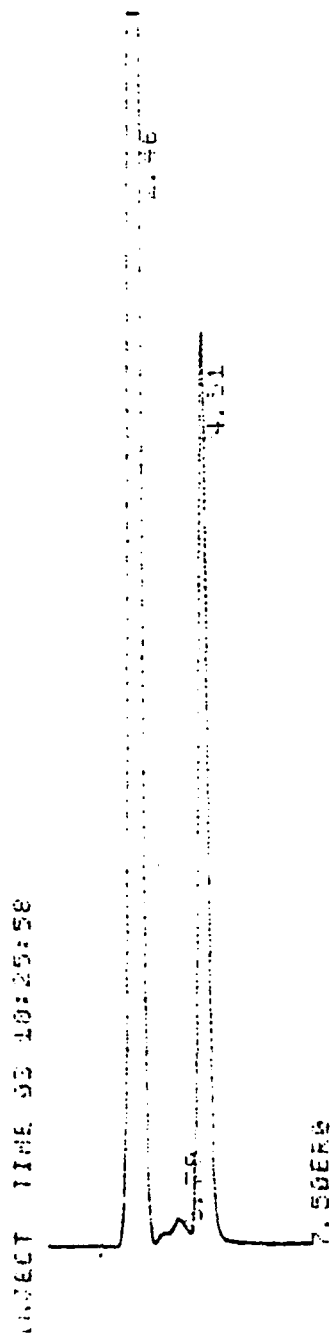

RECEIVED FLUX FORMULA NO. 1300 92 10:25:58

FILE 1 METHOD 5. RUN 3 INDEX 1


ANALYST: PIRNE

SAMPLE 1 FLUX SAMPLE

1. 2. 3.

NAME	CONC	RET	AREA	BC	RF
1	24.172	2.79	49805444	012232626.	
2	0.	4.51	247531	02	
3	14.624	7.51	12715247	03	869624.25
TOTALS	38.797		61768222		

FIGURE 32. Analysis of Water-Based Flux, #1

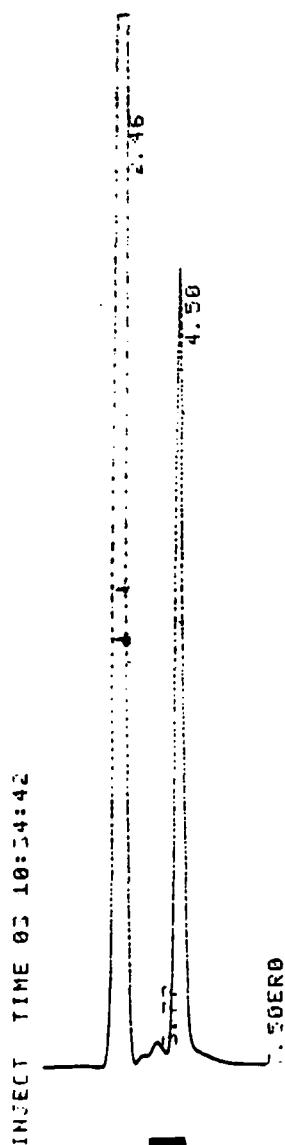

PESTER FLUX FORMULA NO. 2 03 10:34:42				
FILE 1	METHOD 5.	RUN 4	INDEX 1	
ANALYST: DIANE				
SAMPLE 2	FLUX SAMPLE			
SA	IS	IF		
1.	0.	0.		
NAME	CONC	RT	AREA	EC PF
F	23.421	2.46	48698219	012221618.
2	0.	4.50	207095	02
CL	14.916	4.50	12573379	02 869634.25
TOTALS	38.337		62078692	

FIGURE 33. Analysis of a Water-Based Flux, #2

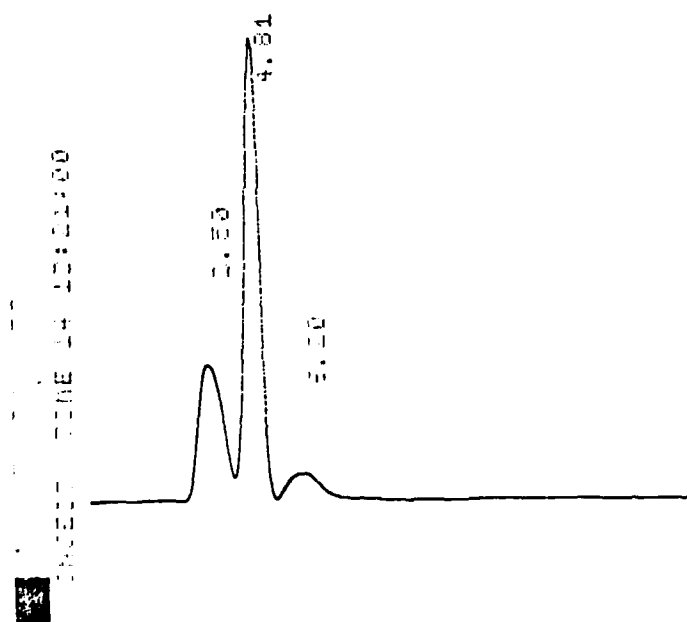


FIGURE 34., Chromatogram of a Typical RMA Flux



FIGURE 35. Chromatogram of a Typical RMA Flux
Spiked with 10 ppm Cl^-

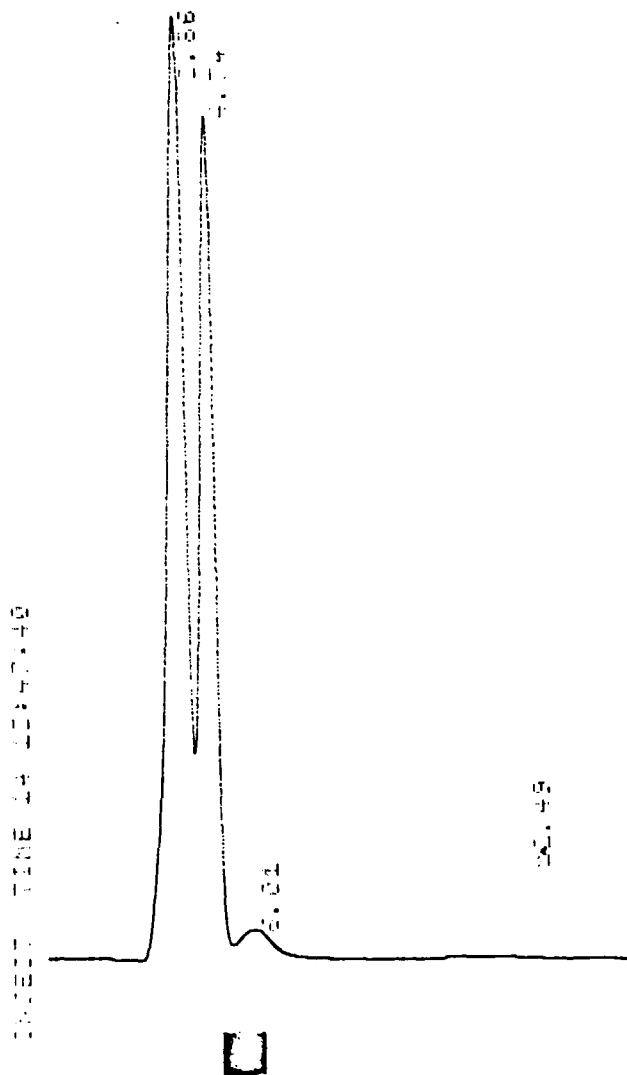


FIGURE 36. Chromatogram of a Typical RMA Flux Spiked with 20 ppm F^-


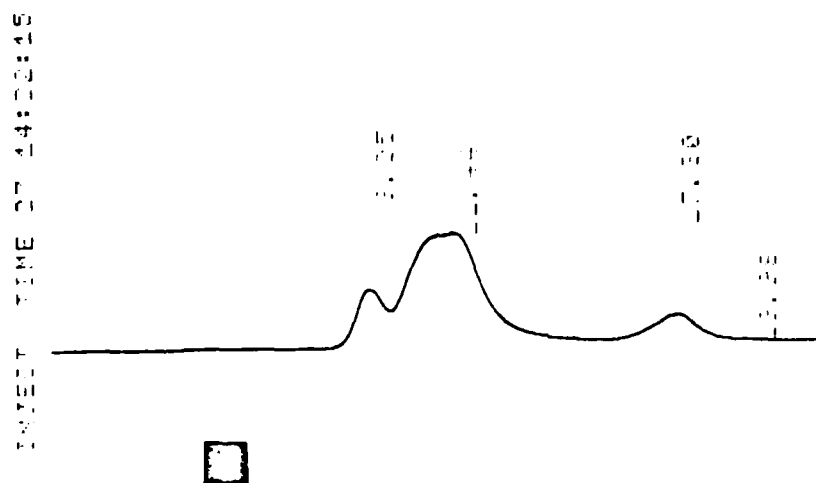


FIGURE 37. Chromatogram of a Typical RMA Flux Using ICE Column to Detect Small Organic Acids

INJECT TIME 12 13:18:46

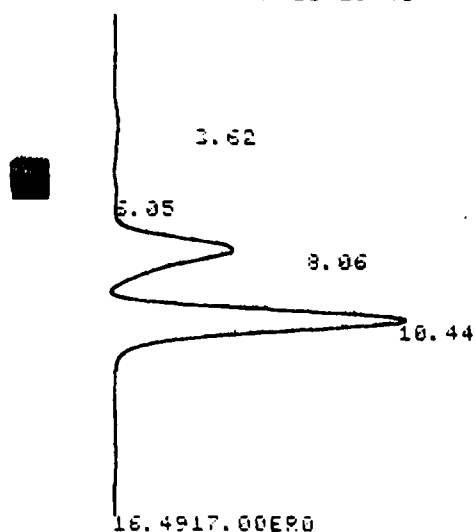

ANIONS

12 13:18:46

FILE 1 METHOD 5. RUN 2 INDEX 2 CALIB

ANALYST: D.HILLYER


NAME	CONC*	RT	AREA	BC	RF
1	0.	3.62	125072	01	
2	0.	6.05	67889	02	
F	250.	8.06	3475262	02	13893.048
CL	500.	10.44	6984416	03	12968.832
3	0.	16.49	56038	21	
TOTALS	750.		10796677		

NEW FILE:

NAME	RF	RT
F	14263.598	8.05
CL	14527.652	10.42

FIGURE 38. Analysis of a Standard of Cl⁻ and F⁻ on the Ion Chromatograph

INJECT TIME 12 13:46:14

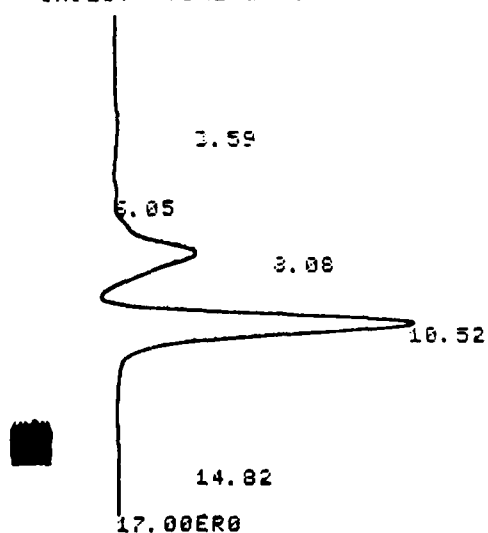

ANIONS

12 13:46:14

FILE 1 METHOD 5. RUN 3 INDEX 1

ANALYST: D. HILLYER

SAMPLE 1 KESTER RMA


SA 1. IS 0. AF 0.

NAME	CONC *	RT	AREA BC	RF
1	0.	3.59	122334 01	
2	0.	6.05	110121 02	
F	215.728	9.08	3877059 02	14263.598
CL	508.458	10.52	7086704 03	14527.652
' 5	0.	14.82	54002 21	

TOTALS 724.196 10760220

FIGURE 39. Analysis of a Flux Sample on the Ion Chromatograph, #1

INJECT TIME 12 14:29:15

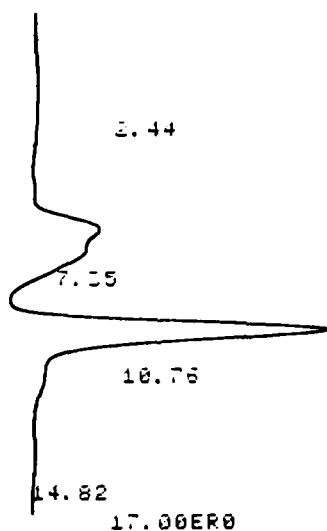

ANIONS

12 14:29:15

FILE 1 METHOD 5. RUN 4 INDEX 1

ANALYST: D. HILLVER

SAMPLE 2 KESTER RMA

SA IS XF
1. 0. 0.

NAME	CONC*	RT	AREA BC	RF
1	0.	2.44	1300483 02	
2	333.441	7.35	4756062 02	14263.598
3	534.99	10.76	7772152 02	14527.652
4	0.	14.82	264370 23	
TOTALS	868.431		14033067	

FIGURE 40. Analysis of a Flux Sample on the Ion Chromatograph, #2

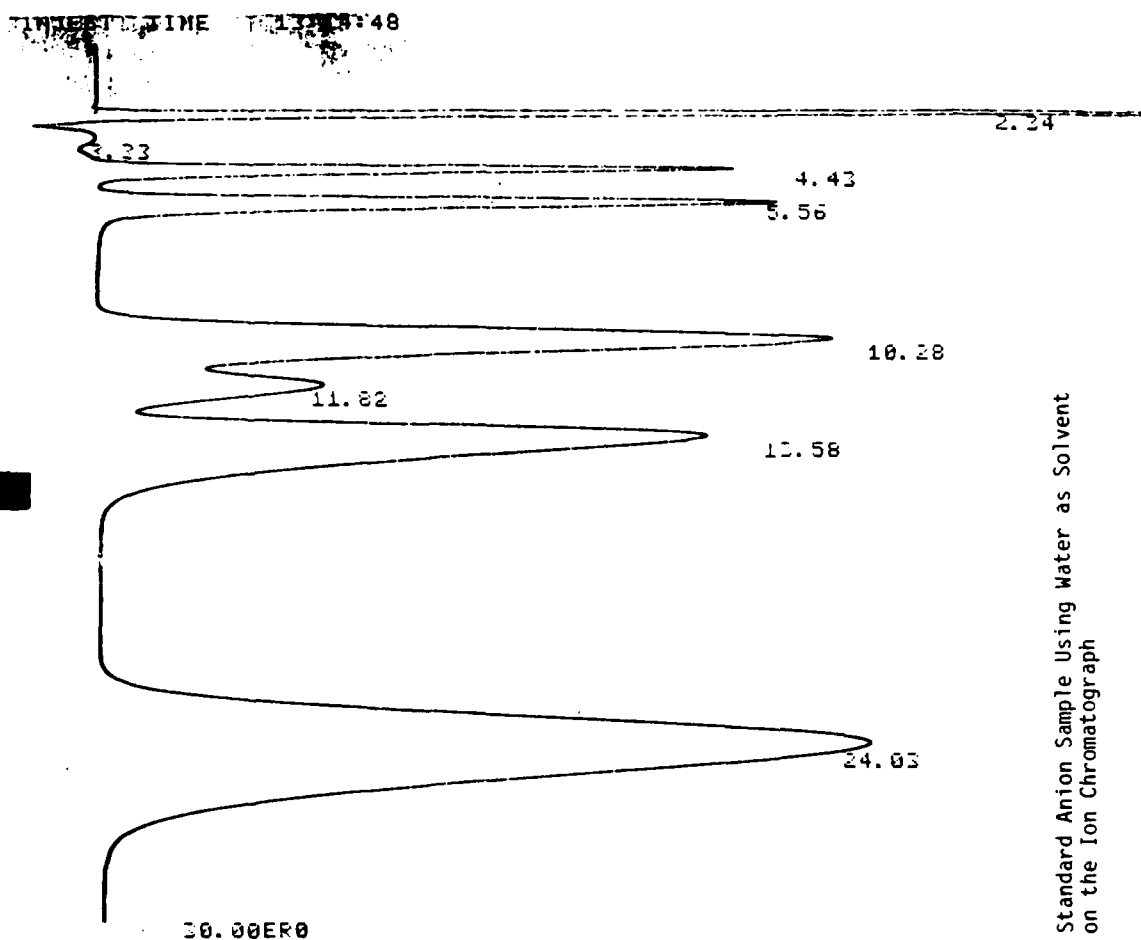


FIGURE 41. Standard Anion Sample Using Water as Solvent on the Ion Chromatograph

COMMON ANIONS

13:14:48

FILE 1 METHOD 5. RUN 8 INDEX 1

ANALYST: VK

SAMPLE 1 SAMPLE

SA IS XF
1. 0. 0.

NAME	CONC	RT	AREA	BC	RF
FL	1.819	2.24	6451751	012210309.	
2	0.	3.23	885841	02	
CL	4.207	4.43	6396565	021520287.75	
NO2	10.025	5.56	8255665	03 823508.9	
PO4	47.975	10.28	19276823	02 401813.54	
BF	9.778	11.82	5700875	02 583036.4	
NO3	29.095	13.58	22170529	03 762000.433	
PO4	48.194	24.03	50521410	011048300.06	

ANIONS 13 13:25:13

FILE 1 METHOD 5. RUN 4 INDEX 1

ANALYST: D.H.

SAMPLE 2 SAMPLE 2

SA 1. IS 0. KF 0.

NAME	CONC	RT	AREA	BC	RF
F	3.441	7.96	1856120	02	539354.667
CL	5.444	10.25	3043975	03	559133.75
NO2	13.744	14.68	19001469	011382530.8	
SO4	80.497	40.73	30180821	21	375032.22
TOTALS	103.126		54050405		



FIGURE 42. Standard Anion Sample Using 50% IPA/50% H2O as Solvent on the Ion Chromatograph

	<u>Analysis 1</u>	<u>Analysis 2</u>
Concentration of F ⁻	21.372 ppt	21.413 ppt
Concentration of Cl ⁻	14.621 ppt	14.918 ppt

where ppt = parts-per-thousand. Note the excellent reproducibility. Also note the high quantities of F⁻ and Cl⁻. The strongly reinforces the point that such fluxes are extremely corrosive.

The next four figures, Figures 34-37, illustrate some of the work performed on the IC in the ongoing attempt to characterize RMA fluxes. As remarked previously, a great deal of developmental work must be done to satisfactorily characterize rosin-base fluxes. Figure 34 shows a chromatogram of a typical RMA flux run on the IC using 50% H₂O/50% IPA. The flux was run through the standard anion columns. Recall that such columns are to be used to detect such species as: fluoride (F⁻), chloride (Cl⁻), nitrite (NO₂⁻), phosphate (PO₄³⁻), bromide (Br⁻), nitrate (NO₃⁻), and sulfate (SO₄²⁻). Note that the flux is chiefly characterized by two peaks, one at 3.50 minutes and a second at 4.81 minutes.

Figure 35 is the same flux sample as in Figure 34, except that the sample was spiked with 10 ppm Cl⁻. As can easily be discerned by the figure, the second peak is considerably larger indicating that the component of the flux represented by the second peak is Cl⁻. Figure 36 is the same flux sample as in Figure 34, except that the sample was spiked with 20 ppm F⁻. Now the first peak seen in Figure 34 is considerably larger, indicating that F⁻ is a component of the flux represented by the first peak.

Figure 37 shows the same flux run through the ICE columns to detect small organic acids, etc. Note that three peaks appear although they are relatively poorly defined. Their identity as yet is not known.

On the IC one of the major developmental procedures was to attempt to condition the chromatographic columns to isopropyl alcohol (IPA). The columns used with the Dionex IC are normally run with water only as the solvent. 50% IPA/50% H₂O was tried as a solvent to run flux samples. The columns had to be conditioned to IPA gradually or the column resins would have swelled. Then the pressure would have become too great to run the samples.

By using a concentrator column, it is possible to carry analyses of samples on the IC into the parts-per-billion (ppb) range. Figure 38 represents the analysis of a standard with a known concentration of fluoride (F^-) ion and chloride (Cl^-) ion. The standard contained 250 ppb F^- and 500 ppb Cl^- ; it was prepared using 50% IPA/50% H_2O as the solvent. The standard was used to calibrate the SP 4100 Computing Integrator. A sample of an RMA flux was then run. The flux sample was prepared by diluting 1 ml (milliliter) of flux to 1000 ml in 50% IPA/50% H_2O . Figures 39 and 40 represent two successive analyses of the same flux sample. Note the data following each chromatogram under the column headed "CONC". It is seen that the F^- concentration in the two runs is 333 ppb and 215 ppb. The large variation in the F^- concentration for the same sample confirms the fact that the concentration column cannot be used to quantify the amount of F^- . The F^- ion, unlike other anions, is not retained on the anion separator columns; therefore, during the concentration column loading process much of the F^- is flushed out as waste. This suggests it will not prove feasible to quantify F^- concentrations <1-4 ppm. However, it will still be feasible to detect F^- in the ppb range qualitatively. The chloride, Cl^- , concentrations for the two runs are 508 ppb and 534 ppb, which agree within 4.7%.

As pointed out, the chromatographic columns of the ion chromatograph (IC) had to be conditioned to isopropyl alcohol (IPA). The columns used with the IC are normally run with water only as solvent. A solvent mixture composed of 50% IPA/50% H_2O was intended to be used for samples having rosin flux.

Figure 41 represents a chromatogram obtained when a standard anion sample is run on the IC using water as the solvent for both the sample run and the eluent. The sample contained seven components - fluoride (F^-), chloride (Cl^-), nitrite (NO_2^-), phosphate (PO_4^{3-}), bromide (Br^-), nitrate (NO_3^-), and sulfate (SO_4^{2-}). The amount of each component in the sample was: F^- , 3 ppm; Cl^- , 4 ppm; NO_2^- , 10 ppm; PO_4^{3-} , 50 ppm; Br^- , 10 ppm; NO_3^- , 30 ppm; SO_4^{2-} , 50 ppm. It can be seen from the chromatogram that each component has a corresponding peak which is well defined and that the concentrations reported agree closely with the actual concentrations. The chromatogram exhibits good baseline resolution. The time necessary to complete the run was 30 minutes.

Figure 42 represents a similar standard anion sample. The major difference between this and the sample used for Figure 41 is that PO_4^{3-} was left out and the solvent used was 50% IPA/50% H_2O . It can be seen that the first two peaks representing F^- and Cl^- are much smaller and less well defined than is seen in Figure 41. Judging from the size of the third peak and the fact that it shows a shoulder peak on the right, it is thought this peak represents NO_2^- , Br^- and NO_3^- , all eluting at approximately the same time. The last peak, that of SO_4^{2-} , is much broader and less well defined than that seen in Figure 41. The reason why peaks are less well defined in 50% IPA/50% H_2O is because IPA represses ionization of the sample

components. The run time necessary for this sample was 55 minutes. This increased run time is because the flow rate must be reduced since IPA increases the back pressure. Column breakage may occur if the flow rate is not adjusted properly.

From the information supplied by the two chromatograms, it is evident that there are many disadvantages using 50% IPA/50% H₂O as the solvent for the IC. Chief among these are:


- 1 smaller, less well defined peaks on the chromatogram
- 2 poor separation of components into distinct peaks (NO₂⁻, Br⁻, NO₃⁻)
- 3 longer run time.

Using 50% IPA/50% H₂O as solvent, it will probably not be possible to carry analyses of samples on the IC into the parts-per-billion (ppb) range. This is truly unfortunate. To get away from using IPA in the solvent, i.e., using pure water as solvent, is one of the principal reasons using a water soluble flux is highly recommended. One is definitely not going to obtain as good results using 50% IPA/50% H₂O as one would using pure water.

The use of 50% isopropyl alcohol (IPA)/50% water as a solvent system for cleaning PW samples having rosin flux on them was mentioned. There are, however, attendant problems of a serious nature using IPA as was pointed out.

Further, a solvent system of 50% IPA/50% H₂O proved unsuitable as the solvent matrix for the metallic and quasimetallic species that must be aspirated through the nebulizer of the ICP 5000 torch in order that the species' spectral properties can manifest themselves. Serious torch instabilities occurred causing the torch to extinguish suddenly. Because of these attendant difficulties, an alternative method was to solubilize any remaining rosin flux on the PWA at hand.

Two approaches seemed viable. Rosin, of course, is a complex mixture of organic acids, the principal constituent of which is abietic acid, having the following structural formula:

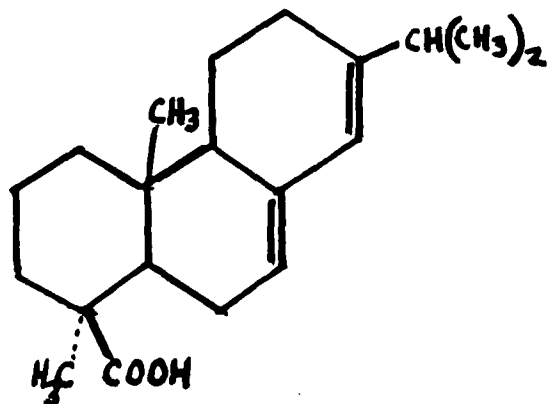

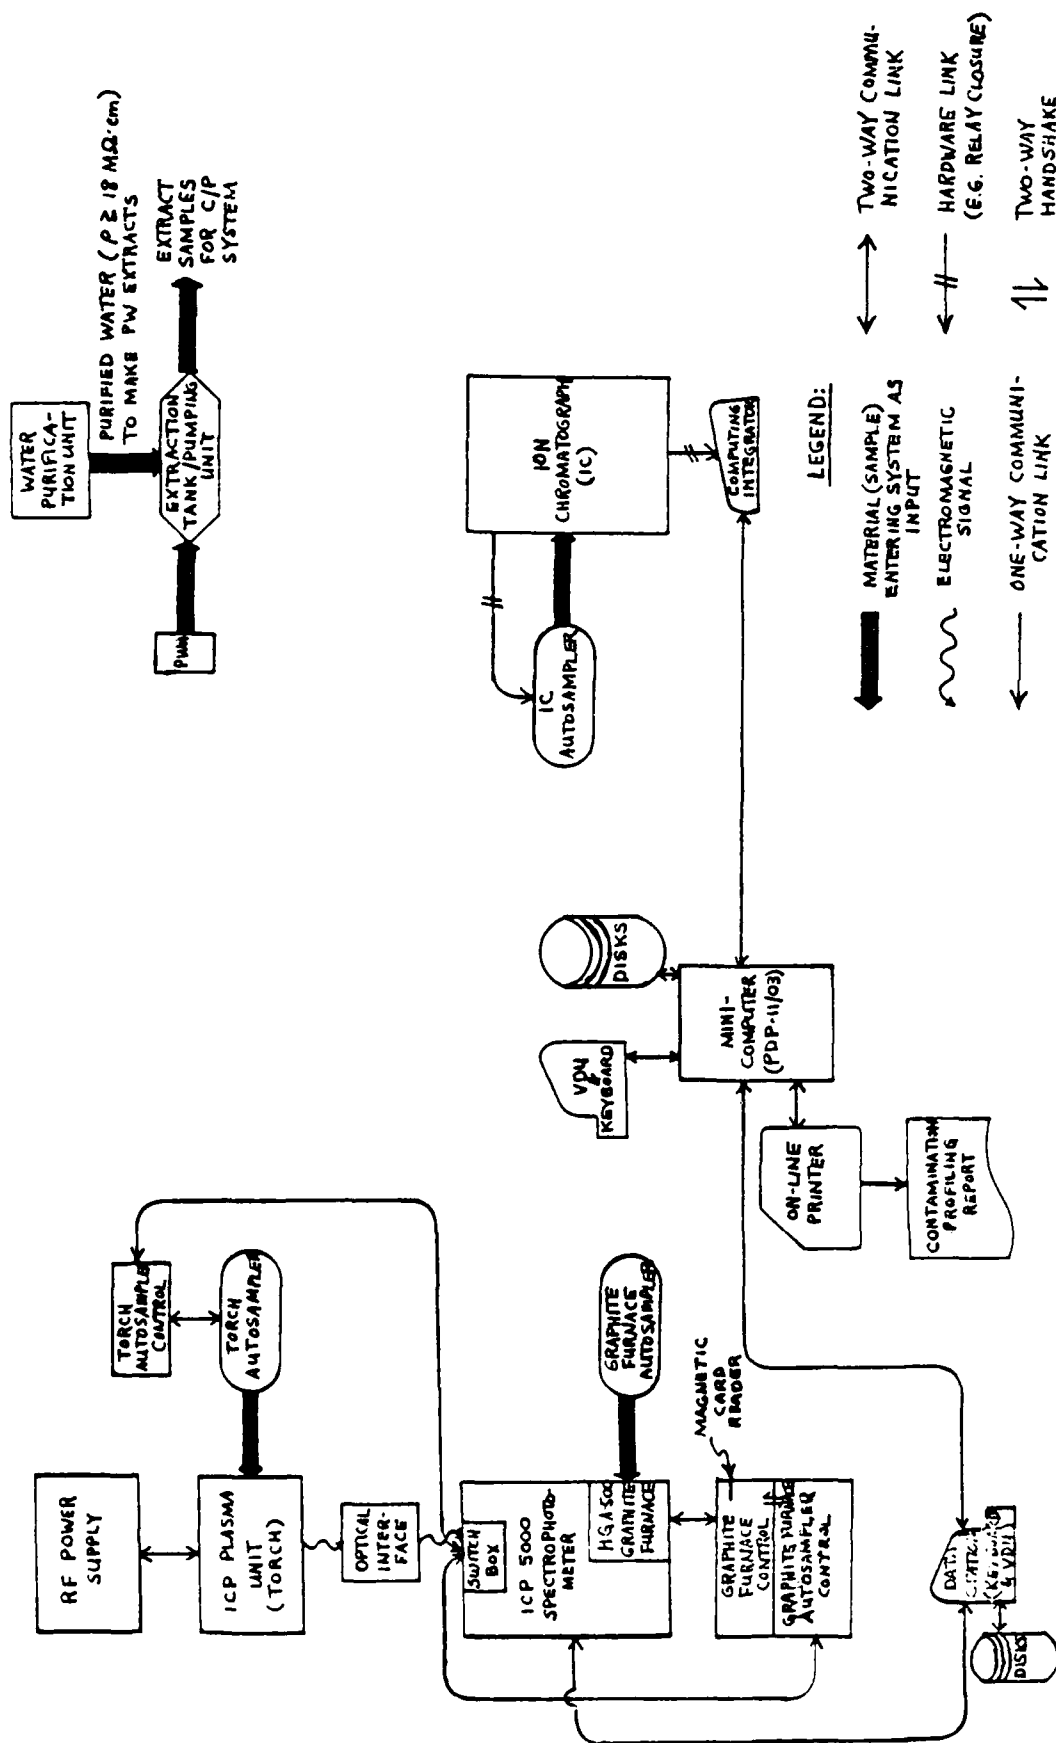


FIGURE 46. Present C/P System Hardware Configuration with Key Data Links

Turning back to the system hardware, Figure 46 illustrates the present hardware configuration of the C/P system. It also depicts the extent of total system integration, a phrase signifying the extent to which system control is effected through the system's minicomputer (MINC-11). At present the C/P system is not fully integrated system (nor will it be by contract's end) due to certain hardware features beyond the control of the project personnel. It must be kept firmly in mind, however, that this in no way detracts from the C/P system's chief function, viz., to operate as an effective system for profiling different contaminant species found on PW surfaces. Further, total integration is not required for implementation or efficient system operation. The fact that it is not fully integrated (not 100%) merely means the analyst/operator will have to pay more attention to some of the operating details in order to avoid errors. For example, to use the ICP-5000 Graphite Furnace, the operator will have to manually insert a magnetic card into the Graphite Furnace Control unit and he (or she) will have to manually enter certain items for the sampling procedure via the keyboard on the AS-40 Autosampler Control unit. However, the MINC-11 will prompt the operator to perform these items by prompting him on the MINC VDU (CRT).

In view of the above, one might legitimately ask why were the above particular pieces of hardware chosen as systems components for the C/P system. There are two reasons:

- 1 The hardware performs the job intended, i.e., the analytical equipment allows detection of individual contaminant species.
- 2 The hardware chosen is the only hardware on the market that will allow for individual contaminant species detection in an extract solution.

The fact that the C/P system cannot be fully integrated at this point merely illustrates the unfortunate situation among analytical instrumentation vendors. They are not at present properly designing their equipment for integration with a host computer. They must recognize, and soon, that the trend today is for computer system integration and control and the construction of a data base for the computer system. In all fairness to the vendor of the ICP-5000, his system does go far in achieving this goal. Full integration, however, implies that the MINC-11 would exercise all or practically all (>97%) control functions and execute all error functions. At contract's end, 75% will be under minicomputer control. It is appropriate to discuss those hardware features that at present negate total system integration.

The ICP-5000 is itself deficient as a self-contained system in its own right, and its deficiencies prevent it from functioning optimally as a key unit in a fully computerized system using a host computer, notwithstanding the vendor's claims to the contrary. Its deficiencies center on several particular points. They are:

FURNCE instructs the ICP-5000 via its Data Station of the 5000 operating parameters for execution on the ICP-5000/furnace. The specific furnace parameters for any given element, e.g., furnace ashing and atomization times, must be fed into the HGA-500 furnace control via magnetic cards. FURNCE instructs the 5000 of all necessary spectrophotometric parameters for a given element on the furnace, e.g., the wavelength at which the element absorbs (the furnace operates in the atomic absorption mode), its elemental slit width, etc. FURNCE must also access HEAR, for it too must "listen" for any data feedback from the ICP-5000/furnace. After the FURNCE routine is through, all necessary data have been generated from a particular run. Since the IC is much slower than the ICP-5000/torch and furnace combined, ION is represented in the time sequence as extending from the time when INSTRU is initially called up by ICPEX to the time that FURNCE is completed. Since INSTRU is wiped out by DECIDE and DECIDE by FURNCE, both DECIDE and FURNCE each respectively in its turn must also call forth ION.

After all data have been collected, REPORT performs further manipulations on them (statistical treatment) and generates a final hard-copy print-out report.

It is strongly recommended that as contamination profiling proceeds on PWAs, a data base be constructed for future comparisons and further statistical treatment of the data. In this fashion, meaningful cutoff limits for each contaminant species can be established given the relevant PW design and process parameters, e.g., line widths/line spacings, circuitry density, plating and etching processes required, flux used, etc. In this way PW contaminant profiling can be founded on a firm scientific basis through the use of computer control, the proper analytical instrumentation, and an ever-broadening data base.

Regarding system hardware integration, work has been accomplished getting the IC/SP4100 computing integrator on line with the MINC-11 minicomputer. Recently the SP4100 was successfully interfaced with the MINC. To effect this, one of the MINC RS232 ports had to be manually converted to a 20 mA current loop. It was also found that the SP4100 must be run in the manual mode rather than the automatic since the IC, as is true of most other chromatographs, is subject to long range drift, i.e., a steady upward draft of the baseline. The SP4100 in automatic mode interprets this drift as a distinct chromatographic peak, which in reality it is not, and integrates it.

Regarding software development, the systems subroutines required to make use of the three MINC laboratory modules-- 1) digital-in mode, 2) digital-out mode, and 3) real-time clock--have been generated and stored in the total system library via floppy disk. These laboratory module subroutines enable the MINC to communicate with the IC. In particular, the routine ION in the MINC's main memory will call the lab module subroutines off disk as required, to talk to the IC.

the CRT screen, e.g., how wide or how narrow the characters are to be, the physical spacing of alphanumeric data on the screen, etc. HEAR is the routine to indicate to the MINC whether its hardware devices (the system hardware-- the ICP-5000/torch-furnace, IC) are sending data to the MINC. FPRINT refers to File Print and signifies the routine required to print out on the line printer all constant parameters of the system while in operation, e.g., wavelength settings, furnace operating parameters, tank extraction time, etc.

Going now to Segment 1 (intermediate addresses in memory), there is first SETUP. This is the first routine called into main memory by ICPEX. SETUP creates the CRT screen format and information (as opposed to the screen's physical qualities--CURSOR) to instruct its human operator what necessary steps must be initiated to start contamination profiling on an actual hardware printed wiring assembly (PWA). After SETUP has been executed, ICPEX calls up EXTRCT, which defines the necessary steps required to make a physical extraction in the extraction tank/pumping unit. Once the extraction phase has been completed, i.e., a physical extract has been made from the sample PWA, ICPEX calls up INSTRU. Of course, each time ICPEX calls up a routine into Segment 1, it wipes out the previously held routine. That is, INSTRU wipes out EXTRCT as EXTRCT wiped out SETUP and as DEFINE will wipe out INSTRU. No harm is done though as all the Segment 1 routines are kept in secondary storage on disk. INSTRU activates the ICP-5000/torch via the ICP Data Station. INSTRU defines the necessary operations needed to process sample extracts through the ICP-5000/torch. It sets all parameters and gives instructions to the torch through the Data Station. In the meanwhile, INSTRU also calls forth ION, the routine to initiate and define the various operations of the IC. Both INSTRU and ION must be linked to HEAR, i.e., they must both be "listening" whether their respective hardware units are producing data and attempting to send them to the MINC. As data are being generated by the torch, INSTRU must manipulate them appropriately and store them. The same is true of ION regarding data emanating from the IC. As data are generated by the IC, ION must manipulate them and store them.

As the sample is being physically treated by the ICP-5000, it is anticipated that the torch (emission spectrophotometer) will not suffice to perform the entire analysis for the sixteen analyte elements. No doubt some of the analyte concentrations will be too low to be detected by the torch. After the torch has passed its data to the MINC, DECIDE must be called up by ICPEX. DECIDE examines all data derived from INSTRU. Limits of concentration will have been previously set. If the concentration of a particular analyte species is at or below the acceptable torch detection limits, DECIDE will file the element's name and designate that the sample extract is to be run on the furnace for that particular element. After DECIDE has examined all data and "decided" which elements are to be analyzed for on the ICP-5000/furnace, ICPEX calls up FURNCE. FURNCE is the routine for the graphite furnace.

In addition to the effort required to patch together the RT-11--the specific RT-11 system for the C/P MINC had to be literally built up, or patched, from selecting different prepackaged portions provided by DEC--in addition to this, a great deal of effort has been expended on the writing of the C/P software operating system (as opposed to the MINC's indigenous operating system, the RT-11). The C/P operating system is being written in the FORTRAN programming language and will allow the MINC to operate and monitor the C/P hardware modules (ICP-5000/torch, ICP-5000/furnace, IC, computing integrator). It will, in addition, allow the MINC to interpret and manipulate all data it receives from its hardware modules. It will also support and execute the generation of a final hard-copy print-out displaying the following: the particular sample PWA's (1) part number (P/N), (2) serial number (S/N), and (3) lot number (LOT), (4) the date, (5) the time, and (6) the analyst. The analysis data themselves will appear on a separate print-out page. The analysis data will consist of: (1) element designated by its chemical symbol, (2) its concentration (mean value) as determined from three separate aliquots, (3) the standard deviation, s , and (4) the coefficient of variation, CV. Figure 44 lists the FORTRAN routines required for the C/P operating system. Approximately 60% of these routines have been completed.

Figure 45 illustrates in diagrammatical form the C/P software operating system stored in the MINC's main memory locations. The principal routines stored in Root, i.e., OTS, CURSOR, ICPEX, HEAR, and FPRINT, are kept in permanent main memory locations at low addresses in the memory. In addition, the routine ION is stored in permanent memory but at high addresses, hence, that portion in which it is stored is designated Segment 2. The other chief routines, SETUP, EXTRCT, INSTRU, DECIDE, FURNCE, and REPORT are called into main memory off disk storage by the system's executive routine, ICPEX, which calls each in turn as required. That is, each of the routines listed in Segment 1 of main memory does not permanently reside there but is called into memory sequentially with respect to time as required from disk storage.

Let us briefly describe the chief routines constituting the C/P software operating system. OTS (Object Time System) is the FORTRAN operant system, enabling all the other routines to be written in the FORTRAN programming language. Note its box in Figure 45 is marked with a ③. All other routines in the diagram (Figure 4) necessarily must be linked to this routine in order to be executed. This is indicated in the diagram in two different ways. Either a two-way arrow, \longleftrightarrow , is employed or the symbol ③ \longleftrightarrow is used. It is not feasible in such a diagram to make use only of two-way arrows since the diagram would become unnecessarily cluttered, hence, the use of the symbol ③ \longleftrightarrow to indicate linking of a particular routine with OTS. The same significance is attached to the symbols ① \longleftrightarrow , ② \longleftrightarrow , and ④ \longleftrightarrow . ICPEX is the executive routine controlling when the various Segment 1 routines will be called off disk storage and placed into main memory for execution. CURSOR is the routine governing the physical attributes of

C/P SOFTWARE OPERATING SYSTEM (IN FORTRAN)

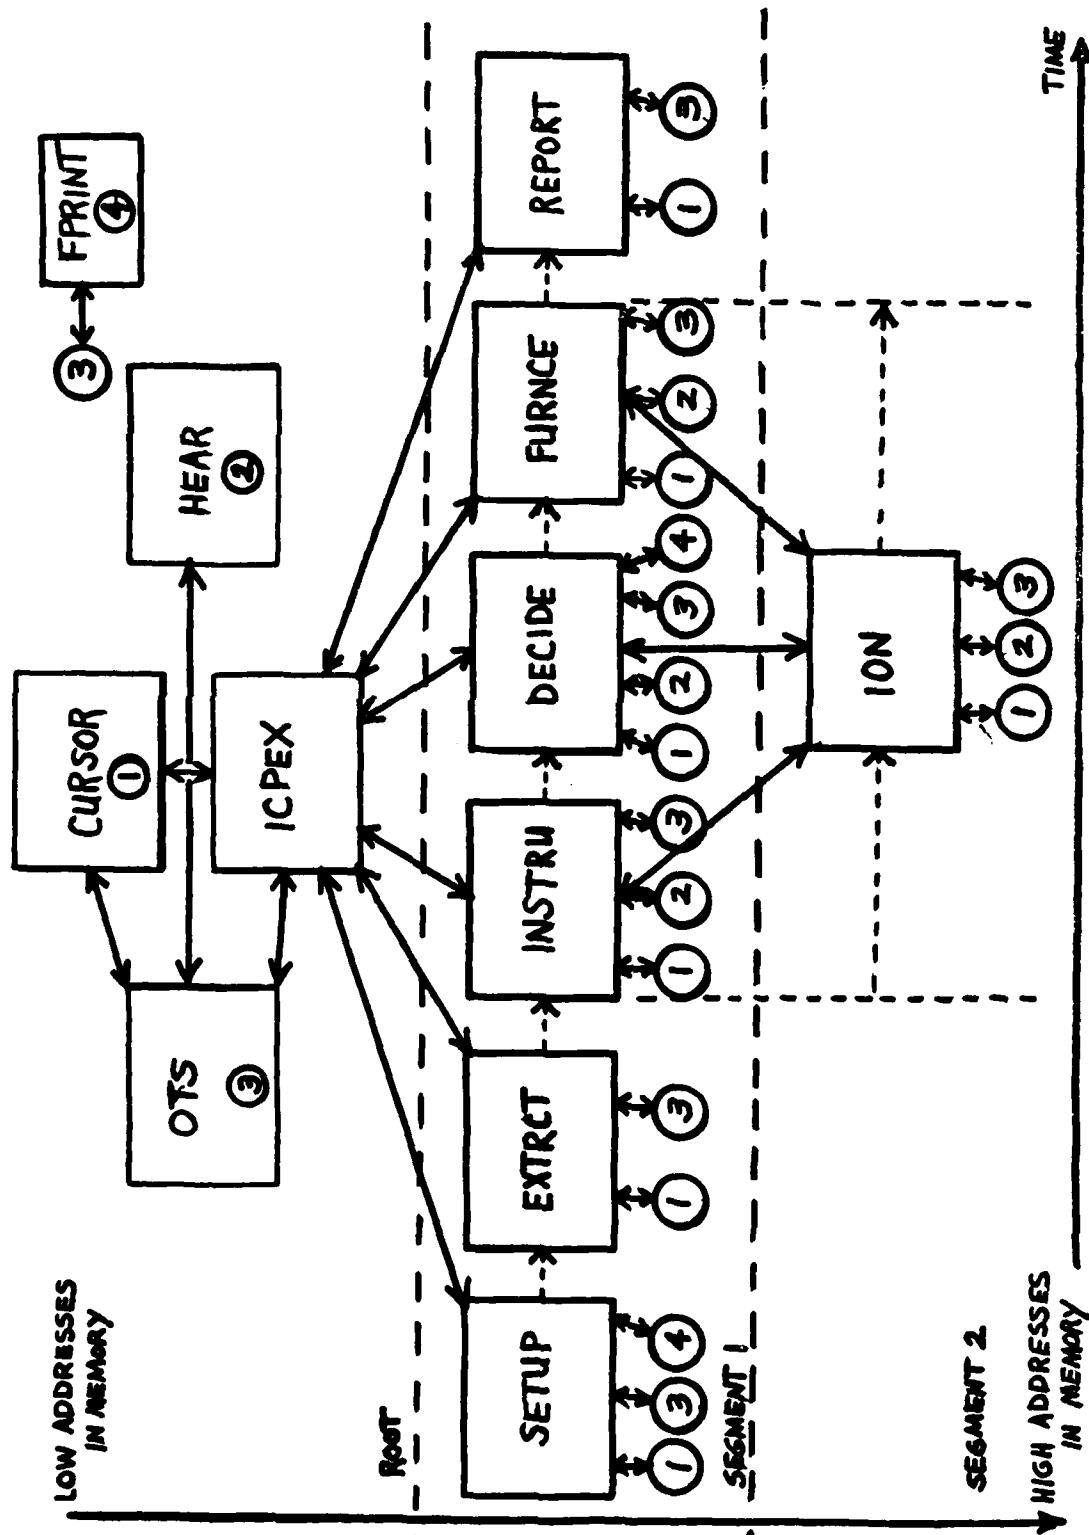


FIGURE 45. C/P Software Operating System in the MINIC's Main Memory Locations

12-Feb-81				
ALL .COM	1	12-Feb-81	FPRINT.FOR	4 11-Feb-81
ATTRIB.FOR	2	11-Feb-81	FPRINT.OBJ	7 11-Feb-81
ATTRIB.OBJ	5	11-Feb-81	FURNCE.FOR	2 11-Feb-81
BELL .FOR	2	11-Feb-81	FURNCE.OBJ	4 11-Feb-81
BELL .OBJ	4	11-Feb-81	HEAR .FOR	5 11-Feb-81
BINCOM.SAV	10P	08-Jan-81	HEAR .OBJ	5 11-Feb-81
CK1 .LST	2	12-Feb-81	ICPEX .BAK	6 12-Feb-81
CK2 .LST	2	12-Feb-81	ICPEX .COM	1 12-Feb-81
CK3 .LST	3	12-Feb-81	ICPEX .FOR	6 12-Feb-81
CLEAR .FOR	1	11-Feb-81	ICPEX .OBJ	5 12-Feb-81
CLEAR .OBJ	5	11-Feb-81	ICPEX .SAV	55 12-Feb-81
CLOCK.SAV	17	03-Jan-81	INIT .COM	1 05-Feb-81
CLRSTR.FOR	1	10-Feb-81	INIT .SAV	18 29-Jan-81
CLRSTR.OBJ	4	11-Feb-81	INSTRU.FOR	21 11-Feb-81
COMPIL.COM	1	09-Feb-81	INSTRU.OBJ	17 11-Feb-81
CONVRT.FOR	1	11-Feb-81	ION .FOR	3 11-Feb-81
CONVRT.OBJ	4	11-Feb-81	ION .OBJ	5 11-Feb-81
CREATE.COM	1	12-Feb-81	LNKNO .COM	1 11-Feb-81
CREP .SAV	6P	08-Jan-81	LNKYES.COM	1 11-Feb-81
CURSOR.HLP	4	04-Jan-81	MOVCUR.FOR	3 11-Feb-81
DAILY .COM	1	12-Feb-81	MOVCUR.OBJ	6 11-Feb-81
DATTIN.COM	1		NOW .COM	1 11-Feb-81
DECIDE.FOR	2	11-Feb-81	OLDICP.SAV	47 10-Feb-81
DECIDE.OBJ	4	11-Feb-81	PAT .SAV	8P 08-Jan-81
DISK .BAK	2	12-Feb-81	PATCH .SAV	10P 08-Jan-81
DISK .FOR	2	12-Feb-81	REPORT.FOR	11 11-Feb-81
DISK .OBJ	5	12-Feb-81	REPORT.OBJ	13 11-Feb-81
DISK .SAV	15	12-Feb-81	REPORT.SAV	22 11-Feb-81
DOUBLE.FOR	6	11-Feb-81	SAVE .LST	1 11-Feb-81
DOUBLE.OBJ	6	11-Feb-81	SCROLL.FOR	4 11-Feb-81
DUMP .SAV	8P	08-Jan-81	SCROLL.OBJ	6 11-Feb-81
EACHR .COM	1	12-Feb-81	SEQ .DAT	1 12-Feb-81
ERASED.FOR	2	11-Feb-81	SETUP .FOR	21 11-Feb-81
ERASED.OBJ	5	11-Feb-81	SETUP .OBJ	20 11-Feb-81
ERASEL.FOR	2	11-Feb-81	SIPP .SAV	20P 08-Jan-81
ERASEL.OBJ	5	11-Feb-81	SLP .SAV	9P 08-Jan-81
EXTRCT.FOR	12	11-Feb-81	SRCCOM.SAV	13P 08-Jan-81
EXTRCT.OBJ	10	11-Feb-81	STARTS.BAK	1 12-Feb-81
FILE .BAK	2	12-Feb-81	STARTS.COM	1 12-Feb-81
FILE .FOR	2	12-Feb-81	TALK .FOR	3 05-Feb-81
FILE .OBJ	5	12-Feb-81	TCHAO .LST	5 12-Feb-81
FILE .SAV	15	12-Feb-81		
83 Files, 582 Blocks				
392 Free blocks				

FIGURE 44. FORTRAN Routines for the C/P Operating System

12-Feb-81			
SWAP .SYS	25P	07-Oct-80	→ LP .SYS 2P 08-Jan-81
NL .SYS	2P	08-Jan-81	→ DY .SYS 4P 08-Jan-81
RT11SJ.MAP	21P	08-Jan-81	RT11FB.MAP 28P 08-Jan-81
→ RT11SJ.SYS	71P	08-Jan-81	RT11FB.SYS 85P 08-Jan-81
SYCND .MAC	5P	08-Jan-81	SYSTBL.MAC 21P 08-Jan-81
SYSELD.COM	1P	08-Jan-81	MONBLD.COM 3P 08-Jan-81
DEVBLD.COM	2P	08-Jan-81	→ SRCCOM.SAV 13P 08-Jan-81
BINCOM.SAV	10P	08-Jan-81	SLP .SAV 9P 08-Jan-81
→ DUMP .SAV	8P	08-Jan-81	SIPP .SAV 20P 08-Jan-81
PATCH .SAV	10P	08-Jan-81	PAT .SAV 8P 08-Jan-81
ERROUT.SAV	17P	08-Jan-81	QUEMAN.SAV 13P 08-Jan-81
HELP .SAV	107P	08-Jan-81	→ PIP .SAV 23P 08-Jan-81
→ DUP .SAV	41P	08-Jan-81	→ FORMAT.SAV 19P 08-Jan-81
RESORC.SAV	15P	08-Jan-81	→ DIR .SAV 17P 08-Jan-81
→ KED .SAV	60P	08-Jan-81	MACRO .SAV 51P 08-Jan-81
CREF .SAV	6P	08-Jan-81	LINK .SAV 41P 08-Jan-81
→ LIBR .SAV	22P	08-Jan-81	SYSMAC.SML 42P 08-Jan-81
SYSLIB.OBJ	47P	08-Jan-81	ODT .OBJ 9P 08-Jan-81
STARTS.COM	1P	08-Jan-81	BACKUP.COM 1 08-Jan-81
P .COM	1		DUPLIC.COM 1 08-Jan-81
Q .COM	1	13-Jan-81	A .COM 1 13-Jan-81
42 Files, 884 Blocks			
90 Free blocks			

FIGURE 43. Disk Dump of the Various RT-11 Routines

The conclusion of this is it would be much easier to characterize water-soluble fluxes than rosin-based organic fluxes because

- 1 there would be no deleterious solvent problem as regards the chromatographic columns because pure water would be the extractant
- 2 this kind of flux is man-made, not natural, hence the characteristic composition will be fixed according to specific manufacturing procedures
- 3 they probably are not as complicated chemically as regards the number of distinct chemical species as rosin-based fluxes.

Now Requirement 5 of Mil-Std-454E states that an R or RMA flux shall be used except that an RA flux may be used if cleanliness testing per Mil-P-28809 is applied. It is hoped that the military requirements can be extended to cover water-soluble fluxes since an adequate method can be used to ascertain production cleanliness of PW after flux/soldering, viz., contaminant profiling via the C/P system.

3.3 THE MINICOMPUTER CONTROL SYSTEM

Probably the most important piece of equipment in the contaminant profiling system is the minicomputer for final analysis and system control.

With the printed wiring contaminant profiling (PW C/P) system we necessarily concentrated heavily on software development. This is especially critical since the C/P hardware is to be run and monitored by the system's minicomputer (the DEC MINC-11). In addition, all data handling, manipulation, and printout are to be performed by the MINC. The MINC operating system, the RT-11 (RT = Real Time) comprises a monitor/executive program for MINC system control and supervision; several device handlers (programs), one for each of the supported hardware devices; a variety of utility support routines for system software routines/data manipulation; and finally, the interfaces necessary to support programming language processors. Figure 43 depicts a disk dump of the various RT-11 routines. Some of its chief routines are:

RT11SJ.SYS	single job monitor
DUMP .SAV	dump memory
DUP .SAV	file management
KED .SAV	editor
LIBR .SAV	library
LP .SYS	line printer handler
DY .SYS	disk handler
SRCCOM.SAV	compares two files
PIP .SAV	file exchange
FORMAT.SAV	formats disks
DIR .SAV	prints directory.

The results indicate that ammonia < surfactant \approx 50 percent surfactant + 50 percent monoethanolamine \approx rosin saponification product 1 \approx rosin saponification product 2; \approx signifies "about equal to" where < signifies "worse than". Note that items 2-5 give almost identical results. However, since the surfactant is a pure substance whereas the others (surfactant/monoethanolamine and rosin saponification products 1 and 2) are mixtures, it seemed preferable to use only surfactant alone since it does an equally good job.

The problem with using the surfactant is that a thorough qualification test must be performed before it can routinely be used in military PW. Further, although the surfactant itself is nonionic, its method of production involves ionic catalysts which proved impossible to remove. Naturally this interfered with the analysis. For this reason, the only solvent that will be used at present will be pure demineralized water. It is assumed that most harmful ionic species will come off the PW surface in the water. If there are any entrapped under polymerized rosin, these probably would not prove troublesome. It is highly unlikely they would leach out of the polymerized rosin.

It is not out of place to say a few words about fluxes at this point. At present MMC is employing RMA fluxes for the soldering process. Rosin fluxes are, of course, complex mixtures composed of many weakly acidic species, such as abietic acid, neoabietic acid, pimaric acid, etc. Rosin is a natural product. It is the non-steam volatile portion of pine gum, and its specific composition will vary depending on the source of the raw rosin. In short, the RMA flux marketed by a particular manufacturer is likely to vary depending on where he obtained his raw gum rosin.

Further, it is well known that both exposure to oxygen and to heat will change the chemical structure of some of the components of rosin. The abietic-type acids (abietic, neoabietic, levopimaric, palustric), for example, are more prone to take up oxygen because of their conjugated double bonds than the pimaric-type acids (pimaric, isopimaric). Further, heating of abietic acid will cause a disproportionation to a pyroabietic acid mixture containing dehydroabietic and tetrahydroabietic acids, both of which are chemically inert and therefore resistant to oxidation. These known facts of rosin fluxes are likely to make them difficult to characterize chemically on the ion chromatograph.

In addition, any particular manufacturer's RMA flux will contain a small amount of proprietary activators (e.g., halides, non-rosin organic acids, amines, amides, etc.). These too must be characterized.

Finally, the solvent that must be used to dissolve the rosin flux must be carefully considered. It was expected that a 50% H₂O (water)/50% IPA (isopropyl alcohol) extractant would prove feasible to both dissolve the rosin flux and to lead to no problems with the chromatographic columns. However, it is recognized that the ion-exchange resins used in the chromatographic columns are often sensitive to other solvents, and this can sometimes lead to their subsequent deterioration if water alone is not used. For reasons pointed out above, 50% H₂O/50% IPA did not prove satisfactory.

As displayed in the test matrix, all methods of rosin removal were effective when the extraction time was two (2) hours. For a one (1) hour extraction time, however, it is seen that LFF > NFF > NH₃ where > signifies "better than". The flux supplied by vendor 2 can be removed easier by all three methods than flux supplied by vendor 1. Actually, it would be more correct to say that the flux batch produced by vendor 2 was removed easier than the flux batch of vendor 1. This way of specifying the situation is necessary since rosin fluxes are derived from natural sources and their compositions can and do vary somewhat due to fluctuations in supply conditions. By this is meant that a particular given rosin flux of a particular given vendor will probably have a slightly varying composition from batch to batch due to supply factors (it may contain a fixed proportion of activator, however). It seems evident, therefore, that the use of a natural source product such as rosin in the manufacturing of PWBs will always necessitate a qualification test to be repeated at certain intervals, i.e., if high reliability PWBs are the desideratum. Hence, a suitable method of chromatography (liquid or preferably FID gas) should be employed to qualify the use of LFF surfactant to remove rosin. The chromatographic technique will be used to fingerprint both rosin and surfactant and to demonstrate removal of surfactant. Although the surfactant is nonionic, it is wise to ascertain that the nonionic surfactant species has been completely removed from the PW surface.

Regarding the extraction procedure to be used for the printed wiring (PW), five different materials were used to clean rosin from PWB substrate. A volume of 50 μ l of rosin (2 different RMA rosin fluxes were used in the experiment) was applied to a 1 in x 1.5 in coupon. The flux was then heated to solder temperature by passing the coupons through a solder belt reflow machine. An attempt was then made to clean the coupons in the PW extraction tank using each of the five different materials. These materials included:

- 1 Ammonia, NH₄ OH
- 2 Surfactant (low foaming)
- 3 50 percent surfactant + 50 percent monoethanolamine (common ingredient of rosin saponification formulations)
- 4 Rosin saponification product 1 (produced by vendor 1)
- 5 Rosin saponification product 2 (produced by vendor 2).

The PWB substrate material was then tested for rosin using the Liebermann-Storch (L/S) test.

Table 13
TEST MATRIX

Time Method of Extraction	T ₁ 1 hour	T ₂ 2 hours
NH ₃	F ₁₁ +	F ₁₁ -
	F ₁₂ +	F ₁₂ -
	F ₂₁ +	F ₂₁ -
	F ₂₂ -	F ₂₂ -
NFF	F ₁₁ +	F ₁₁ -
	F ₁₂ +	F ₁₂ -
	F ₂₁ -	F ₂₁ -
	F ₂₂ -	F ₂₂ -
LFF	F ₁₁ +	F ₁₁ -
	F ₁₂ -	F ₁₂ -
	F ₂₁ -	F ₂₁ -
	F ₂₂ -	F ₂₂ -

The fluxes were allowed to dry in air for 48 hours.

Blanks were also run in duplicate in all cases and consistently tested negative for rosin by the L/S test as expected.

Surfactants 1 and 2 are both produced by the same vendor because no other vendor's surfactants appeared promising based on preliminary evaluations. Two different extraction times were used--1 hour and 2 hours. The Liebermann-Storch test was employed to check for traces of rosin >75 parts-per-billion (ppb). Each flux was run in duplicate. The results are summarized in the test matrix displayed below.

LEGEND

- 1 ++ = positive L/S test for rosin
+ = faintly positive L/S test for rosin
- = negative L/S test for rosin
- 2 RMA flux 1, trial #1 = F₁₁
RMA flux 1, trial #2 = F₁₂
- 3 RMA flux 2, trial #1 = F₂₁
RMA flux 2, trial #2 = F₂₂

There are other organic acids containing in rosin in addition to abietic, and most are isomeric to abietic. Natural rosin also contains a small amount of inert materials, probably polymeric in nature. Based on its chemical constituents, the two approaches to solubilizing rosin are these:

- 1 Seek a suitable surfactant having the ability to solvate the rosin using essentially the same mechanism by which organic "dirts" are removed by soaps and detergents. That is, the surfactant should possess a hydrophobic and a hydrophilic end, the hydrophobic responsible for the dissolution of the rosin. Preferably, the surfactant would have near neutral pH. Thus, the use of a nonionic surfactant was suggested.
- 2 Use an alkaline material (pH>7) to saponify the rosin, causing it to go into water solution as rosin salts.

After trying approximately twelve different commercial nonionic surfactants, one particular kind was found to remove rosin quite well. Its chemical type is: ethoxylated tridecylalcohol. The solution concentration needed is 2-5%. Further investigation is required to choose the optimal concentration; however, preliminary work indicates that a 5% solution will be necessary. Regarding alkaline material, a 1% solution of ammonia (NH₃) will also successfully remove rosin. Although the pH 10, no apparent harm is caused the PWA, apparently because the ammonia volatilizes. However, further investigation is required before one can say this positively. The IC can be used to check the efficient removal of the ammonia since it has the capability to perform an analysis for ammonia.

Both approaches proved to be successful.

The materials used were these:

- 1 Ammonia, NH₃ or NH₄OH (in aqueous solution)
- 2 Surfactant 1, normal foaming formulation (NFF)
- 3 Surfactant 2, low foaming formulation (LFF)
- 4 RMA flux 1, F₁ (produced by vendor 1)
- 5 RMA flux 2, F₂ (produced by vendor 2).

- 1 The ICP-5000 Data Station (6800 microcomputer) is powerful and can communicate effectively with the 5000 Spectrophotometer. It passes control and program information to the 5000 and receives back data for manipulation and storage which it passes to the MINC. The Data Station's disk storage holds the furnace files, the torch files, and the operating files to run the torch and furnace. The Data Station, however, exercises no control over the Graphite Furnace Control unit. This must manually be operated by a magnetic card. Nor does the Data Station exert control over the Graphite Furnace Autosampler Control unit (operated manually by a keyboard) or the Torch Autosampler Control unit (has only ON/OFF switch). Since the Data Station with its 6800 chip microprocessor and RAM memory is the key element in linking the ICP-5000 system with a host computer (the MINC-11 in this case), the Data Station's failure to communicate with the Graphite Furnace Control unit and both Autosampler Control units means that the host computer cannot either. Hence, as far as the MINC is concerned, the Graphite Furnace Control unit and both Autosampler Control units are offline.
- 2 This second point concerns the IC. The way the IC was built, it contains a solid state programmer - not a microprocessor, makes it impossible to communicate with. The IC does not really talk to its Autosampler or to its Computing Integrator; rather, it merely hardwire activates relay closures to indicate it is ready to have samples fed to it by the Autosampler or when it is ready to dump data to the Computing Integrator after a run. This means, in effect, the real data control for the Computing Integrator is via the IC, not the MINC, even though the MINC can talk directly to the Computing Integrator. So, as far as the MINC is concerned, the IC is offline also. This fact has necessitated a very careful software timing sequence during the torch/furnace data acquisition and manipulation by the MINC to ensure that the SP 4100 does not have a data set from a particular IC run wiped out by the IC (when it is ready to send more data to the SP 4100) before the SP4100 can transmit the data to the MINC.

It is appropriate to consider here the C/P system from the point of view of system control. Review again the system schematic as depicted in Figure 15. The system control itself forms a hierarchy, and the major components of this hierarchy are depicted in Tables 14, 15, and 16.

This completes the discussion of total system hardware integration at this point. Hopefully, while building a contaminant profiling (C/P) data base, the problem of more complete integration of system hardware can be addressed and some of the equipment can be modified in a hardware fashion to permit this.

Table 14

CONTAMINANT PROFILING SYSTEM CONTROL HIERARCHY

SYSTEM CONTROL -- High Level Command

- * MINC Mincomputer

INSTRUMENT CONTROL -- Middle Level Command

- * Perkin Elmer M3600 Data Station
- * Spectra Physics SP-4100 Computing Integrator

MACHINE CONTROL -- Low Level Command

- * 6800 Microprocessor
- * 8008 Microprocessor
- * 4004 Microprocessor

Table 15

SYSTEM CONTROL TECHNICAL REQUIREMENTS

SYSTEM CONTROL

- * Interface with human operator and Instrument Level Control.
- * Decide which analyses are to be performed on each instrument (define task).
- * Accept data and prepare reports.

INSTRUMENT CONTROL

- * Interface with System Level Control and Machine Level Control.
- * Have knowledge of analytical parameters for each elements for instrument.
- * Compute analytical results from raw input data.

MACHINE CONTROL

- * Interface with Instrument Level Control and machine devices (stepping motors, etc.).
- * Have capability to operate stepping motors, valves, defraction gratings, temperature controllers, and the like.
- * Read raw data and convert to digital form.

Table 16

INPUT / OUTPUT AT EACH SYSTEM LEVEL

SYSTEM CONTROL INPUTS

- * From human: Commands (RUN), Identifying data (Board S/N, P/N, Operator's Name).
- * From Inst. Level: Processed Data.

SYSTEM CONTROL OUTPUTS

- * To human: Final reports.
- * To Inst. Level: Control Commands (RUN CU)

INSTRUMENT CONTROL INPUTS

- * From System Level: Control Commands
- * From Mach. Level: Handshaking (Ready line), Raw Data Values (321453).

INSTRUMENT CONTROL OUTPUTS

- * To System Level: Processed Data (2.01 PPB)
- * To Mach. Level: Machine Control Commands (Step to 189.9 nm).

MACHINE CONTROL INPUTS

- * From Inst. Level: Machine Control Commands
- * From Components: Handshaking (Ready lines), Analog Data (0.476 v).

MACHINE CONTROL OUTPUTS

- * To Inst. Level: Handshaking, Raw Data Values
- * To Components: Component Level Commands (Logical 1 to Port OECH on line 3 for 5 ms.).

3.4 SETTING CONTAMINANT LIMITS WITH THE CONTAMINANT PROFILING SYSTEM

It is necessary to set initial contaminant levels using the contaminant profiling (C/P) system.

Attention was turned to addressing the problem of setting realistic limits, within the scope of our present knowledge, for the amount of contamination on a printed wiring assembly (PWA). As was pointed out, the contaminant profiling (C/P) system instrumentation will detect and interpret the amounts of contaminant species in an extract in terms of parts-per-billion (ppb). This latter term, a concentration unit, can easily be converted into the number of micrograms per square centimeter ($\mu\text{g}/\text{cm}^2$) of each contaminant species, given that the total area of the PWA and the extract volume are entered into the C/P system's databank as system parameters.

It is agreed that what is required is to link the presence and amount of each species on the PW surface to PW degradation. A rigorous testing and evaluation schedule in which the contribution to degradation and the concomitant threshold limits of each contaminant species should be performed for different PW configurations, packaging densities, and component types. The data generated from this extensive testing and evaluation phase can then be used to build a data base for C/P.

However, due to the time limitation imposed on the present program, the best approach to establishing meaningful first limits of contaminant species is to relate their total amounts back to the existing military specification, MIL-P-28809. It was remarked in the Final Report for Phase I on the contract that the amount of NaCl (sodium Chloride) necessary to cause a resistivity change from $6.0 \text{ M}\Omega\text{cm}$ to $2.0 \text{ M}\Omega\text{cm}$ is $0.94 \mu\text{g}/\text{cm}^2 \approx 1.0 \mu\text{g}/\text{cm}^2$. This was assuming a PW whose surface area is $A \text{ inch}^2$ (both sides included). Since $6.45 \text{ cm}^2 = 1 \text{ inch}^2$, the PW surface = $6.45 A \text{ cm}^2$. This also presumes the entire quantity of NaCl is eluted into the test extract having a volume of 10 A ml since, according to MIL-P-28809, 1 inch^2 of PW surface = 10 ml of extract after washing. This amount is meaningful for PW having conductor line widths/line spacings ≥ 10 mils (0.010 inch) and average component densities (assuming no leadless components). This value, i.e., $1.0 \mu\text{g}/\text{cm}^2$ as representing the threshold value for NaCl for the above conductor line widths/line spacings is also supported by the insulation resistance (IR) work of Dr. W. Bernard Wargotz (Dr. W. Bernard Wargotz, "Quantification of Contaminant Effects upon Electrical Behavior of Printed Wiring," IPC Technical Paper, Sept. (1977)).

However, it is obvious that NaCl will not be the only contaminant. Hence one must find the governing parameter for relating concentrations of different contaminant species back to MIL-P-28809. This parameter is the solution neutrality. The governing equation is

$$\kappa = 0.001 \Lambda_0 c + \kappa_{sol} \quad (1)$$

where c is the concentration of ionizable material in equivalents/liter (normality); Λ_0 , the equivalents conductance at infinite dilution, and κ_{sol} the specific conductance of solution and pure solvent respectively. Further, the specific resistivity, ρ , is related to the specific conductance by the following equation:

$$\rho = 1/\kappa \quad (2)$$

In the Final Report for Phase I, it was remarked that a concentration of $C = 10.41 \times 10^{-6} N$ would result in a resistivity drop from 6 M Ω cm to 2 M Ω cm for an isopropyl alcohol (75%) /water (25%) solution as employed for MIL-P-28809. This concentration, then, will be used as the threshold concentration for contaminant species on a PWA. That is, when the total extract concentration equals to or surpasses this concentration, the PWA will have failed the C/P test.

To find the total extract normality, the number of $\mu g/cm^2$ of each contaminant species must be divided by the respective equivalent weight of each species, the result summed over all species and divided by 2 (since there are both positive and negative species). That is

$$c \text{ (total normality)} = 645 \times 10^{-6} \left[\left(\sum_{\text{all positive species}} C_i/x_i + \sum_{\text{all positive species}} C_i/x_i \right) / 2 \right] \quad (3)$$

where C_i is the respective concentration of species i in the $\mu g/cm^2$ and x_i is its respective equivalent weight. The factor 645 arises because it is assumed the area, A , of the PWA was originally given in $inch^2$.

Based on calculations such as these, the following two reports (Figures 47 and 48)* illustrate the C/P report format showing

- 1 the PW part number (P/N), serial number (S/N), and lot number (LOT)
- 2 the date and time of analysis
- 3 the analyst
- 4 the instrumentation used for the cationic (positive) species - either inductively coupled Argon plasma emission spectroscopy (ICP-5000) or graphite furnace atomic absorption spectroscopy (5000-AA)
- 5 the instrumentation used for the anionic (negative) species - ion chromatography (IC)
- 6 the species analyzed for - using appropriate chemical symbolism
- 7 the species concentration in parts-per-billion (ppb) (This is a mean value based on three readings)

**CONTAMINATION PROFILING
REPORT**

P/N : AY0-12769-00000

S/N : 000034

LOT : N201

DATE: 07-JUL-81

TIME: 12:32:21

ANALYST _____

V. A. DE GIORGIO

**FIGURE 47. Contamination Profiling Report (Example) of a
PWA Passing Test**

Cations

- By Inductively Coupled Argon Plasma Emission Spectroscopy

ELEMENT	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
---------	---------------	-----------	----------------	-------------------

Cations

- By Graphite Furnace Atomic Absorption Spectroscopy

ELEMENT	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
---------	---------------	-----------	----------------	-------------------

P	10. PPB	+/- 0.9	9.04 %	0.016 ug/sq.cm
SI	9. PPB	+/- 2.1	23.54 %	0.014 ug/sq.cm
K	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
PB	70. PPB	+/- 4.1	5.91 %	0.109 ug/sq.cm
SN	35. PPB	+/- 0.8	2.34 %	0.054 ug/sq.cm
CR	11. PPB	+/- 0.1	0.68 %	0.017 ug/sq.cm
ZN	21. PPB	+/- 0.2	0.72 %	0.033 ug/sq.cm
CU	43. PPB	+/- 0.5	1.22 %	0.067 ug/sq.cm
NI	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
AU	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
FE	19. PPB	+/- 0.4	2.23 %	0.029 ug/sq.cm
MG	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
PD	7. PPB	+/- 0.9	12.57 %	0.011 ug/sq.cm
CA	46. PPB	+/- 0.1	0.30 %	0.071 ug/sq.cm
AL	10. PPB	+/- 0.1	1.15 %	0.016 ug/sq.cm
NA	46. PPB	+/- 4.5	9.84 %	0.071 ug/sq.cm

FIGURE 47. (continued)

Anions

- By Ion Chromatography

SPECIES	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
F	15. PPB	+/- 1.0	6.42 %	0.023 ug/sq.cm
CL	188. PPB	+/- 9.8	5.23 %	0.291 ug/sq.cm
NO2	0. PPB	+/- 0.1	100.00 %	0.000 ug/sq.cm
NO3	0. PPB	+/- 0.5	100.00 %	0.000 ug/sq.cm
BR	36. PPB	+/- 3.7	10.27 %	0.056 ug/sq.cm
PO4	98. PPB	+/- 7.2	7.32 %	0.152 ug/sq.cm
SO4	25. PPB	+/- 1.2	4.99 %	0.039 ug/sq.cm

TOTAL CONTAMINANTS

Total Cationic Species = 0.507 ug/sq.cm

Total Anionic Species = 0.561 ug/sq.cm

TOTAL = 1.068 ug/sq.cm

- Based on the above analysis, this PWB:
PASSES the Contaminant Profiling Test.

FIGURE 47. (continued)

**CONTAMINATION PROFILING
REPORT**

F/N : AY0-12769-00000

S/N : 000067

LOT : N202

DATE: 07-JUL-81

TIME: 09:15:03

ANALYST _____

V. A. DE GIORGIO

FIGURE 48. Contamination Profiling Report (Example)
of a PWA Failing Test

Cations

- By Inductively Coupled Argon Plasma Emission Spectroscopy

ELEMENT	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
CU	231 PPB	+/- 5.1	2.2 %	0.358 ug/sq.cm
CA	430 PPB	+/- 4.7	1.1 %	0.667 ug/sq.cm
AL	200 PPB	+/- 4.8	2.4 %	0.310 ug/sq.cm
NA	543 PPB	+/- 57.6	10.6 %	0.842 ug/sq.cm

Cations

- By Graphite Furnace Atomic Absorption Spectroscopy

ELEMENT	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
P	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
SI	24. PPB	+/- 0.8	3.40 %	0.037 ug/sq.cm
K	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
PB	45. PPB	+/- 2.1	4.77 %	0.070 ug/sq.cm
SN	70. PPB	+/- 1.0	1.42 %	0.109 ug/sq.cm
CR	5. PPB	+/- 0.1	1.04 %	0.008 ug/sq.cm
ZN	17. PPB	+/- 0.2	1.00 %	0.026 ug/sq.cm
NI	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
AU	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
FE	10. PPB	+/- 0.3	2.55 %	0.016 ug/sq.cm
MG	0. PPB	+/-*****	***** %	0.000 ug/sq.cm
PD	3. PPB	+/- 0.2	5.93 %	0.005 ug/sq.cm

FIGURE 48. (continued)

Anions

- By Ion Chromatography

SPECIES	CONC./ WEIGHT	STD. DEV.	COEFF. OF VAR.	CONC./ BOARD AREA
F	20. PPB	+/- 0.7	3.50 %	0.031 ug/sq.cm
CL	2586. PPB	+/- 69.2	2.67 %	4.009 ug/sq.cm
NO2	0. PPB	+/- 0.1	100.00 %	0.000 ug/sq.cm
NO3	0. PPB	+/- 0.5	100.00 %	0.000 ug/sq.cm
BR	0. PPB	+/- 0.0	100.00 %	0.000 ug/sq.cm
PO4	0. PPB	+/- 0.1	100.00 %	0.000 ug/sq.cm
SO4	70. PPB	+/- 2.6	3.76 %	0.109 ug/sq.cm

TOTAL CONTAMINANTS

Total Cationic Species = 2.447 ug/sq.cm

Total Anionic Species = 4.149 ug/sq.cm

TOTAL = 6.595 ug/sq.cm

- Based on the above analysis, this PWB:
FAILS the Contaminant Profiling Test.

FIGURE 48. (continued)

- 8 the standard deviation (s) and coefficient of variation (s/\bar{X}) of the species concentration (ppb)
- 9 the species concentration in $\mu\text{g}/\text{cm}^2$
- 10 the total cationic species concentration in $\mu\text{g}/\text{cm}^2$
- 11 the total anionic species concentration in $\mu\text{g}/\text{cm}^2$
- 12 the grand total concentration of all species in $\mu\text{g}/\text{cm}^2$
- 13 statement as to whether given PWA passes or fails the C/P test (based on above total neutrality of extract).

*Figures 47 and 48 merely demonstrate the Report Generator software. They do not present actual PW data based on samples run in the C/P system. However, PWA samples should have similar profiles.

3.5 THE CONTAMINANT PROFILING SYSTEM: AN OVERVIEW. HEREIN IS PRESENTED A FINAL OVERVIEW OF THE CONTAMINANT PROFILING (C/P) SYSTEM

To gain a better perspective, the total system hardware will be reviewed. Several of the contaminant profiling (C/P) system components can be regarded as systems in their own right since they can be further decomposed or broken down into a number of distinct subcomponents. Since the C/P system minicomputer is the host computer for the entire C/P system, the other components are called subsystems. These are:

- 1 One (1) inductively-coupled plasma (ICP) spectrophotometer (Perkin-Elmer ICP-5000). The ICP-5000 is a true C/P subsystem since it can be decomposed into distinct subunits.
 - a. Model 5000 Spectrophotometer
 - b. ICP Source (torch)
 - c. Optical Interface between a. and b.
 - d. RF Power Supply
 - e. Data Station (6800 microcomputer)
 - 1. Video display unit (VDU)
 - 2. Keyboard
 - 3. Disks (floppy)
 - f. HGA-500 Graphite Furnace
 - g. Graphite Furnace Control unit
 - h. AS-40 Autosampler(for furnace) + Control unit
 - i. AS-50 Autosampler(for torch) + Control unit
 - j. PR-80 Printer (line printer)

This instrument detects metallic and quasi-metallic species (cations).

- 2 One (1) ion chromatograph (IC) (Dionex AutoIon™ System 12 Analyzer). This can be considered a quasi-subsystem since it can be decomposed into subunits. It is not, however, under the immediate control of its own microprocessor as the ICP-5000 is.

- a. IC Autosampler
- b. Computing Integrator (Spectra Physics Model SP 4100)

The ion chromatograph detects negative ionic species (anions). The computing integrator handles the data manipulation and peak integration for the ion chromatograph.

- 3 Minicomputer (Digital Electronic Corp. MINC-11, a PDP-11/03) with hardware modules for running laboratory equipment.

- a. VDU
- b. Keyboard
- c. Disks (floppy).

¶ The minicomputer is for final data analysis, report generation, and overall system control.

- 4 Extraction Tank/Pumping unit (built in-house)

- 5 Water Purification Unit (Millipore)

The extraction tank/pumping subsystem and water purification unit are for sample preparation and extraction.

Herein is given a summary of the major thrust in hardware/software development for the C/P system.

In the last few years, reductions in cost of microprogrammed processor arrays (microprocessors) have led to their increased use by system engineers in the design of laboratory analytical equipment. Along with the usual benefits of designing with microprocessors, (primarily reduced cost of complex digital systems arrived at through the economies of scale), at least one additional function has been added to many state-of-the-art analytical instruments: the ability to communicate to the outside world through a standardized communications port. This, in turn, has simplified the connection of these instruments into automated analytical systems; so much so, in fact, that the early 1980's are showing the promise of the development of the completely automated laboratory. The Contamination Profiling System, an automated analytical design for detecting contamination on printed wiring boards and assemblies, is a demonstration of this concept implemented as an on-line tool for use on the floor of a PWB/PWA manufacturing facility.

The design of such an automated facility involves concurrent exploration of several disciplines throughout the development of the project:

FORTRAN IV

V02.5-2 Thu 03-Dec-81 02:05:09

PAGE 001

```
0001 SUBROUTINE CONVRT(IPARA,OPARA1,OPARA2)
0002 8:ITE OPAPA1,OPARA2
0003 IDIG=IPARA/10
0004 OPARA1=IDIG*48
0005 OPARA2=(IPARA-IDIG*10)+48
0006 RETURN
0007 END
```

```

0001      SUBROUTINE SCROLL(ISCOT, ISBOT)
0002      BYTE CONTRL(9)
0003      BYTE CLEAR(5)
0004      DATA CLEAR/'33','133','73','162','200/'
0005      DATA CONTRL/'33','133,0,0','73,0,0','162','200/'
0006      IF(ISCOT.EQ.0)GO TO 100
0007      CALL CONVRT(ISCOT, ISCTP1, ISCTP2)
0008      CALL CONVRT(ISBOT, ISCBT1, ISCBT2)
0009      CONTRL(3)=ISCTP1
0010      CONTRL(4)=ISCTP2
0011      CONTRL(5)=ISCBT1
0012      CONTRL(7)=ISCBT2
0013      CALL PRINT(CONTRL)
0014      RETURN
0015 100    CALL PRINT(CLEAR)
0016      RETURN
0017      END
0018

```

```
0001 SUBROUTINE HEAR(IUNIT, IFLAG, HEARS)
0002 BYTE HEARS(83)
0003 CALL CLRSTP(HEARS)
0004 INDEX=1
0005 1 IFLAG=MTIN(IUNIT, HEARS(INDEX))
0006 IF(IFLAG.GT.0)RETURN
0008 DO 2, IPAUSE=1, 500
0009 2 CONTINUE
0010 IF(HEARS(INDEX).EQ.10)RETURN
0012 IF(INDEX.GT.82)RETURN
0014 INDEX=INDEX+1
0015 GO TO 1
0016 END
```

FORTRAN IV V02.5-2 Thu 03-Dec-81 02:03:33

PAGE 001

```
0001      SUBROUTINE CLEAR
0002      BYTE CONTRL(8)
0003      DATA CONTRL/"33","133","110","33","133","62","112","200"/
0004      CALL PRINT(CONTRL)
0005      RETURN
0006      END
```

FORTRAN IV V02.5-2 Thu 03-Dec-81 02:03:09

PAGE 001

```
0001      SUBROUTINE CLRSTR(CLR5)
0002      BYTE CLR5(83)
0003      DO 1,KOUNT=1,83
0004      CLR5(KOUNT)=0
0005 1      CONTINUE
0006      RETURN
0007      END
```

```

0001      PROGRAM IOPEX
0002      BYTE REPLY
0003  1      ICPOS=0
0004      CALL SETUP(ICONT)
0005      IF(ICONT.EQ.1)GO TO 2
0006      CALL EXTRCT
0007      CALL INSTRU(ICPOS)
0008      CALL DECIDE(ICPOS)
0009      CALL FUPACE(ICPOS)
0010      CALL REPORT
0011  2      CALL MOVCUR(24.1)
0012      TYPE 1000
0013      ACCEPT 1001,REPLY
0014      IF(REPLY.EQ.'Y')GO TO 1
0015      CALL SCROLL(0,0)
0016      CALL CLEAR
0017      CALL EXIT
0018  1000  FORMAT(/ 'Run another analysis (Y/N) ? ')
0019  1001  FORMAT(A1)
0020      END

```

FORTPAN IV V02.5-2 Thu 03-Dec-81 02:02:21

.LP:PROGRM=DK:PROGRM.FOR/O/A

OPTIONS IN EFFECT:

SOURCE
MAP
NOCODE
NOLEAPYEAR
NOREADONLY
LPECL=0136
STAT
ISNS
NOCOL80
USPSWAP
NODIAGNOSE
NCINTEGER*4
NLCHN=06
NODEBUG
VECTOR
NOWARN
CODE:FIS
LOG

4.0 CONTAMINANT PROFILING SYSTEM SOFTWARE

The Contaminant Profiling System software was designed to minimize the need for operator intervention.

The Contaminant Profiling System Software was designed to minimize the need for operator intervention during the course of PWB/PWA analysis. In order accomplish this goal, it was structured as a top-level manager for the C/P system. its tasks include:

- 1 Providing control commands to the various instrumentation including in the system.
- 2 Accepting data from these same instruments and storing that data for future utilization.
- 3 Analyzing the data from the ICP-5000 analysis and from it, deciding which elements require analysis by the HGA-500 Graphite Furnace.
- 4 Organizing the data from the instrumentation into a final report for each board analyzed.
- 5 Determining whether the analyte board has passed or failed the C/P System test.

The System Software was written in Fortran-IV to be executed on a Digital Equipment Corporation MINC 11/03 Minicomputer under the RT-11 (Version 4.0) Operating System. Extensive use of operating system calls was required both to enhance execution speed and to support the unique hardware configuration features of the MINC. Documentation for these calls is available from DEC as part of their RT-11 Support Manuals, and will not be included here.

A complete listing of the C/P System Software is contained on the following pages. In order to provide software maintainability, a modular approach was used. All Martin Marietta Corporation written routine are contained in the listing. However, in addition to these routines vendor-supplied software for the SP4100 Computing Integrator and the M3600 Data Station was modified for usage under the C/P System framework. Because this Software is proprietary to the vendors involved, it is not contained in this report.

NOTES

1. I = ion line; A = atom line. For the significance, see below.
2. Phosphorus, P, was deleted from the list of analyte elements to be run on the ICP 5000 torch because its best and most sensitive line is too far into the ultraviolet (UV). The entire ICP optical path must be purged with a UV-transparent gas, such as argon, to allow the determination of P at 177.50.
3. Recall Note 2, viz., phosphorus, P, was deleted from the list of analyte elements to be run on the ICP torch because its best and most sensitive line is too far into the ultraviolet (UV). However, it can be run on the graphite furnace. Hence, it reappears in the above list.
4. Retention time - time it takes for a particular species to pass through the IC's system and be detected by its detector.

form that can be understood by the host computer at execution time, programs written in this form take between 20 and 200 times as long to run as those in other (compiled) languages. Both of the instruments used in the C/P System were provided by the manufacturers with system software running in interpretive BASIC. The C/P System takes advantage of this fact, in that the controller software, written in FORTRAN IV, has more than enough time to receive, process, and store information from the several instruments concomitantly. Therefore, a general purpose laboratory minicomputer with FORTRAN IV capability and several communication ports was chosen as the system controller. While this increased hardware costs over that of using a smaller microcomputer system, it greatly reduced the development time/cost of the system software. Since the possibility of spreading software costs over many units did not exist, this was deemed to be cost-effective in the development of this particular system.

The lack of portability of BASIC is due to syntactical differences among the various dialects of the language, and remains a problem in the development of systems of this type. It results in increased development costs while the system programmer familiarized himself with these differences. There is a trend toward the use of faster, more powerful languages, such as FORTRAN IV and PASCAL in the design of laboratory instrumentation. Since these languages tend to be more standardized, this will, to some extent, alleviate the problem.

In Figure 49 is depicted the contaminant profiling (C/P) system in the MMC Ocala PW Facility. The C/P system is located in Building 1 in the Contamination Control Room adjacent to the Quality Chemistry Laboratory. It is under the jurisdiction of Quality in Ocala, and a person from Quality is being trained on the instrumentation.

In Figures 50 - 52 are photographs of the actual system hardware. In Figure 50 there is on the left the autosampler for the ion chromatograph (IC), the IC itself is the rectangular unit in the center, and the SP4100 computing integrator is seen on the right in Figure 50. In Figure 51 are seen the MINC-11 and the Perkin-Elmer spectrophotometric system. The MINC is seen in the center foreground. Directly to the left of it is the on-line printer for producing hard-copy. Behind the printer is the MINC visual display unit (CRT)/keyboard terminal. Behind that is the Perkin-Elmer ICP 5000 Data Station (having its own keyboard/visual display unit), and behind that is the HGA-500 graphite furnace control unit. Finally, behind that is the ICP 5000/graphite furnace/torch unit itself. In the far left background, barely visible in Figure 51 is the torch RF power supply. Figure 52 shows the extraction tank/pump unit for making extractions for analysis from sample PWAs.

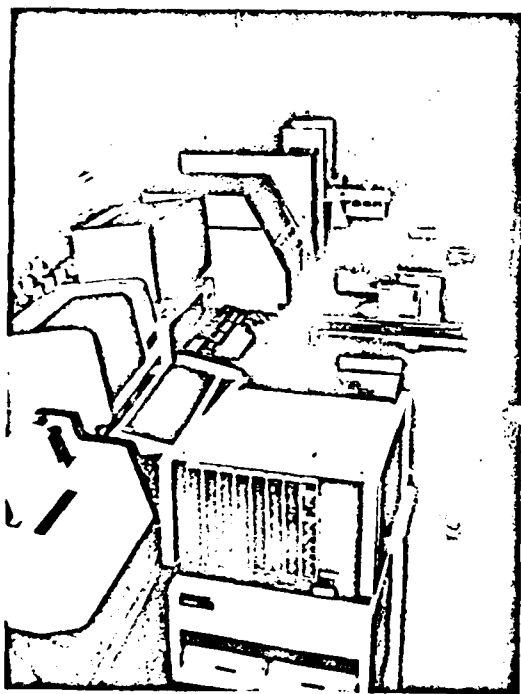


FIGURE 51. The Mini Computer, ICP with DATA System, Printer, Torch, and RF Power Supply

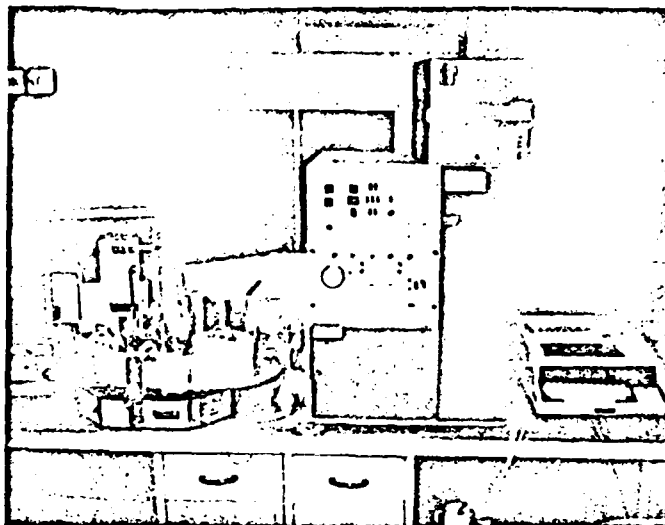


FIGURE 50. The Ion Chromatograph IC Autosample, and Computing Integrator

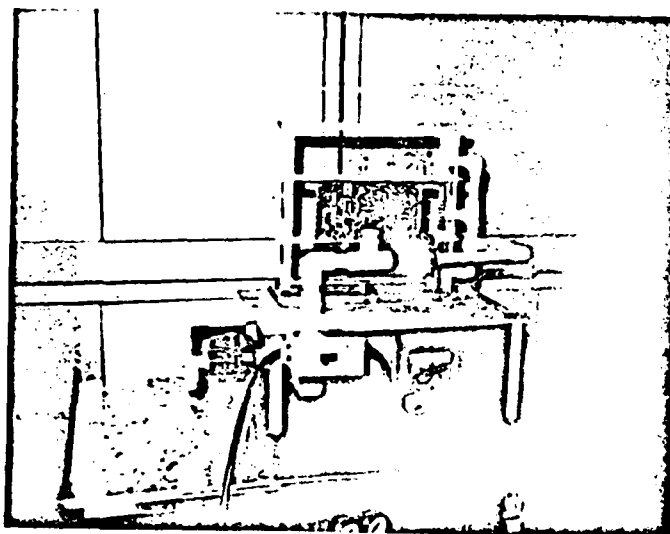


FIGURE 52. The Extraction Tank/Pumping Unit

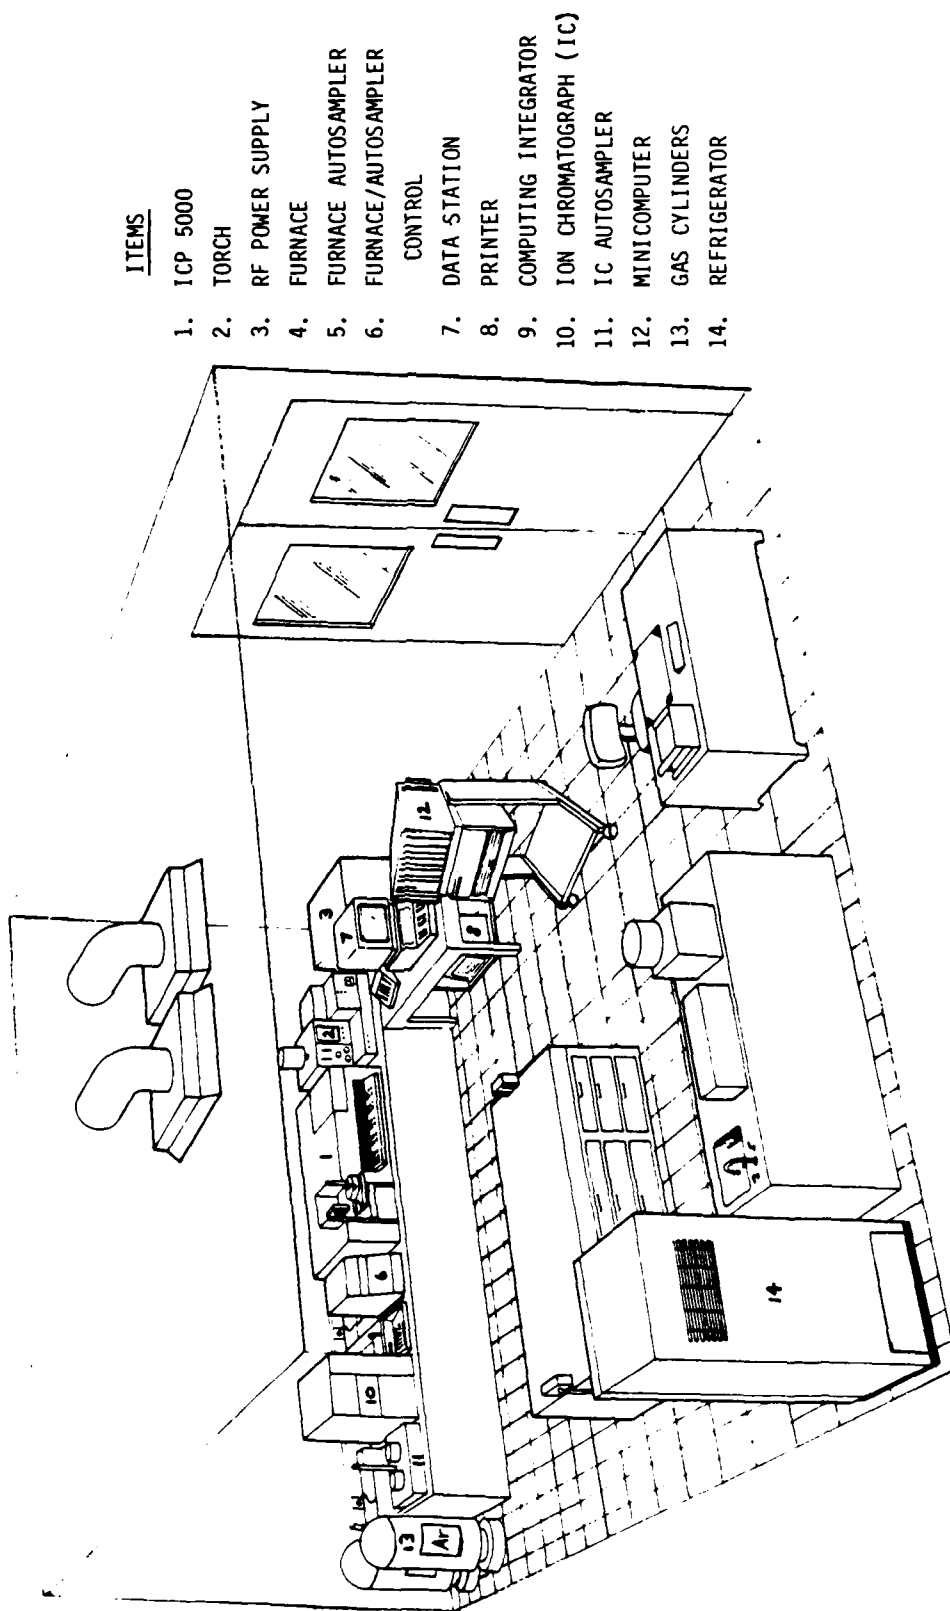


FIGURE 49. PNB Contaminant Profiling Facility - Bldg. 1 Ocala

(1) Chemistry

The instrumentation to be used must be capable of fulfilling the requirements of the end system. While the analytical methodology involved will obviously play a large role in the choice of instrumentation, an automated system will require several additional factors to be considered within the total design. For example, since the C/P System was to have both cations (metals and semimetals) and anions (non-metallic species) determined in parallel, maximizing the system's throughput required that the total analytical time for each technique be balanced. Therefore, the ion chromatograph became the determinant instrument, since at two hours per run, it would require the bulk of the operating time. Within this timeframe, it was decided to use sequential inductively-coupled plasma emission spectrophotometry to determine the metals, backed up by graphite furnace atomic absorption, since the total run times would be approximately equal for most samples.

(2) Data Processing - Hardware

As has already been mentioned, state-of-the-art laboratory instrumentation is showing an increased implementation of microprocessor-based, bus-oriented designs. However, it should be pointed out that the standardization of communication busses and system protocol has not yet arrived. In addition, the need for the availability of detailed technical information concerning these structures has not been fully recognized by many vendors. Therefore, the design of the C/P System required the purchase of equipment that while "computer compatible", was not totally designed to be used in a fully automated system. For these reasons, interfacing problems surfaced requiring hardware knowledge to solve. Particularly troublesome was the fact that certain pieces of equipment had no provision for external communication at all, which necessitated compromises in the data links within the system.

(3) Data Processing - Software

The most commonly available computer language for instrument control at this time is interpretive BASIC. While computer professionals usually feel that the disadvantages of this language limit its usefulness in all but the most casual of data processing situations, interpretive BASIC holds several major advantages for the instrument manufacturer. It is, at this time, unusual to find personnel trained in both Analytical Chemistry and Computer Programming. Since the BASIC language was designed to be rather easily learned, its use allows the instrument manufacturer to train personnel familiar with instrument operation in the programming of the computers needed to control them. The fact that the source program (program statements written in a form understandable to humans) resides within the computer at execution time also vastly simplifies program debugging and modification. The two major disadvantages of interpretive BASIC are its slow execution speed and its lack of portability. Since each BASIC statement must be translated to a

FORTRAN IV V02.5-2 Thu 03-Dec-8. 02:05:33

PAGE 001

```
0001      SUBROUTINE ERASED(IEDOPT)
0002      E:TE CONTRL(5)
0003      DATA CONTRL("33","133,0,"112,"200/
0004      CONTRL(3)=IEDOPT+48
0005      CALL PRINT(CONTRL)
0006      RETURN
0007      END
```

FORTRAN IV V02.5-2 Thu 03-Dec-81 02:06:01

PAGE 001

```
0001      SUBROUTINE ERASEL(IELOPT)
0002      BYTE CONTRL(5)
0003      DATA CONTRL/"33","133,0","113","200/"
0004      CONTRL(3)=IELOPT+48
0005      CALL PRINT(CONTRL)
0006      RETURN
0007      END
```



```
0001      SUBROUTINE MOVCUR(MOVLIN,MOVCOL)
0002      BYTE CTRL(9)
0003      DATA CTRL/'33','133',0,0,'73,0.0','110.'200/
0004      CALL CONVRT(MOVLIN,MVLIN1,MVLIN2)
0005      CALL CONVRT(MOVCOL,MVCOL1,MVCOL2)
0006      CTRL(3)=MVLIN1
0007      CTRL(4)=MVLIN2
0008      CTRL(6)=MVCOL1
0009      CTRL(7)=MVCOL2
0010      CALL PRINT(CTRL)
0011      RETURN
0012      END
```

```
0001      SUBROUTINE DOUBLE(IDOPT, IDLIN)
0002      BYTE CONTRL(4)
0003      DATA CONTRL/"33","43",0,"200/"
0004      IDBOPT=IDOPT
0005      IDBLIN=IDLIN
0006      IF(IDBOPT.EQ.0)IDBOPT=53
0007      IF(IDBOPT.EQ.1)IDBOPT=54
0008      IF(IDBOPT.EQ.2)IDBOPT=51
0009
0010      5  CALL MOVCUR(IDBLIN,1)
0011
0012      CALL EPASEL(2)
0013
0014      4  CONTRL(3)=IDBOPT
0015      CALL PRINT(CONTRL)
0016
0017      IF(IDBOPT.EQ.52)CALL MOVCUR(IDBLIN-1,1)
0018      IF(IDBOPT.NE.51)GOTO 2
0019
0020      IDBOPT=52
0021      IDBLIN=IDBLIN+1
0022      GOTO 5
0023
0024      2  RETURN
0025
0026      END
```

FORTRAN IV

V02.5-2

Thu 03-Dec-81 02:07:41

PAGE 001

```
0001      SUBROUTINE ATTRIB(IATOPT)
0002      BYTE CONTRL(5)
0003      DATA CONTRL/"33","133,0","155","200/"
0004      CONTRL(3)=IATOPT+48
0005      CALL PRINT(CONTRL)
0006      RETURN
0007      END
```

```
0001      SUBROUTINE FPRINT(IFILNO,IFLAG)
0002      BYTE INSTR(80),FILE(11)
0003      DATA FILE/'123','131','72','103','113,0','56','114','123','124,0/
0004      NFILE=IFILNO
0005      IF(IFLAG.EQ.0)NFILE=1
0006      DO 5,ICOUNT=1,NFILE
0007      FILE(6)=ICOUNT+48
0008      IF(IFLAG.EQ.0)FILE(6)=IFILNO+48
0009      OPEN(UNIT=1,NAME=FILE,TYPE='OLD')
0010      IF(IFLAG.EQ.0)GO TO 1
0011      OPEN(UNIT=6,NAME= LP:',CARRIAGECONTROL='FORTRAN ')
0012      DO 2 INDEX=1,80
0013      INSTR(INDEX)=0
0014      CONTINUE
0015      READ(1,1000,END=4)NCHRS,(INSTR(KOUNT),KOUNT=1,NCHRS)
0016      DO 6,INDEX=1,80
0017      IF(INSTR(INDEX).EQ.10)GO TO 3
0018      CONTINUE
0019      WRITE(6,1001)(INSTR(KOUNT),KOUNT=1,INDEX)
0020      GO TO 1
0021      CLOSE(UNIT=1)
0022      IF(IFLAG.EQ.0)GO TO 5
0023      CLOSE(UNIT=6)
0024      CONTINUE
0025      RETURN
0026      1000  FORMAT(G,80A1)
0027      1001  FORMAT('+',80(A1,:))
0028      END
```

FORTRAN IV V02.5-2 Thu 03-Dec-81 02:08:54

PAGE 001

```
0001      SUBROUTINE BELL
0002      BYTE CHF(2)
0003      DATA CHR/7,"200/"
0004      DO 2,KOUNT=1,10
0005      CALL PRINT(CHR)
0006      DO 2,KOUNT1=1,10000
0007  2      CONTINUE
0008      RETURN
0009      END
```

```

0001      SUBROUTINE SETUP(ISTOP)
0002      BYTE ERR,DATE(9),CHR,REPLY,INSTR(34),TIMSTR(8)
0003      BYTE SEQ(13)
0004      INTEGER*4 SETSCR(18)
0005      DATA SETSCR/'DPR',0,'DATE','TIME','P/N',0,'LOT',0,'S/N',0,
1      SEQ/'0,0,0,0','ICP','HGA','IC','TANK','MODE','000,0,0,0',
0006      DATA SEQ/'104','131','61','72','103','120,0,0','56','104','101','124,0,0',
0007  7      CALL CLEAR
0008      CALL SCROLL(15,24)
0009      CALL DOUBLE(1,1)
0010      CALL MOVCUR(1,6)
0011      CALL PRINT('CONTAMINANT PROFILING SYSTEM')
0012      CALL DOUBLE(1,14)
0013      CHR= ' '
0014      TYPE 1006,'CHR,INDEX=1,40)
0015 1006  FORMAT('+',40A1)
0016      CALL ATTRIB(7)
0017      INDEX=1
0018      DO 4,ILIN=3,9,2
0019      DO 4,ICOL=1,61,20
0020      CALL MOVCUR(ILIN,ICOL)
0021      TYPE 1001,SETSCR(INDEX)
0022 1001  FORMAT('+',A4)
0023      INDEX=INDEX+1
0024  4      CONTINUE
0025      CALL MOVCUR(11,1)
0026      TYPE 1001,SETSCR(17)
0027      CALL MOVCUR(13,1)
0028      TYPE 1001,SETSCR(18)
0029      CALL ATTRIB(0)
0030      CALL MOVCUR(11,6)
0031      CALL PRINT('SET-UP')
0032      DO 5,ICOL=6,66,20
0033      CALL MOVCUR(9,ICOL)
0034      CALL PRINT('INACTIVE')
0035  5      CONTINUE
0036      OPEN(UNIT=1,NAME='SY:DATTIM.COM',TYPE='OLD')
0037      READ(1,1017)(DATE(INDEX),INDEX=1,9)
0038 1017  FORMAT(5X,9A1)
0039      CLOSE(UNIT=1)
0040      CALL MOVCUR(3,46)
0041      TYPE 1018,'DATE(INDEX),INDEX=1,9)
0042 1018  FORMAT('+',9A1)
0043      CALL TIME(TIMSTR)
0044      CALL MOVCUR(3,66)
0045      TYPE 1022,(TIMSTR(INDEX),INDEX=1,8)
0046 1022  FORMAT('+',8A1)
0047      CALL MOVCUR(24,1)
0048      IFILE=3
0049      TYPE 1002
0050 1002  FORMAT('Is this the first run of the week (Y/N) ? ')
0051      ACCEPT 1005,REPLY
0052 1005  FORMAT(A1)
0053      IF(REPLY.NE.'Y')IFILE=2

```

```

0055      IF(REPLY.EQ.'Y')GO TO 10
0057      TYPE 1029
0058 1029  FORMAT('Is this the first run of the day (Y/N) ? ')
0059      ACCEPT 1005,REPLY
0060      IF(REPLY.NE.'Y')IFILE=1
0062 10    CALL MOVCP(13,6)
0063      CALL ATTRIB(5)
0064      CALL PRINT('Printing Start-up Checklists ')
0065      CALL ATTRIB(0)
0066      CALL MOVCP(24,1)
0067      CALL FPRINT(IFILE,1)
0068      CALL MOVCP(13,6)
0069      CALL ERASEL(0)
0070      CALL MOVCP(24,1)
0071      ISTOP=1
0072      IF(IFILE.EQ.1) GO TO 20
0074      TYPE 1050
0075 1050  FORMAT('Continue with the analysis (Y/N) ? ')
0076      ACCEPT 1051,REPLY
0077      IF(REPLY.EQ.'Y')GO TO 20
0079 1051  FORMAT(A1)
0080      ISTOP=1
0081      RETURN
0082 20    OPEN(UNIT=1,NAME='SY:SEQ.DAT',TYPE='OLD')
0083      READ(1,1023)ISEQ1,ISEQ2
0084      CLOSE(UNIT=1)
0085      OPEN(UNIT=1,NAME='SY:SEQ.DAT',TYPE='NEW')
0086      ISEQ1=ISEQ2+1
0087      IF(ISEQ2.LE.71)GO TO 8
0089      ISEQ2='60
0090      ISEQ1=ISEQ1+1
0091 8      WRITE(1,1023)ISEQ1,ISEQ2
0092 1023  FORMAT(2I5)
0093      CLOSE(UNIT=1)
0094      SEQ(7)=ISEQ1
0095      SEQ(8)=ISEQ2
0096      OPEN(UNIT=2,NAME=SEQ,TYPE='NEW',CARRIAGECONTROL='LIST')
0097      CALL MOVCP(7,6)
0098      TYPE 1026,SEQ(7),SEQ(8)
0099 1026  FORMAT('+',A1,1X,A1)
0100      WRITE(2,1024)(DATE(INDEX),INDEX=1,3)
0101 1024  FORMAT(1X,9A1)
0102      WRITE(2,1025)(TIMSTR(INDEX),INDEX=1,8)
0103 1025  FORMAT(1X,8A1)
0104      CALL MOVCP(24,1)
0105      TYPE 1040
0106 1040  FORMAT('Enter Operator Name ')
0107      CALL GETSTR(5,INSTR,33,ERR)
0108      CALL MOVCP(3,6)
0109      CALL PRINT(INSTR)
0110      WRITE(2,1026)(INSTR(INDEX),INDEX=1,33)
0111 1026  FORMAT(1X,33A1)
0112      CALL MOVCP(24,1)
0113      TYPE 1041

```

```
0114 1041 FORMAT(/,$Enter Part Number          )
0115      CALL GETSTR(5,INSTR,33,ERR)
0116      CALL MOVCUR(5,6)
0117      CALL PRINT(INSTR)
0118      WRITE(2,1026)(INSTR(INDEX),INDEX=1,33)
0119      CALL MOVCUR(24,1)
0120      TYPE 1042
0121 1042 FORMAT(/,$Enter Lot Number            )
0122      CALL GETSTR(5,INSTR,14,ERR)
0123      CALL MOVCUR(5,46)
0124      CALL PRINT(INSTR)
0125      WRITE(2,1027)(INSTR(INDEX),INDEX=1,14)
0126 1027 FORMAT(1X,14A1)
0127      CALL MOVCUR(24,1)
0128      TYPE 1043
0129 1043 FORMAT(/,$Enter Serial Number          )
0130      CALL GETSTR(5,INSTR,14,ERR)
0131      CALL MOVCUR(5,66)
0132      CALL PRINT(INSTR)
0133      WRITE(2,1027)(INSTR(INDEX),INDEX=1,14)
0134      CALL MOVCUR(24,1)
0135      TYPE 1044
0136 1044 FORMAT(/,$Enter board length (cm)       )
0137      ACCEPT*,FLEN
0138      TYPE 1045
0139 1045 FORMAT(/,$Enter board width  (cm)       )
0140      ACCEPT*,FWID
0141      APEACM=FLEN*FWID*2
0142      WRITE(2,1046)APEACM
0143 1046 FORMAT(F10.2)
0144      TYPE 1047
0145 1047 FORMAT(/,$Enter tank volume  (ml)       )
0146      ACCEPT*,TVOL
0147      WRITE(2,1048)TVOL
0148 1048 FORMAT(F10.2)
0149      CLOSE(UNIT=2)
0150      RETURN
0151      END
```



```

0001      SUBROUTINE EXTPCT
0002      BYTE REPLY,ERR,ENDFLO,CHR
0003      CALL MOVCUR(11,6)
0004      CALL ATTRIB(0)
0005      CALL PRINT("EXTRACTION")
0006      CALL MOVCUR(24,1)
0007      TYPE 1005
0008 1005  FORMAT("Enter extraction time (min.) ")
0009      ACCEPT *,RUNTIM
0010      CALL MOVCUR(13,6)
0011      CALL PRINT("Time remaining :      min      sec")
0012      CALL MOVCUR(13,25)
0013      IPUN=INT(RUNTIM)
0014      TYPE 1010,IPUN
0015 1010  FORMAT("+",I2)
0016      CALL MOVCUR(24,1)
0017      CALL PRINT(" ")
0018      CALL PRINT("Fill extraction tank with DI water.")
0019      CALL PRINT("Place analyte board in tank.")
0020      CALL PRINT("Turn on extraction tank pump.")
0021      TYPE 1001
0022 1001  FORMAT("Press (RETURN) when ready to begin timing.")
0023      ACCEPT 1002,REPLY
0024 1002  FORMAT("A")
0025      STTIM=SECNDS(0.)
0026      CALL MOVCUR(13,66)
0027      CALL PRINT("ACTIVE")
0028      CALL MOVCUR(13,6)
0029      CALL ATTRIB(5)
0030      CALL PRINT("Time remaining :")
0031 1      ETIM=SECNDS(STTIM)
0032      SECTIM=RUNTIM*60-ETIM
0033      ISECT=INT(SECTIM)
0034      IMIN=ISECT/60
0035      ISEC=ISECT-IMIN*60
0036      CALL ATTRIB(0)
0037      CALL MOVCUR(13,25)
0038      TYPE 1008,IMIN
0039      CALL MOVCUR(13,54)
0040      TYPE 1009,ISEC
0041      IF(ETIM.LT.RUNTIM*60)GO TO 1
0042 1008  FORMAT("+",I2)
0043      CALL MOVCUR(13,66)
0044      CALL PRINT("FINISHED")
0045      CALL MOVCUR(13,6)
0046      CALL PRINT("Time Remaining :")
0047      CALL MOVCUR(24,1)
0048      TYPE 1011
0049 1011  FORMAT("Extraction complete. Turn off pump to")
0050      CALL PRINT("Extraction Tank.")
0051      CALL BELL
0052      CALL MOVCUR(13,6)
0053      CALL ERASEL(0)
0054      CALL MOVCUR(24,1)

```

09TFAN IV V12.5-2 Thu 03-Dec-81 02:11:51

PAGE 002

0000 RETURN
0000 END

```

0001      SUBROUTINE INSTRU(LOAD1)
0002      BYTE PEPLY,CHR,STRING(10),INSTR(83),OUTSTR(83),SEQ(14)
0003      INTEGER*2 JOB,SBLOK1(4),SBLOK2(4),HOLD1,HOLD2
0004      DATA SEQ/'104','131','61','72',0,0,0,0,0,'56','104','101','124,0/
0005      CALL MOVCUR(11,5)
0006      CALL ATTRIB(0)
0007      CALL PRINT('ANALYSIS ')
0008 1      CALL MOVCUR(24,1)
0009      CALL PRINT(' ')
0010      CALL PRINT('Verify CHECKLIST items complete. ')
0011      CALL PRINT('Place extract samples in auto-samplers. ')
0012      CALL PRINT('Start Data Station by typing ICP <RETURN>. ')
0013      IER1=MTATCH(1,,JOB1)
0014      IF(IER1)GO TO 9999
0015      IER2=MTATCH(2,,JOB2)
0016      IF(IER2)GO TO 9999
0017      IF(MTSET(1,SELCK1(1)).NE.0)GO TO 9999
0018      IF(MTSET(2,SELCK2(1)).NE.0)GO TO 9999
0019      SELCK1(1)=SELCK1(1).OR.'10000
0020      SELCK2(1)=SELCK2(1).OR.'10000
0021      SELCK1(1)=SELCK1(1).OR.'100
0022      SELCK2(1)=SELCK2(1).OR.'100
0023      IF(MTSET(1,SELCK1(1)).NE.0)GO TO 9999
0024      IF(MTSET(2,SELCK2(1)).NE.0)GO TO 9999
0025      OPEN(UNIT=1,NAME='SY:SEQ.DAT',TYPE='OLD')
0026      READ(1,1004)ISEQ1,ISEQ2
0027 1004  FORMAT(2I5)
0028      CLOSE(UNIT=1)
0029      HOLD1=0
0030      HOLD2=0
0031      LOAD1=0
0032      LOAD2=0
0033 4      CALL ION(ISEQ1,ISEQ2,LOAD1)
0034      IF(LOAD2.EQ.1)GO TO 3
0035      IF(LOAD2.EQ.2)GO TO 5
0036 2      CALL HEAR(2,HOLD2,INSTR)
0037      IF(HOLD2.EQ.1)GO TO 4
0038      SEQ(5)='124
0039      SEQ(6)='103
0040      SEQ(7)='110
0041      SEQ(8)=ISEQ1
0042      SEQ(9)=ISEQ2
0043      OPEN(UNIT=2,NAME=SEQ,TYPE='NEW',CAPRIAGECONTROL='LIST')
0044      DO 99, IPUN = 1,3
0045      CALL MOVCUR(9,5)
0046      CALL ATTRIB(0)
0047      TYPE 1002,IPUN
0048 1002  FORMAT(' *GROUP',1X,11,1X)
0049      CALL MOVCUR(24,1)
0050      CALL CLRSTR(OUTSTR)
0051      CALL SCOPY(15,(FL,OUTSTR)
0052      OUTSTR(3)=IPUN+48
0053      CALL XTPRNT(2,OUTSTR)
0054      TYPE 1003,IPUN

```

```

1003  FCPMAT( 10P,5000 head: for Analytical Group #1.117
1      1 Please follow prompts on Data Station to begin analysis. )
      LOAD2=1
3      CALL HEAR(2,HOLD2,INSTR)
      IF(HOLD2.EQ.1) GO TO 4
      IF(INSTR(1).EQ.'C')GO TO 999
8      CALL CLRSTR(OUTSTR)
      CALL SCOPY( 1PA1,OUTSTR)
      CALL MTRPNT(2,OUTSTR)
      LOAD2=2
5      CALL HEAR(2,HOLD2,INSTR)
      IF(HOLD2.EQ.1)GO TO 4
      IF(INSTR(1).EQ.'A'.AND.INSTR(35).NE.'A')GO TO 5
      IF(INSTR(1).EQ.'C')GO TO 999
      IF(INSTR(35).EQ.'A')GO TO 7
      CALL CLRSTR(OUTSTR)
      CALL SUBSTR(INSTR,STRING,1,5)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      CALL SUBSTR(INSTR,STRING,27,2)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      CALL SUBSTR(INSTR,STRING,53,5)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      CALL SUBSTR(INSTR,STRING,63,3)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      GO TO 5
7      CALL SUBSTR(INSTR,STRING,39,7)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      CALL SUBSTR(INSTR,STRING,51,7)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      CALL CONCAT(OUTSTR,' ',OUTSTR)
      CALL SUBSTR(INSTR,STRING,63,5)
      CALL CONCAT(OUTSTR,STRING,OUTSTR)
      WRITE(2,1005)(OUTSTR(KOUNT),KOUNT=1,67)
1005  FORMAT(1X,67A1)
      GO TO 5
9      CALL HEAR(2,HOLD2,INSTR)
      IF(HOLD2.EQ.1)GO TO 9
99     CONTINUE
      CLOSE(UNIT=2)
      CALL MOVCUR(9,6)
      CALL PRINT( FINISHED )
      RETURN
399    IF(INSTR(2).NE.'C')GO TO 900
      CALL MOVCUR(13,6)
      CALL ATTPIB(5)
      CALL PRINT( Communications Error! )
      CALL MOVCUR(24,1)
      CALL ATTPIB(0)
      CALL BELL

```

AD-A151 952

ESTABLISHMENT OF PRODUCTION CLEANLINESS CRITERIA AND
PROCESSES FOR PRINTING (U) MARTIN MARIETTA AEROSPACE
ORLANDO FL J K BONNER DEC 81 OR-16668
DAAK-48-78-C-0114


3/3

UNCLASSIFIED

F/G 9/5

NL

									END				
									FORMED				
									STC				

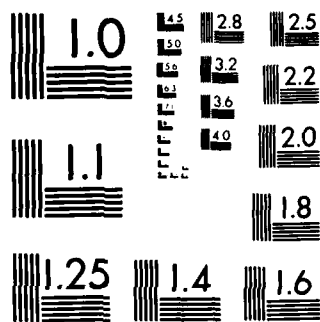

MICROCOPY RESOLUTION TEST CHART
NATIONAL BUREAU OF STANDARDS 1963 A

```

0125      TYPE 10001
0126 10001 FORMAT(/ $Correct Communication Problem. Press (RETURN) to
      1 resume analysis. /)
0127      GO TO 9990
0128 900  IF (INSTR(2).EQ. 'E'.AND.INSTR(3).EQ. 'N')GO TO 9
0130      IF (INSTR(2).NE. 'D'.AND.INSTR(2).NE. 'F'.AND.INSTR(2).NE. 'M')
      1 GO TO 901
0132      CALL MOVCUR(13,6)
0133      CALL ATTRIB(5)
0134      CALL PRINT('Error in Reading Disk!')
0135      CALL MOVCUR(24,1)
0136      CALL ATTRIB(0)
0137      CALL BELL
0138      TYPE 10004
0139 10004 FORMAT(/ $An error has occurred in attempting to read from the
      1 disk in drive 1 of the Data Station. Make sure that the
      2 correct disk is inserted and that the door is to the drive
      3 is closed. Press (RETURN) to resume analysis. /)
0140 9990  ACCEPT 10003,REPLY
0141 10003 FORMAT(A1)
0142      CALL MOVCUR(13,6)
0143      CALL ERASEL(0)
0144      CALL MOVCUR(24,1)
0145      IF (LOAD2.NE.2)GO TO 9991
0147      LOAD2=1
0148      CLOSE(UNIT=2)
0149      GO TO 3
0150 9991  LOAD2=0
0151      GO TO 2
0152 501  IF (INSTR(2).NE. 'S')GO TO 9999
0154      CALL MOVCUR(13,6)
0155      CALL ATTRIB(5)
0156      CALL PRINT('Error in Reading Standards!')
0157      CALL MOVCUR(24,1)
0158      CALL ATTRIB(0)
0159      CALL BELL
0160      TYPE 10006
0161 10006 FORMAT(/ $The Data Station has detected an error in the Stand-
      1 ardization Process. /) Check Standard Preparation. Refill
      2 AS-50 sample cups with fresh standards. /) $Press (RETURN) to
      3 resume analysis. /)
0162      ACCEPT 10003,REPLY
0163      CALL MOVCUR(13,6)
0164      CALL ERASEL(0)
0165      CALL MOVCUR(24,1)
0166      CLOSE(UNIT=2)
0167      LOAD2=1
0168      GOTO 3
0169 9999  CALL MOVCUR(13,6)
0170      CALL ATTRIB(5)
0171      CALL PRINT('System Error!')
0172      IEP1=MTDTCH(1)
0173      IEP2=MTDTCH(2)
0174      IF (LOAD2.EQ.2)CLOSE(UNIT=2)

```

```

0176      CALL MOVCUR(24,1)
0177      CALL ATTRIB(0)
0178      CALL BELL
0179      TYPE 10010
0180 10010 FORMAT(' A fatal system error has occurred. Restart IC and
1 ICP. // $Press <RETURN> to resume analysis. ')
0181      ACCEPT 10009,REPLY
0182      CALL MOVCUR(13,8)
0183      CALL EPASEL(0)
0184      GO TO 1
0185      END

```



```

0001      SUBROUTINE DECIDE(LOAD1)
0002      BYTE INSTR(83),OUTSTR(83),SEQ(14),TYPE,DATA(3),TURRET,18
1,LAMP(18),ELAMP,ETURPT,TDATA(10)
0003      INTEGP*2 HOLD3,NAME(18),ICROSS(18),FURNCE(18),ORDER(18),ENAME
1,ECROSS,EORDER,EFURN,LOAD1
0004      DATA SEQ/"104,"131,"61,"72,"124,"103,"110,0,0,"56,"104,
1"101,"124,0/
0005      DATA TDATA/"133,"131,"72,"124,0,"56,"114,"123,"124,0/
0006      CALL MOVCUR(11,6)
0007      CALL PRINT( 'DECISION ' )
0008      CALL MOVCUR(13,6)
0009      CALL ATTRIB(5)
0010      CALL PRINT( 'Determining Elements' )
0011      CALL ATTRIB(0)
0012      CALL MOVCUR(124,1)
0013      DO 7,KOUNT=1,18
0014      LAMP(KOUNT)=0
0015      TURRET KOUNT =0
0016      NAME(KOUNT) =0
0017      ICROSS(KOUNT)=0
0018      ORDER(KOUNT)=0
0019      FURNCE(KOUNT)=-1
0020 7      CONTINUE
0021      OPEN(UNIT=1,NAME='SY:SEQ.DAT',TYPE='OLD')
0022      READ(1,1000)ISEQ1,ISEQ2
0023 1000  FORMAT(2I5)
0024      CLOSE(UNIT=1)
0025      SEQ(8)=ISEQ1
0026      SEQ(9)=ISEQ2
0027      CALL ION( ISEQ1, ISEQ2, LOAD1 )
0028      OPEN(UNIT=1,NAME=SEQ,TYPE='OLD',CARRIAGECONTROL='LIST')
0029      OPEN(UNIT=2,NAME='SY:CROSS.LST',TYPE='OLD',CARRIAGE
1CONTROL='LIST')
0030      READ(2,1002,END=2)((NAME(KOUNT),ICROSS(KOUNT),KOUNT=1,30)
0031 1002  FORMAT(A2,2X,18)
0032 2      CLOSE(UNIT=2)
0033      IELE=KOUNT-1
0034 3      READ(1,1003,END=10)TYPE,INAME,(DATA(K),K=2,6)
0035 1003  FORMAT(2X,A1,4X,A2,13X,7A1)
0036      IF(TYPE.NE.'A')GO TO 3
0038      DATA(1)=DATA(8)
0039      DATA(9)=0
0040      DECODE(7,1004,DATA)IDATA
0041 1004  FORMAT(17)
0042      CALL ION( ISEQ1, ISEQ2, LOAD1 )
0043      DO 4,KOUNT=1,IELE
0044      IF(INAME.EQ.NAME(KOUNT))GO TO 5
0046 4      CONTINUE
0047      GO TO 3
0048 5      FURNCE(KOUNT)=0
0049      IF(IDATA.LT.ICROSS(KOUNT))FURNCE(KOUNT)=1
0051      GO TO 3
0052 10      CLOSE(UNIT=1)
0053      CALL MOVCUR(13,6)

```

```

0054      CALL ERASEL(0)
0055      CALL ATTRIB(5)
0056      CALL PRINT('Containing Data Station')
0057      CALL MOVCUR(24,1)
0058      CALL ATTRIB(0)
0059      CALL SCOPY('QUIT',OUTSTR)
0060      CALL MTPRNT(2,OUTSTR)
0061      LOAD2=0
0062 20     CALL IOI(ISEQ1,ISEQ2,LOAD1)
0063      IF(LOAD2.EQ.1)GO TO 21
0064      IF(LOAD2.EQ.2)GO TO 22
0065 1      CALL HEAP(2,HOLD3,INSTR)
0066      IF(HOLD3.EQ.1)GO TO 20
0067      CALL SCOPY('GFLOD',OUTSTR)
0068      CALL MTPRNT(2,OUTSTR)
0069      LOAD2=1
0070 21     CALL HEAP(2,HOLD3,INSTR)
0071      IF(HOLD3.EQ.1)GO TO 20
0072      IF(INSTR(1).NE.0)AND(INSTR(2).NE.0)GO TO 999
0073      CALL MOVCUR(13,6)
0074      CALL ERASEL(0)
0075      CALL ATTRIB(5)
0076      CALL PRINT('Calling Turret Information')
0077      CALL MOVCUR(24,1)
0078      CALL ATTRIB(0)
0079      DO 12,KOUNT=1,IELE
0080      IF(FURNCE(KOUNT).EQ.0)GO TO 12
0081      CALL CLRSTR(OUTSTR)
0082      CALL SCOPY(NAME(KOUNT),OUTSTR,2)
0083      CALL MTPRNT(2,OUTSTR)
0084      LOAD2=2
0085 22     CALL HEAP(2,HOLD3,INSTR)
0086      IF(HOLD3.EQ.1)GO TO 20
0087      IF(INSTR(1).EQ.0)GO TO 999
0088      TURRET(KOUNT)=INSTR(1)
0089      LAMP(KOUNT)=INSTR(2)
0090      DECODE(2,1009,INSTR)ORDER(KOUNT)
0091 1009   FORMAT(I2)
0092 12     CONTINUE
0093      CALL MOVCUR(13,6)
0094      CALL ERASEL(0)
0095      CALL ATTRIB(5)
0096      CALL PRINT('Sorting Elements')
0097      CALL MOVCUR(24,1)
0098      CALL ATTRIB(0)
0099      INDEX=IELE-1
0100      DO 14,JINDEX=1,INDEX
0101      KINDEX=JINDEX+1
0102      DO 14,LINDEX=IELE,KINDEX,-1
0103      IF(ORDER(LINDEX).GT.ORDER(JINDEX))GO TO 14
0104      ELAMP=LAMP(LINDEX)
0105      ETURPT=TURRET(LINDEX)
0106      ENAME=NAME(LINDEX)
0107      ECROSS=ICROSS(LINDEX)

```

```
0117      EORDEF=ORDER(LINDEX)
0118      EFURN=FURNCE(LINDEX)
0119      LAMP(LINDEX)=LAMP(JINDEX)
0120      TURRET(LINDEX)=TURRET(JINDEX)
0121      NAME(LINDEX)=NAME(JINDEX)
0122      ICROSS(LINDEX)=ICROSS(JINDEX)
0123      ORDEF(LINDEX)=ORDER(JINDEX)
0124      FURNCE(LINDEX)=FURNCE(JINDEX)
0125      LAMP(JINDEX)=ELAMP
0126      TURRET(JINDEX)=ETURRT
0127      NAME(JINDEX)=ENAME
0128      ICROSS(JINDEX)=ECROSS
0129      ORDER(JINDEX)=EORDER
0130      FURNCE(JINDEX)=EFURN
0131      CALL ION(ISEQ1, ISEQ2, LOAD1)
0132 14      CONTINUE
0133      DO 15, ITUR=1, 3
0134      CALL ION(ISEQ1, ISEQ2, LOAD1)
0135      TDATA(5)=ITUR+48
0136      OPEN(UNIT=1, NAME=TDATA, TYPE='NEW', CARRIAGECONTROL='LIST')
0137      IFLAG=0
0138 17      DO 16, KOUNT=1, IELE
0139      IF (TURRET(KOUNT).NE.TDATA(5).OR.FURNCE(KOUNT).EQ.0)GO TO 16
0141      IFLAG=1
0142      WRITE(1, 1011)NAME(KOUNT), TURRET(KOUNT), LAMP(KOUNT),
1 FURNCE(KOUNT)
0143 1011  FORMAT(A2, 2X, A1, 2X, A1, 2X, I3)
0144 16      CONTINUE
0145      IF (IFLAG.EQ.0)WRITE(1, 1012)
0147 1012  FORMAT('NODATA')
0148      CLOSE(UNIT=1)
0149 15      CONTINUE
0150      CALL MOVCUR(13, 6)
0151      CALL ERASEL(0)
0152      CALL MOVCUR(24, 1)
0153      RETURN
0154 999    TYPE 10000
0155 10000  FORMAT(' ERROR IN CODING ROUTINES')
0156      CALL EXIT
0157      END
```

```
0001      SUBROUTINE FURNEC(LOAD1)
0002      BYTE INSTR(83),OUTSTR(83),PEPLY,SEQ(14),TURRET(6),LAMP(6),
1TDATA(10),LSTSAM,ISTDS
0003      INTEGER*2 HOLD4,NAME(6)
0004      DATA SEQ/"104,"131,"61,"72,"106,"122,"116,0,0,"56,"104,
1"101,"124,0/
0005      DATA TDATA/"123,"131,"72,"124,0,"56,"114,"123,"124,0/
0006      CALL MOVCUR(11,6)
0007      CALL PRINT('ANALYSIS  ')
0008      CALL MOVCUR(13,6)
0009      CALL ATTRIB(5)
0010      CALL PRINT('Opening Output File')
0011      CALL ATTRIB(0)
0012      CALL MOVCUR(24,1)
0013      OPEN(UNIT=1,NAME='SY:SEQ.DAT',TYPE='OLD')
0014      READ(1,1001)ISEQ1,ISEQ2
0015 1001  FORMAT(2I5)
0016      CLOSE(UNIT=1)
0017      CALL ION(ISEQ1,ISEQ2,LOAD1)
0018      SEQ(8)=ISEQ1
0019      SEQ(9)=ISEQ2
0020      OPEN(UNIT=2,NAME=SEQ,TYPE='NEW',CARRIAGECONTROL='LIST')
0021      CALL MOVCUR(9,26)
0022      CALL PRINT('ACTIVE  ')
0023      CALL MOVCUR(24,1)
0024      CALL ION(ISEQ1,ISEQ2,LOAD1)
0025      DO 1,ITUR=1,3
0026      CALL MOVCUR(13,6)
0027      CALL ERASEL(0)
0028      CALL ATTRIB(5)
0029      CALL PRINT('Reading Elements')
0030      CALL ATTRIB(0)
0031      CALL MOVCUR(24,1)
0032      TDATA(5)=ITUR+48
0033      OPEN(UNIT=1,NAME=TDATA,TYPE='OLD',CARRIAGECONTROL='LIST')
0034      KOUNT=1
0035 2      READ(1,1005,END=3)NAME(KOUNT),TURRET(KOUNT),LAMP(KOUNT)
0036 1005  FORMAT(A2,2X,A1,2X,A1)
0037      KOUNT=KOUNT+1
0038      IF(NAME(KOUNT-1).NE.'NO')GO TO 2
0040      CLOSE(UNIT=1)
0041      GO TO 1
0042 3      IELE=KOUNT-1
0043      CLOSE(UNIT=1)
0044      CALL ION(ISEQ1,ISEQ2,LOAD1)
0045      OPEN(UNIT=6,NAME='LP:',CARRIAGECONTROL='FORTRAN')
0046      CALL MOVCUR(9,26)
0047      CALL ATTRIB(0)
0048      TYPE 1015,ITUR
0049 1015  FORMAT('++TUPRET ',11)
0050      CALL MOVCUR(13,6)
0051      CALL ATTRIB(5)
0052      TYPE 1003,ITUR
0053 1003  FORMAT('++Printing Checklist - Turret #',12)
```

```

0054      CALL MOVCUR(24,1)
0055      CALL ATTRIB(0)
0056      CALL FPRINT(4,0)
0057      WRITE(6,1004)ITUR
0058 1004  FORMAT(' Lamp Turret / Analytical Sequence #',I2// ' Be sure
        1Lamps are loaded in the following order : '//1X,'Lamp',20X,
        2'Turret Position'/11X,'-----',20X,'-----')
0059      CALL ION(ISEQ1,ISEQ2,LOAD1)
0060      DO 4, INDEX=1, IELE
0061      WRITE(6,1006)NAME(INDEX), LAMP(INDEX)
0062 1006  FORMAT(12X,A2,28X,A1)
0063 4      CONTINUE
0064      WRITE(6,1007)ITUR
0065 1007  FORMAT(' Load Program Card # ',I1,' into HGA-500. '// ' Load the
        1 following sequences into the AS-40 auto-sampler : '//1X,'SEQ',
        2T11,' PROG',T22,' #',T32,' LAST',T41,' METHOD',T51,' SAMPLE',T61
        3,' INST',T71,' HGA'/2X,' #',T11,' DELAY',T21,' STDS',T31,' SAMPLE',
        4T43,' #',T52,' VOL',T61,' PROG',T71,' PROG'/1X,'-----',T11,'-----',
        5T21,'-----',T31,'-----',T41,'-----',T51,'-----',T61,'-----',
        6T71,'-----')
0066      CALL ION(ISEQ1,ISEQ2,LOAD1)
0067      ISTDS=13
0068      LSTSAM= 1
0069      METHOD=1
0070      IVOL=20
0071      IDELAY=2
0072      DO 5, INDEX=1, IELE
0073      WRITE(6,1008)INDEX, IDELAY, ISTDS, LSTSAM, METHOD, IVOL, INDEX, LAMP
        1(INDEX)
0074 1008  FORMAT(1X, I2, T13, I1, T22, A1, T33, A1, T43, I1, T52, I3, T62, I1, T72, A1)
0075 5      CONTINUE
0076      CALL ION(ISEQ1,ISEQ2,LOAD1)
0077      CALL MOVCUR(13,6)
0078      CALL ERASEL(0)
0079      CALL MOVCUR(24,1)
0080      CLOSE(UNIT=6)
0081      CALL BELL
0082      CALL PRINT(0)
0083      TYPE 1012, ITUR
0084 1012  FORMAT(' *Set up Model 5000 - HGA/500 for analytical sequence
        1 ',I1,'. '// '*Press <RETURN> to continue analysis ...')
0085      ACCEPT 1013, REPL
0086 1013  FORMAT(A1)
0087      CALL CLRSTR(OUTSTR)
0088      CALL SCOPY(' ',OUTSTR)
0089      CALL MTPRNT(2,OUTSTR)
0090      LOAD2=0
0091 20      CALL ION(ISEQ1,ISEQ2,LOAD1)
0092      IF(LOAD2.EQ.1)GO TO 21
0093      IF(LOAD2.EQ.2)GO TO 22
0094      IF(LOAD2.EQ.3)GO TO 23
0095      IF(LOAD2.EQ.4)GO TO 24
0096      IF(LOAD2.EQ.5)GO TO 25
0097      IF(LOAD2.EQ.6)GO TO 26
0100      IF(LOAD2.EQ.5)GO TO 25
0102      IF(LOAD2.EQ.6)GO TO 26

```

```

0104 6    CALL HEAF(2,HOLD4,INSTR)
0105      IF(HOLD4.EQ.1) GO TO 20
0107      IF(INSTR(1).NE.'C'.AND.INSTR(3).NE.'U')GO TO 999
0109      CALL CLRSTR(OUTSTR)
0110      OUTSTR(1)=IELE+48
0111      CALL MTPRNT(2,OUTSTR)
0112      LOAD2=1
0113 21    CALL HEAF(2,HOLD4,INSTR)
0114      IF(HOLD4.EQ.1)GO TO 20
0116      IF(INSTR(1).NE.'C'.AND.INSTR(3).NE.'I')GO TO 999
0118      DO 8,INDEX=1,IELE
0119      CALL CLRSTR(OUTSTR)
0120      CALL SCOPY(NAME(INDEX),OUTSTR,2)
0121      CALL MTPRNT(2,OUTSTR)
0122      LOAD2=2
0123 22    CALL HEAF(2,HOLD4,INSTR)
0124      IF(HOLD4.EQ.1)GO TO 20
0126      IF(INSTR(2).NE.'O'.OR.INSTR(2).EQ.'B')GO TO 999
0128 8      CONTINUE
0129      LOAD2=3
0130 23    CALL HEAF(2,HOLD4,INSTR)
0131      IF(HOLD4.EQ.1)GO TO 20
0133      IF(INSTR(2).NE.'L')GO TO 999
0135      CALL CLRSTR(OUTSTR)
0136      CALL SCOPY(LSTBAM,OUTSTR,1)
0137      CALL MTPRNT(2,OUTSTR)
0138      LOAD2=4
0139 24    CALL HEAF(2,HOLD4,INSTR)
0140      IF(HOLD4.EQ.1)GO TO 20
0142      IF(INSTR(2).NE.'S')GO TO 999
0144      CALL CLRSTR(OUTSTR)
0145      CALL SCOPY(ISTDS,OUTSTR,1)
0146      CALL MTPRNT(2,OUTSTR)
0147      LOAD2=5
0148 25    CALL HEAF(2,HOLD4,INSTR)
0149      IF(HOLD4.EQ.1)GO TO 25
0151      IF(INSTR(2).NE.'S')GO TO 999
0153      LOAD2=6
0154 26    CALL HEAF(2,HOLD4,INSTR)
0155      IF(HOLD4.EQ.1)GO TO 20
0157      IF(INSTR(1).EQ.'C')GO TO 1
0159      WRITE(2,1014)(INSTR(INDEX),INDEX=1,44)
0160 1014  FORMAT(44A1)
0161      GO TO 26
0162 1      CONTINUE
0163      CALL MOVCP(9,26)
0164      CALL PRINT( FINISHED )
0165      CALL MOVCP(13,1)
0166      CALL ERASEL(0)
0167      CLOSE(UNIT=2)
0168      IEP=MTOTCH(2)
0169 27    CALL ION(ISEQ1,ISEQ2,LOAD)
0170      IF(LOAD1.NE.3)GO TO 27
0172      RETURN

```

FORTRAN IV 02.5-2 Thu 03-Dec-81 02:18:47

PAGE 004

```
0173 999 CALL MOVCUR(24.1)
0174 TYPE 10000, (INSTR(INDEX), INDEX=1, 30), (OUTSTR(INDEX), INDEX=1, 30)
0175 10000 FORMAT( ' ERROR!' /1X, 30A1/1X, 30A1)
0176 CALL EXIT
0177 END
```

```

0001      SUBROUTINE REPORT
0002      BYTE ENHANC,LF,FF,NORMAL, IDSEQ(13), IDSTR(112), CHR, SEQ(14)
1, NAME(18,2), NAME1, NAME2, TYPE, STAT, DATA(3)
0003      INTEGER*2 ELEMNT
0004      INTEGER*4 ICSPEC
0005      DATA SEQ/"104,"131,"61,"72,0,0,0,0,0,"56,"104,"101,"124,0/
0006      DATA IDSEQ/"104,"131,"61,"72,"103,"120,0,0,"56,"104,"101,
1"124,0/
0007      CALL MOVCUR(11,6)
0008      CALL ATTRIB(0)
0009      TYPE 1010
0010 1010  FORMAT(' +REPORT      ')
0011      CALL MOVCUR(24,1)
0012      OPEN(UNIT=1, NAME='SY:SEQ.DAT', TYPE='OLD')
0013      READ(1,1000) ISEQ1, ISEQ2
0014 1000  FORMAT(2I5)
0015      CLOSE(UNIT=1)
0016      IDSEQ(7)=ISEQ1
0017      IDSEQ(8)=ISEQ2
0018      OPEN(UNIT=1, NAME=IDSEQ, TYPE='OLD', CARRIAGECONTROL='LIST')
0019      OPEN(UNIT=6, NAME='LP:', CARRIAGECONTROL='FORTRAN')
0020      ENHANC=14
0021      NORMAL=15
0022      FF="14
0023      LF="12
0024      CALL MOVCUR(13,6)
0025      CALL ATTRIB(5)
0026      TYPE 1011
0027 1011  FORMAT(' +Printing Final Report')
0028      CALL ATTRIB(0)
0029      CALL MOVCUR(24,1)
0030      WRITE(6,1001) (LF, KOUNT=1,9)
0031 1001  FORMAT(1X,9A1)
0032      WRITE(5,1002) ENHANC, ENHANC
0033 1002  FORMAT(1X,A1,8X,'CONTAMINATION PROFILING',1X,A1,16X, 'REPORT')
0034      READ(1,1003) (IDSTR(KOUNT), KOUNT=1,9), (IDSTR(KOUNT), KOUNT=10,
117), (IDSTR(KOUNT), KOUNT=18,50), (IDSTR(KOUNT), KOUNT=51,93),
2(IDSTR(KOUNT), KOUNT=84,97), (IDSTR(KOUNT), KOUNT=98,111), AREACM,
3TVOL
0035 1003  FORMAT(1X,9A1/1X,8A1/1X,33A1/1X,33A1/1X,14A1/1X,14A1/F10.2
1/F10.2)
0036      CLOSE(UNIT=1)
0037      CONST=.001*TVOL/AREACM
0038      WRITE(6,1004) ENHANC, NORMAL, (IDSTR(KOUNT), KOUNT=51,93), ENHANC,
1NORMAL, (IDSTR(KOUNT), KOUNT=98,111), ENHANC, NORMAL, (IDSTR(KOUNT),
2, KOUNT=84,97), ENHANC, NORMAL, (IDSTR(KOUNT), KOUNT=1,9), ENHANC,
3NORMAL, (IDSTR(KOUNT), KOUNT=10,17), ENHANC, NORMAL, (IDSTR(KOUNT),
4KOUNT=18,50)
0039 1004  FORMAT(' // // // //7X,A1, P/N : ',34A1//7X,A1, 'S/N : ',15A1//
17X,A1, 'LOT : ',15A1// // //7X,A1, 'DATE: ',10A1,15X,A1, 'TIME: ',
29A1// // //7X,A1, 'ANALYST ----- ',A1//26X,33A1
0040      SEQ(5)="124
0041      SEQ(6)="103
0042      SEQ(7)="110

```



```

0043      SEQ(8)=1SEQ1
0044      SEQ(9)=1SEQ2
0045      OPEN(UNIT=2,NAME=SEQ,TYPE='OLD',CARRIAGECONTROL='LIST')
0046      SEQ(5)="106
0047      SEQ(6)="122
0048      SEQ(7)="116
0049      OPEN(UNIT=1,NAME=SEQ,TYPE='OLD',CARRIAGECONTROL='LIST')
0050      DO 3, IELE=1,18
0051      NAME(IELE,1)=0
0052      NAME(IELE,2)=0
0053  3      CONTINUE
0054      IELE=1
0055  5      READ(1,1008,END=4)NAME1,NAME2
0056 1008      FORMAT(42X,2A1)
0057      IF(NAME1.EQ.NAME(IELE,1).AND.NAME2.EQ.NAME(IELE,2))GO TO 5
0059      NAME(IELE,1)=NAME1
0060      NAME(IELE,2)=NAME2
0061      IELE=IELE+1
0062      GO TO 5
0063  4      CHR=" "
0064      WRITE(6,1005)ENHANC,(CHR,KOUNT=1,60)
0065 1005      FORMAT('1',A1,16X,'Cations'//',9X,'- By Inductively
1 Coupled Argon Plasma Emission Spectroscopy'//4X,'ELEMENT',
23X,'CONC./ WEIGHT',3X,'STD. DEV.',3X,'COEFF. OF VAR.',3X,
3'CONC./ BOARD AREA'//4X,7A1,3X,13A1,3X,9A1,3X,14A1,3X,17A1)
0066      TOTAL1=0
0067      TOTAL2=0
0068  1      READ(2,1006,END=2)(IDSTR(KOUNT),KOUNT=1,47)
0069 1006      FORMAT(1X,47A1)
0070      IF(IDSTR(2).NE.'A')GO TO 1
0072      DO 6,IELEKT=1,IELE
0073      IF(NAME(IELEKT,1).EQ.IDSTR(7).AND.NAME(IELEKT,2).EQ.IDSTR(8)
1GO TO 1
0075  6      CONTINUE
0076      CALL SUESTR(IDSTR,DATA,21,8)
0077      DATA(1)=DATA(8)
0078      DATA(3)="56
0079      DECODE(8,1022,DATA)RCONC
0080 1022      FORMAT(F8.0)
0081      BDCONC=RCONC*CONST
0082      TOTAL1=TOTAL1+BDCONC
0083      WRITE(6,1007)(IDSTR(KOUNT),KOUNT=7,8),(IDSTR(KOUNT),KOUNT=22,28
1),(IDSTR(KOUNT),KOUNT=32,37),(IDSTR(KOUNT),KOUNT=42,46),BDCONC
0084 1007      FORMAT('01',5X,2A1,7X,7A1,1X,'PPE',3X,' +/- ',6A1,7X,3A1,1X,'%',
16X,F8.3,1X,'ug/sq.cm')
0085      GO TO 1
0086  2      CLOSE(UNIT=2)
0087      REWIND 1
0088      WRITE(6,1012)ENHANC,(CHR,KOUNT=1,60)
0089 1012      FORMAT('1',A1,16X,'Cations'//13X,'- By Graphite Furnace
1 Atomic Absorption Spectroscopy'//4X,'ELEMENT',3X,'CONC./ WEI
2GHT',3X,'STD. DEV.',3X,'COEFF. OF VAR.',3X,'CONC./ BOARD AREA
3'4X,7A1,3X,13A1,3X,9A1,3X,14A1,3X,17A1)
0090  8      READ(1,1013,END=9)TYPE,STAT,CV,CONC,ELEMENT

```

```

0091 1015 FORMAT(1X,A1,15X,A1,6X,F5.2,6X,F6.0,1X,A2)
0092 IF(TYPE.EQ.1) GO TO 9
0094 IF(STAT.EQ.1) CV=100.0
0096 SD=.01*CV*CONC
0097 IF(STAT.EQ.1) SD=10000.0
0099 BDCONC=CONC*CONST
0100 TOTAL1=TOTAL1+BDCONC
0101 WRITE(5,1014)ELEMNT,CONC,SD,CV,BDCONC
0102 1014 FORMAT(10,5X,A2,7X,F7.0,1X,'PPB',3X,'+/-',F6.1,7X,F5.2,
11X,'-',6X,F3.3,1X,'ug/sq.cm')
0103 GO TO 9
0104 9 CLOSE(UNIT=1)
0105 WRITE(6,1013)ENHANC,(CHP,KOUNT=1,60)
0106 1013 FORMAT(1,1X,17X,'Anions',//23X,'- By Ion Chromatography
1//74X,'SPECIES',3X,'CONC./WEIGHT',3X,'STD. DEV.',3X,'COEFF.
2 OF VAR.',3X,'CONC./BOARD AREA',74X,7A1,3X,13A1,3X,5A1,3X,
314A1,3X,17A1)
0107 SEQ(5)='111'
0108 SEQ(6)='103'
0109 SEQ(7)='110'
0110 OPEN(UNIT=1,NAME=SEQ(5),TYPE='OLD',CARRIAGECONTROL='LIST')
0111 10 READ(1,1020,END=11)ICSPEC,TYPE,CONC,SD,CV
0112 1020 FORMAT(A4,11X,A1,3X,F10.1,4X,F10.3,4X,F10.3)
0113 IF(TYPE.NE.1) GO TO 10
0115 BDCONC=CONC*CONST
0116 TOTAL2=TOTAL2+BDCONC
0117 WRITE(6,1021)ICSPEC,CONC,SD,CV,BDCONC
0118 1021 FORMAT(10,5X,A4,2X,F10.0,1X,'PPB',3X,'+/-',F6.1,5X,F7.2,1X,
11X,'-',6X,F3.3,1X,'ug/sq.cm')
0119 GO TO 10
0120 11 WRITE(6,1050)ENHANC,ENHANC,TOTAL1,TOTAL2,TOTAL1+TOTAL2
0121 1050 FORMAT(//74X,A1,11X,'TOTAL CONTAMINANTS',//1,41,11X,-----
1-----//0',18X,'Total Cationic Species =',F9.3,1X,
2ug/sq.cm //0',18X,'Total Anionic Species =',F9.3,1X,'ug/
3sq.cm //44X,-----//0',35X,'TOTAL =',F9.3,1X,'ug-sq.cm')
0122 CALL MOVCUR(13,6)
0123 CALL ERASEL(0)
0124 CALL MOVCUR(24,1)
0125 CALL MOVCUR(11,6)
0126 TYPE=1100
0127 1100 FORMAT(' +DONE')
0128 CALL MOVCUR(24,1)
0129 CLOSE(UNIT=6)
0130 RETURN
0131 END

```

REPORTS AND ARTICLES

- Adams, Roger J. and Keane, David D. "Mechanical or Chemical Cleaning, Part 1." Industrial Finishing, Nov. (1971), 28-31.
- Adams, Roger J. and Keane, David D. "Mechanical or Chemical Cleaning, Part 2." Industrial Finishing, Dec. (1971), 24-28.
- Adams, Roger J. and Keane, David D. "Spectroscopy Reveals What Microscopy Leaves Untold." Circuits Manufacturing, Sept. (1971), 54-56.
- Bonner, John K. "Establishment of Production Cleanliness Criteria and Processes for Printed Wiring Boards and Assemblies." Phase I Report (MICOM), April 1979.
- Brous, J. and Cole, H. "Measurement of Residual Ionic Contamination on Printed Circuit Boards." Proceedings Of The Technical Program, NEPCON, Feb. (1974), 167-74.
- Chung, B. C. and Eagle, J. G. "Detection Of Organic Components In Non-Rosin Fluxes."
- Kenyon, Williams. "Fundamentals of Ionic Contamination Measurement Using Solvent Extract Methods." IPC Technical Paper, Sept. (1977).
- McDonald, John C. "Ion Chromatography." American Laboratory, Jan. (1979), 45-55.
- Tautscher, Carl J. "New Generation of Board and Assembly Cleanliness Tests." Insulation/Circuits, Dec. (1979), 15-19.
- Taylor, P. R., Altavilla, P. L., and Simmons, G. J. "Solvent Extract Resistivity Testing -- Is It Meaningful?" IPC Technical Paper, Sept. (1974).
- Volpe, Luke R. "A Method For Manufacturing High Density Conductive Interconnect Circuits." International Journal For Hybrid Microelectronics, Volume 4, No. 2, Oct. (1981), 246-50.
- Wargotz, William B. "Ion Chromatography Quantification For Contaminant Ions In Water Extracts Of Printed Wiring." IPC Technical Paper, Sept. (1978).
- Wargotz, William B. "Quantification Of Contaminant Effects Upon Electrical Behavior Of Printed Wiring." IPC Technical Paper, Sept. (1977).

BIBLIOGRAPHY

BOOKS

- Adamson, Arthur W. Physical Chemistry of Surfaces, 3rd ed. New York: John Wiley and Sons, 1976.
- Canada, John R. Intermediate Economic Analysis for Management and Engineering. Englewood Cliffs, N.J.: Prentice Hall, 1971.
- Coetzee, J.F., and Ritchie, Calvin D. Eds. Solute-Solvent Interactions. New York and London: Marcel Dekker, 1969.
- Constant, F. Woodbridge. Theoretical Physics. Vols. 1 & 2. Reading, MA: Addison-Wesley, 1958.
- Coombs, Clyde E., Jr. ed. Printed Circuits Handbook, 2nd. ed. New York: McGraw-Hill, 1979.
- Covington, A.K., and Dickinson, T. Eds. Physical Chemistry of Organic Solvent Systems. London and New York:
- Czanderna, A.W., ed. Methods of Surface Analysis. Amsterdam: Elsevier, 1975.
- Davis, Lawrence E. et al. Handbook of Auger Electron Spectroscopy, 2nd ed. Eden Prairie, Minn.: Physical Electronics Ind., 1976.
- McCrone, Walter C. and Delley, John G. The Particle Atlas, 2nd. ed. Vol. I, Principles and Techniques. Ann Arbor, Mich.: Ann Arbor Science, 1973.
- McIntyre, N.S., ed. Quantitative Surface Analysis of Materials. Philadelphia: ASTM, 1978.
- Quade, E.S., and Boucher, W.I. Eds. Systems Analysis and Policy Planning. New York: Elsevier, 1968.
- Tautscher, Carl J. The Contamination of Printed Wiring Boards and Assemblies. Bothell, Wash.: Omega, 1976.
- Wagner, C.D. et al. Handbook of X-Ray Photoelectron Spectroscopy. Eden Prairie, Minn: Physical Electronics Ind., 1979.

Martin Marietta Aerospace will implement the C/P data base into the PWB Manufacturing Facility at Ocala, Florida. All Martin Marietta programs involving PWBs/PWAs will be affected.

- 2 Characterize various fluxes, both rosin-based and water-soluble, using the chromatograph. Build up a master chromatogram for each kind of flux.
- 3 Interface the chromatograph into the C/P system.
- 4 Simplify the sample handling procedure. This can be done by constructing special hardware interfaces (PWAs) to simulate the ICP-5000 Autosampler keyboard. This will place the ICP-5000 Autosamplers directly under control of the minicomputer.
- 5 Optimize the metallic element detection. This will involve investigating the torch signal to noise ratio and optimizing the signal. Improved standards for the C/P system will also be sought.
- 6 The Extraction Tank/Pumping unit will also be completely integrated into the C/P system and brought under the control of the minicomputer. This will also require a special hardware interface (PWA) and relays.

Phase IV Establish C/P Data Base

- 1 Design the C/P data base. This will involve examining the data content and from that defining the corresponding data structure. Software decision points will be determined and a functional specification created for the data base. Field service data will also be incorporated into the data base.
- 2 The C/P data base will then be proved out. This will include an iteration procedure entailing software modification and revision of the data structure if necessary. The data structure will be set up so direct integration with a yet larger data base encompassing the entire PW manufacturing area can be easily accomplished.
- 3 Document the entire C/P data base. This documentation will become part of the final technical report (FTR) and include all system designs, flowcharts, software coding, etc. This will be especially relevant for integrating this data base into a larger one.

6.4 THE BENEFITS

The end product of this program will be an implemented data base designed to reduce to a minimum both PW failures in process and latent failures after assembly/conformal coating due to residual surface contamination. This data base will be designed and generated with the further goal in mind of integrating into a more comprehensive data base covering the entire PW manufacturing area.

- 3 Using samples drawn from each test lot of PWBs on which a known amount of contaminant has been induced, verify that the induced level is what it is supposed to be. The C/P system can be used for this purpose.
- 4 Perform the known generic tests on the test PWBs having a fixed amount of contaminant species. These generic tests include:
 - a Insulation resistance (IR)
 - b Temperature/humidity cycling (vesication)
 - c Extract resistivity/conductivity test.
- 5 All data generated from these tests will be used to build up the C/P data base.

Stage 2

- 1 Profile key PW manufacturing stages for contaminant species using the C/P system. The key manufacturing stages will be:
 - a Drill, deburr, chemical and mechanical clean
 - b Electroless plate
 - c Apply resist, develop image, electrolytic plate, strip resist
 - d Etch image
 - e Solder reflow
 - f Route to size
 - g Mount components
 - h Flux/solder.

Cleaned PWBs will be used as control.

- 2 Perform the known state-of-the-art for detecting contaminants on PWBs as a comparison with the C/P system.
- 3 All data generated from these tests will be used to build up the C/P data base.

Phase III Optimize C/P System

- 1 Procure a chromatograph system to be incorporated into the C/P system. The chromatograph will be carefully chosen for ease of integration into the C/P system.

Phase I Control Manufactured Test Printed Wiring Boards

- 1 Select the appropriate artwork to generate at least four (4) different component configurations and different line width/line spacings.
- 2 Manufacture test PWBs. Select eight (8) critical process points after which representative samples of each configuration will be checked for contaminant species using the C/P system. These eight points are:
 - a Drill, deburr, chemical and mechanical clean
 - b Electroless plate
 - c Apply resist, develop image, electrolyte plate, strip resist
 - d Etch image
 - e Solder reflow
 - f Route to size
 - g Mount components
 - h Flux/solder.
- 3 Test PWBs will also be used to establish meaningful limits for each contaminant species based on a comparison between the major generic tests such as insulation resistance and temperature/humidity cycling and C/P.

Phase II Test Manufactured Printed Wire Boards and Generate Data

This testing phase will involve two distinct stages (conceptually, not temporally). They are:

Stage 1

- 1 Establish the baseline cleanliness of the test PWBs. This will be done by controlled cleaning of all test PWBs followed by profiling for remaining contaminant species using the C/P system. Since the C/P system can detect species in the ppb range, it should be very effective for this purpose.
- 2 Induce a controlled amount of each contaminant species on the surface of representative PWB samples. This can be accomplished using a spray gun technique to apply a fine mist solution of the contaminant species and allowing the solution to dry.

- 11 Aluminum, Al
- 12 Iron, Fe
- 13 Magnesium, Mg
- 14 Nickel, Ni
- 15 Gold, Au.

The purpose of the IC is to detect and quantify (profile) the following species:

- 1 Fluoride, F⁻
- 2 Chloride, Cl⁻
- 3 Sulfate, SO₄²⁻
- 4 Phosphate, PO₄³⁻
- 5 Bromide, Br⁻
- 6 Nitrate, NO₃⁻
- 7 Nitrite, NO₂⁻

6.2 THE SOLUTION

Design and construct a C/P data base for future comparisons and establishing true statistical confidence limits for each contaminant species. Meaningful cutoff limits for each contaminant species will be established and verified. This data base shall be so constructed so that it can be interfaced with one yet larger more comprehensive encompassing the entire PW manufacturing area. It is expected that the C/P data base will lead to the elimination of generic testing. Future PW field reliability will be statistically predictable within prescribed confidence limits.

6.3 THE APPROACH

The approach will consist of several distinctive phases, some of which will occur concomitantly.

- f. HGA-500 Graphite Furnace
- g. Graphite Furnace Control Unit
- h. AS-40 Autosampler (for furnace) + Control unit
- i. AS-50 Autosampler (for torch) + Control Unit
- j. PR-80 Printer (line printer)
- 2 One (1) ion chromatograph (IC) (Dionex AutoIon™ System 12 Analyzer). This can be considered a quasi-subsystem since it can be decomposed into subunits. It is not, however, under the immediate control of its own microprocessor as the ICP-5000 is.
 - a. IC Autosampler
 - b. Computing Integrator (Spectra Physics Model SP 4100).
- 3 Minicomputer (Digital Electronic Corp. MINC-11, a PDP-11/03) with hardware modules for running laboratory equipment.
 - a. VDU
 - b. Keyboard
 - c. Disks (floppy).

The purpose of the ICP-5000 subsystem is to detect and quantify (profile) the following metallic and quasi-metallic elements:

- 1 Lead, Pb
- 2 Tin, Sn
- 3 Copper, Cu
- 4 Calcium, Ca
- 5 Sodium, Na
- 6 Potassium, K
- 7 Chromium, Cr
- 8 Zinc, Zn
- 9 Palladium, Pd
- 10 Silicon, Si

6.0 FINAL RECOMMENDATIONS: ESTABLISHMENT OF A CONTAMINANT PROFILING DATA BASE FOR PRINTED WIRING BOARDS AND ASSEMBLIES

To completely eliminate generic testing and to establish contaminant profiling on a sound footing, a contaminant profiling data base should be established.

6.1 THE PROBLEM

Contaminant profiling (C/P) truly represents a quantum leap in the state-of-the-art in detecting and quantifying printed wiring (PW) surface contamination. It permits identification of individual contaminant species and the quantification of the level of each species. Current methodologies are generic only and do not permit this. The quantity of each contaminant species can be expressed either in parts-per-billion (ppb) or in micrograms per square centimeter of PW surface ($\mu\text{g}/\text{cm}^2$). However, what is required is to link the presence and amount of each species on the PW surface to PW degradation. A rigorous testing and evaluation schedule in which the contribution to degradation and the concomitant threshold limits of each contaminant species must be established for different PW configurations, packaging densities, and component types. The data generated from this testing and evaluation phase can then be used to build a data base for C/P.

To gain some perspective into the present system, it is appropriate to discuss its main features. Several of the contaminant profiling (C/P) system components can be regarded as systems in their own rights since they can be further decomposed or broken down into a number of distinct subcomponents. Since the C/P system minicomputer is the best computer for the entire C/P system, the other components are, properly speaking, subsystems. These are:

- 1 One (1) inductively-coupled plasma (ICP) spectrophotometer (Perkin-Elmer ICP-5000). The ICP-5000 is a true C/P subsystem since it can be decomposed into distinct subunits.
 - a. Model 5000 Spectrophotometer
 - b. ICP Source (torch)
 - c. Optical Interface between a. and b.
 - d. RF Power Supply
 - e. Data Station (6800 microcomputer)
 1. Video display unit (VDU)
 2. Keyboard
 3. Disks (floppy)

To compute the cost savings, we assume that 35 percent of the projected total yearly losses are due to residual surface contamination and that the C/P system as it now stands will aid in cutting this figure by 60 percent. This gives a Δ of \$1,011,702.

The contaminant profiling system cost \$460,000. This amounts to \$46,000 over a ten year period. Therefore, the projected total yearly loss due to residual contamination must be modified by this figure. The corrected figure becomes:

$$\Delta = \$965,702.$$

This figure is used to calculate the savings expected per PWA using the C/P system.

Projected Total Yearly Loss - Residual Contamination (Average):

DS (double-sided)	\$ 52,044
FC (flexible circuit)	538,807
ML (multilayer)	612,838
RF (rigid-flex)	482,481
TOTAL	<u>\$1,686,170</u>

Projected Total Yearly Loss - Residual Contamination (Average)
Using the C/P System:

DS (double-sided)	\$ 20,818
FC (flexible circuit)	215,523
ML (multilayer)	245,135
RF (rigid-flex)	\$ 192,992
TOTAL	<u>\$ 674,468</u> = \$1,011,702

Projected Total Yearly Cost (Average)
not using C/P System: \$16,046,980

Projected Total Yearly Cost (Average)
using C/P System: \$15,081,278

DIFFERENCE: \$ 965,702

Average cost of a PWA using the C/P System = \$76.444 (\$15,081,278 / 197,285)

Δ using C/P System = \$4.895/PWA (\$81.339 - 76.444)

5.0 COST/BENEFIT ANALYSIS

A cost/benefit analysis shows it is economically advantageous to use the Contaminant Profiling System.

One of the chief purposes for developing the contaminant profiling (C/P) system was to lower the overall cost of producing printed wiring assemblies (PWAs). It is appropriate to compute the cost savings (Δ) for each PWA produced.

To compute the cost savings for each PWA produced, yield factors and normal production allowance factor obtained from Martin Marietta Aerospace's Ocala Facility were used. Since the C/P system is estimated to have a working life of ten years, production costs and the number of PWAs produced were averaged over a ten year period. The baseline figures to obtain the averages were this year's production figures coupled with a projected linear growth pattern of 20 percent per year.

Projected Total Yearly Loss (Average):

DS (double-sided)	\$ 148,698
FC (flexible circuit)	1,539,448
ML (multilayer)	1,750,966
RF (rigid-flex)	<u>1,378,518</u>
TOTAL	<u>\$4,817,630</u>

Projected Total Yearly Cost (Average):

DS (double-sided)	\$ 495,296
FC (flexible circuit)	5,127,734
ML (multilayer)	5,832,266
RF (rigid-flex)	<u>\$4,591,684</u>
TOTAL	<u>\$16,046,980</u>

Projected Total Number of PWAs Produced (Average):

DS (double-sided)	86,806
FC (flexible circuit)	23,674
ML (multilayer)	78,914
RF (rigid-flex)	<u>7,891</u>
TOTAL	<u>197,285</u>

Average cost of a PWA = \$ 81.339 (\$16,046,980 / 197,285)

```
0001      SUBROUTINE HEARIC(IUNIT, IFLAG, HEARS)
0002      BYTE HEARS(83)
0003      CALL CLRSTR(HEARS)
0004      INDEX=1
0005 1      IFLAG=MTIN(IUNIT, HEARS(INDEX))
0006      IF (IFLAG.GT.0.AND.INDEX.EQ.1) RETURN
0008      IF (IFLAG.GT.0) GO TO 1
0010      IF (.NOT. (HEARS(INDEX).EQ.10.AND.INDEX.EQ.1)) GO TO 50
0012      IFLAG=1
0013      HEARS(1)=0
0014      RETURN
0015 50      IF (HEARS(INDEX).NE.13) GO TO 2
0017      HEARS(INDEX)=0
0018      RETURN
0019 2      IF (INDEX.GT.82) RETURN
0021      INDEX=INDEX+1
0022      GO TO 1
0023      END
```

```
0054      IF (HOLD1.EQ.1) RETURN
0055      IF (INSTR(1).NE.'P'.OR.INSTR(2).NE.'E') RETURN
0056      CALL MOVCUR(9,46)
0057      CALL ATTRIB(0)
0058      TYPE 1008
0059      1008 FORMAT('ACTIVE ')
0060      CALL MOVCUR(24,1)
0061      SEQ(5)='111'
0062      SEQ(6)='103'
0063      SEQ(7)='110'
0064      SEQ(8)=ISEQN1
0065      SEQ(9)=ISEQN2
0066      OPEN(UNIT=2,NAME=SEQ,TYPE='NEW',CAPRIAGECONTPOL= LIST)
0067      CALL MOVCUR(13,6)
0068      CALL ERASEL(0)
0069      CALL MOVCUR(24,1)
0070      TYPE 1009
0071      1009 FORMAT('The IC is ready for operation. Set IC to AUTO and
0072      1 press START.')
0073      IPOS=2
0074      RETURN
0075      200 CALL HEARIC(1,HOLD1,INSTR)
0076      IF (HOLD1.NE.0) RETURN
0077      IF (INSTR(1).NE.'D'.OR.INSTR(2).NE.'A') GO TO 210
0078      REPLY='G'
0079      CALL MTPRNT(1,REPLY)
0080      GO TO 200
0081      210 IF (INSTR(1).EQ.'E'.AND.INSTR(2).EQ.'N') GO TO 299
0082      WRITE (8,1005) INSTR
0083      1005 FORMAT('SA1')
0084      RETURN
0085      299 CLOSE(UNIT=8)
0086      IER=MTDTCH(1)
0087      IPOS=3
0088      CALL MOVCUR(9,46)
0089      TYPE 1010
0090      1010 FORMAT('FINISHED ')
0091      CALL MOVCUR(24,1)
0092      RETURN
0093      300 RETURN
0094      END
```

```

0001      SUBROUTINE ION(ISEQN1, ISEQN2, IPOS)
0002      BYTE INSTR(83), OUTSTR(83), SEQ(14), REPLY, BEGIN(13), END(5)
0003      DATA SEQ/"104,"131,"61,"72,0,0,0,0,0,"56,"104,"101,"124,0/
0004      DATA BEGIN/"37,"40,"102,"105,"107,"111,"116,"42,"111,"103,
1"42,"40,0/
0005      DATA END/"37,"105,"116,"104,0/
0006      GO TO (100,200,300,10,50), IPOS
0007 100    CALL MOVCUR(24,1)
0008      TYPE 1000
0009 1000   FORMAT('Does the SP-4100 require program loading Y/N ')
0010      ACCEPT 1001, REPLY
0011 1001   FORMAT(A1)
0012      IF (REPLY.NE.'Y') GO TO 199
0014      TYPE 1002
0015 1002   FORMAT('Ready to load program into the IC-SP4100. Restart
1 SP-4100.'/' On the SP-4100 Keyboard, type BAUD1200:IV=2:
2 "GO:LOAD"IC"/)
0016      IPOS=4
0017 10    CALL HEAPIC(1,HOLD1, INSTR)
0018      IF (HOLD1.EQ.1) RETURN
0020      IF (INSTR(1).NE.'C'.OR. INSTR(2).NE.'O') RETURN
0022      CALL MOVCUR(9,46)
0023      CALL ATTRIB(0)
0024      TYPE 1006
0025 1006   FORMAT('LOADING ')
0026      CALL MOVCUR(13,6)
0027      CALL ATTRIB(5)
0028      TYPE 1007
0029 1007   FORMAT('Loading BASIC into SP-4100')
0030      CALL ATTRIB(0)
0031      CALL MOVCUR(24,1)
0032      OPEN(UNIT=8, NAME='SY:ICPROG.LST', TYPE='OLD', CARTRIDGECONTROL
1= LIST)
0033      CALL MTPRNT(1, BEGIN)
0034 2      CALL CLRSTR(INSTR)
0035      READ(8,1004, END=4) NCHRS, (INSTR(IOUNT), KOUNT=1, NCHRS)
0036 1004   FORMAT(G, BBA1)
0037      CALL MTPRNT(1, INSTR)
0038      GOTO 2
0039 4      CALL MTPRNT(1, END)
0040      CLOSE(UNIT=8)
0041 205    CALL MOVCUR(13,6)
0042      CALL ERASEL(0)
0043      CALL ATTRIB(5)
0044      TYPE 1009
0045 1009   FORMAT('Initializing SP-4100')
0046      CALL ATTRIB(0)
0047      CALL MOVCUR(24,0)
0048      CALL MTPRNT(1, PUN1)
0049      GO TO 500
0050 199    TYPE 1020
0051 1020   FORMAT(' On the SP-4100 Keyboard, type FULL . /)
0052 500    IPCB=5
0053 50     CALL HEAPIC(1,HOLD1, INSTR)


```


APPENDIX 1

A FEW WORDS ABOUT SOLVENTS

The electronics industry still relies heavily on solvents. They are used to degrease printed wiring (PW) panels before processing, and they are frequently used to decontaminate PW assemblies immediately after the flux/soldering operation.

The chief purpose of a solvent after soldering is to remove all residual fluxes, any wax used during the process, and standoff materials (solvent soluble). The materials which the solvent is required to remove can be of quite different chemical nature. Fluxes, especially activated ones, contain polar and ionizable organic molecules as well as nonpolar organics. Further, activated fluxes will contain highly ionizable material in the form of activators such as diethylamine hydrochloride. The action of fluxes can also result in the formation of heavy metal chlorides. For example, the following reaction probably takes place:



That is, the reaction of flux with activators results in oxychlorides and chlorides. These latter are ionizable.

It is especially important to remove ionic and ionizable residues since their presence on PW will degrade the electronic properties and often lead to corrosion. It has been proposed that the threshold limit for ionic material is 1 microgram of sodium chloride (NaCl) or equivalent per square centimeter of board area, i.e., 1.0 μg NaCl or equivalent/cm².¹

To remove ionic and ionizable residues, especially those contaminating electronic assemblies after the flux/soldering operation, the solvent should preferably be a system composed of several different molecular constituents.² For practical purposes an azeotrope is best.

An azeotrope is a mixture of mutually miscible molecular species. Although a mixture, an azeotrope has several properties resembling that of a pure compound. For instance, at constant pressure it will have a constant composition, one of the distinguishing hallmarks of a true

compound. Also, at constant pressure it has a definite fixed boiling point, like a pure compound. If the pressure is not changed, it is physically impossible to separate the components of an azeotrope, say by distillation.


For example, at atmospheric pressure ($P = 760$ mmHg) the binary azeotrope of ethanol (C_2H_5OH) and water has a constant composition by weight of 95.57 percent ethanol and 4.43 percent water and a fixed, definite boiling point of $78.2^\circ C$ ($172.8^\circ F$). As long as the pressure is not varied, water cannot be separated from the alcohol in this azeotrope by such physical means as distillation. If one attempts to distill a given amount of this azeotrope, one will find that it boils at $78.2^\circ C$ and that the distillate possesses the same identical composition to the liquid being distilled and will also boil at exactly the same temperature, like a pure compound. Only if the total pressure to which the azeotrope is subjected is changed can the boiling point and the composition be changed, thus proving that an azeotrope is really not one pure compound but a unique mixture of several different compounds. Normally, during PW manufacturing no attempt is made to manipulate the total pressure of the azeotrope system which is that of ambient. Therefore, under such conditions an azeotrope system should possess a fixed composition and a fixed boiling point. The distillate of such a system should be easily recondensable to the original azeotrope.

But the fact that a solvent system is an azeotrope does not necessarily ensure that it is a good solvent system for PW manufacturing. Recall that the solvent system must be capable of removing different kinds of chemical species, the most important being ionic and ionizable species. The fact that a system is an azeotrope merely ensures constant physical properties. One of the molecular constituents of the azeotrope should be a polar material also capable of exerting hydrogen bonding and possessing a dielectric constant >20 .

It is appropriate to ask at this point: What is a polar solvent? The answer to this question rests upon the definition of "polar." One definition of "polar" is this. Polar material is one whose molecules possess a finite, nonzero, permanent dipole moment. For a molecule to have a permanent dipole moment, it must meet two criteria, viz.:

- 1 It must have polar bonds
- 2 The polar bonds must be distributed asymmetrically throughout the molecule.

Let us consider several examples. A bond will be polar if there exists an unequal distribution of electron density between the two atoms making up the bond, and this will occur if the two atoms differ greatly in their ability to attract electrons. For example, carbon dioxide, CO_2 , is composed of two polar bonds which we can represent thus:



The direction of the arrows gives the direction the electrons are pulled in. Thus between each oxygen atom and the carbon there is a partial separation of charge. But carbon dioxide is a perfectly symmetrical molecule. All three atoms making it up lie along a straight line, and since polar bonds act like vector quantities, the polarity of one bond perfectly cancels that of the other. The result is that carbon dioxide has a zero dipole moment even though it has two polar bonds. The case of carbon tetrafluoride, CF_4 , is another interesting example. This molecule has four polar bonds, for the electronegativity (ability to attract electrons) of fluorine is much greater than that of carbon. The molecule, however, possesses perfect tetrahedral symmetry, and it is possible to show that the vector sum of all four polar bonds is again zero. Thus the molecule possesses a zero dipole moment. Water, H_2O , also possesses two polar bonds. But water is an asymmetrical molecule. The two polar bonds do not completely cancel each other. Water has a permanent dipole moment of 1.84×10^{-18} e.s.u. x cm or 1.84 Debyes.

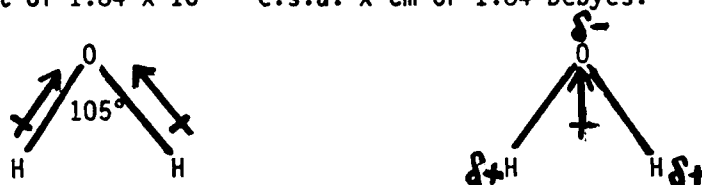


Figure 1. Water has a permanent dipole moment, i.e., unequal electron distribution.

The dipole moment of a molecule is usually measured in the gas phase. In Table 1 are given the dipole moments of some common solvents used in the electronics industry.

Table 1

Substance	Dipole Moment, μ , in Debyes
Water H_2O	1.84
1,1,1-Trichloroethane CCl_3CH_3	1.77
Methylene Chloride CH_2Cl_2	1.54
Methanol CH_3OH	1.70
Ethanol $\text{C}_2\text{H}_5\text{OH}$	1.69
1-Propanol $\text{CH}_3\text{CH}_2\text{CH}_2\text{OH}$	1.68
2-Propanol $\text{CH}_3\text{CHOHCH}_3$	1.66
1,1,2-Trichloro-2,2,1-trifluoroethane $\text{CCl}_2\text{FCClF}_2$	0.98
Perchloroethylene CCl_2CCl_2	0
Carbon tetrafluoride CF_4	0

Besides the dipole moment of a molecule, the dielectric constant is also of great importance. The dielectric constant is a distinguishing characteristic of a bulk amount of material. It can be defined in several ways. Theoretically, the dielectric constant of a material is the ratio of the electric permittivity, ϵ , of the material to the electric permittivity in vacuo ϵ_0 , i.e., D (dielectric constant) $= \epsilon/\epsilon_0$.³ Therefore, D is unitless.

For practical purposes, the dielectric constant is defined as the ratio of the capacitance of a parallel-plate capacitor filled with the dielectric material in question to the capacitance of the capacitor where air is the dielectric.⁴ This is possible since $D = 1.0000$ for a vacuum while $D = 1.0006$ for air. The dielectric constant is a measure of the ability of a dielectric material to store energy when exposed to an electrostatic field. It is easy to show that the energy density of an electric field for a parallel-plate capacitor with a dielectric filling the space must be D times the energy density of the field in vacuo.⁵ See Table 2 for the dielectric constants of some common solvents used in the electronics industry.

Table 2

Substance	Dipole Constant, D , at 25°C
Water H_2O	78.5
Methanol CH_3OH	32.6
Ethanol C_2H_5OH	24.3
1-Propanol $CH_3CH_2CH_2OH$	20.1
2-Propanol $CH_3CHOHCH_3$	18.3
Methylene Chloride CH_2Cl_2	9.1
1,1,1-Trichloroethane CCl_3CH_3	7.5

Table 2 (Continued)

Substance	Dipole Constant, D, at 25°C
Trichloroethylene CCl_2CHCl	3.4 (16°C)
1,1,2-Trichloro-2,2,1-trifluoroethane $\text{CCl}_2\text{FCClF}_2$	2.4
Perchloroethylene CCl_2CCl_2	2.2
Carbon tetrafluoride CF_4	1.0 (vapor at 0.5 atm)

Since the dielectric constant is a measure of a material's ability to store electrostatic energy, this also implies that the electrostatic force of attraction between two charged particles will be less in a dielectric material than in vacuo. Further, the greater the dielectric constant of the material, the less the force, all else being equal. For example, consider the Coulombic attraction between a sodium ion and a chloride ion at a distance apart of 20 Å (2×10^{-7} cm) in:


- 1 1,1,1 trichloroethane
- 2 ethanol
- 3 water.

Coulomb's law states that the force of attraction (or repulsion) between two charges is: $F = (1/4\pi\epsilon) qq'/r^2$ where q and q' denote the magnitude of the charges and r is the distance between them. Since $\epsilon = D\epsilon_0$ we have $F = (1/4\pi D\epsilon_0) qq'/r^2$. In vacuo the Coulombic force between a sodium ion and a chloride ion at a distance of 20 Å is: $F = (1/4\pi\epsilon_0) qq'/r^2 = 5.76 \times 10^{-6}$ dyne. In 1,1,1-trichloroethane this force is $5.76 \times 10^{-6}/7.5 = 7.68 \times 10^{-7}$ dyne. In ethanol it is 2.37×10^{-7} dyne, and in water 0.73×10^{-7} dyne. That is, the force between the two ions in ethanol is about 1/3 of what it is in 1,1,1-trichloroethane and in water it is about 1/10 of what it is in 1,1,1-trichloroethane. A high dielectric constant, then, will ensure that the force of attraction between two ions will be less than what it would be if the dielectric constant were low ($D = 1$ for vacuum). Further, the fact that a molecule possesses a high dipole moment does not necessarily mean that a bulk amount of its liquid will have a high dielectric constant. The relationship between the two is rather complicated.⁶ 1,1,1-Trichloroethane is a case in point. Its dipole moment, 1.77 Debyes, is comparable to that of water, 1.84, but its dielectric constant, 7.5, is quite small compared to that of water, 78.5.


Some solvent chemists consider solvents with a high dielectric constant as "polar" solvents. Solvents with a low dielectric constant are then classified as "nonpolar."⁷ The cutoff point for the dielectric constant is generally taken to be 30.⁸ Thus, by this definition solvents with a dielectric constant >30 are classified as polar whereas those whose dielectric constant <30 are classified as nonpolar. Going back to Table 2 the only liquids in that table considered polar by this definition are water and methanol. All others would be classified as nonpolar.

This distinction is not as useful as one would think. Many solvent chemists today also distinguish between protic and aprotic solvents.⁹ Protic solvents are those that contain hydrogen which can either enter into hydrogen bonding or be donated (Bronsted acid). Many members of this class are also amphiprotic, i.e., they are capable of autoprotolysis. For example, the autoprotolysis of methanol proceeds as follows: $\text{CH}_3\text{OH} + \text{CH}_3\text{OH} \rightleftharpoons \text{CH}_3\text{OH}_2^+ + \text{CH}_3\text{O}^-$. Aprotic solvents, although they may contain hydrogen atoms, have no hydrogen atoms which may enter into hydrogen bonding or be donated. Aprotic solvents having high dielectric constants, such as DMF (N,N-dimethylformamide, $D = 36.7$) are sometimes referred to as dipolar aprotic solvents.

It is instructive to contrast a dipolar aprotic solvent such as DMF ($D = 36.7$) with a polar protic solvent such as methanol ($D = 32.6$). Both have about the same dielectric constant. Both reduce the Coulombic attraction between ions, it also solvates the ions. That is, the hydrogen atom on the alcoholic portion of the molecule (-OH) enters into hydrogen bonding with the ions. The ions are then said to be solvated. This hydrogen-bonding interaction between ions and solvent molecules helps to stabilize the ions, tending to prevent ion association and ion pairing within the solvent.¹⁰ For this reason protic solvents with fairly high dielectric constants ($D > 20$) are best in dissolving ionic and ionizable residues left on the PW surface after flux/soldering.

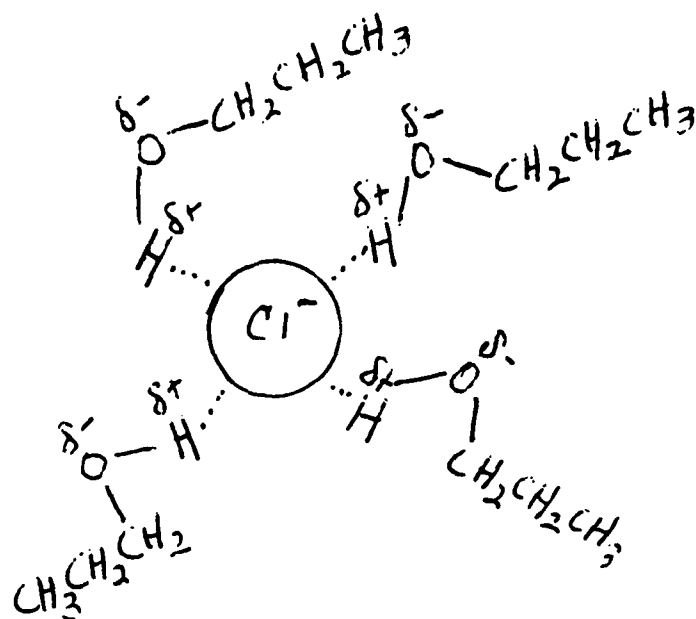

(a)

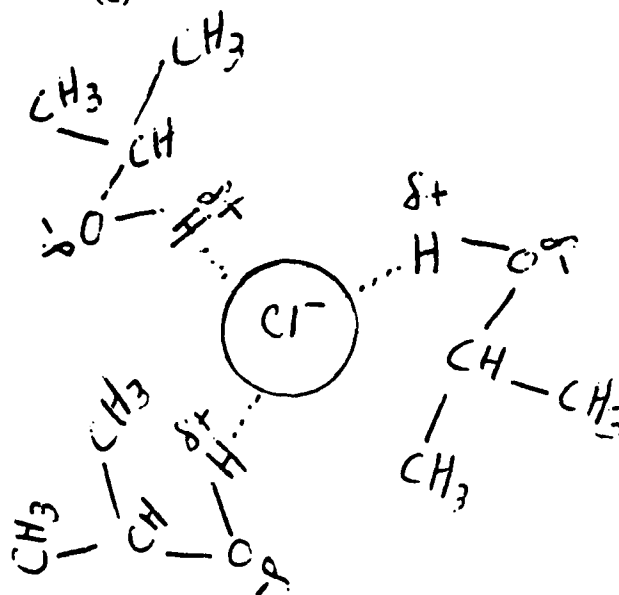

(b)

Figure 2. (a) Solvation of Cl^- ions by 1-propanol molecules, (b) solvation of Cl^- by 2-propanol molecules. The bond denotes a hydrogen bond.

It is important, then, that the solvent system used to remove ionic material on PW and other electronic devices contain a protic component capable of hydrogen bonding. If the first definition of polar is used, i.e., a polar molecule is one possessing a finite, nonzero, permanent dipole moment, then the fact that it is polar alone is not a sufficient condition for removing ionic contaminants, but merely a necessary one. If the second definition of polar is used, i.e., a polar solvent is one whose dielectric constant >30 , then one of the molecular constituents of the azeotrope should be capable of exerting hydrogen bonding (i.e., be protic) and possess a dielectric constant >20 . This latter material will, in general, be very effective in dissolving ionic and ionizable residues left on the PW surface after flux/soldering.

Generally, a lower molecular weight alcohol, such as methanol, ethanol, or one of the propanols, has been chosen as the hydrogen bonding component having a moderately high dielectric constant. Alcohols act primarily through the mechanism of hydrogen bonding in solvating ionic species. Even slight amounts of alcohols will radically alter the extent of association of halide salts in low dielectric solvents.¹¹ The alcohol molecule interacts with ionic species forming an ion-dipole attraction in which the alcoholic hydrogen plays a distinct role. For halide anions, solvation increases in the order $\text{Cl}^- \rightarrow \text{Br}^- \rightarrow \text{I}^-$. Solvation of the cationic species is relatively independent of size. Solvation refers to the surrounding of a solute species such as Cl^- by a definite number of solvent (protic) molecules. See Figure 2.

Regarding alcohols, primary alcohols such as methanol, ethanol, and 1-propanol are expected to hydrogen bond more effectively with ionic species than secondary alcohols such as 2-propanol. The diminished hydrogen-bonding ability of 2-propanol will result in less stabilization for the solvent-separated ion pairs in this solvent than in the primary alcohols.¹² That the hydrogen bonding capacity is greater in 1-propanol than in 2-propanol is also evident from a comparison of their boiling points.

Bp

1-propanol (n-propyl alcohol)	97.2°C (207.0°F)
2-propanol (isopropyl alcohol)	82.3°C (180.1°F)

In this discussion of solvents we saw that solvent systems which were azeotropes offered distinct advantages. Further, for the purposes of removing ionic contaminants one of the components should be a polar species capable of hydrogen bonding.

NOTES

1. See W. Bernard Wargotz, "Quantification of Contaminant Effects Upon Electrical Behavior of Printed Wiring, "IPC Technical Paper, September (1977), 13.
2. This paper will deal only with solvent systems. Aqueous cleaning systems will not be addressed.
3. See F. Woodbridge Constant, Theoretical Physics, Volume 2 (Reading, MA: Addison-Wesley, 1958), p.251.
4. For a parallel-plate capacitor filled with a dielectric whose dielectric constant = D, the capacitance is $C = \epsilon_0 DA/L$ where A is the plate area and L is the distance between the plates. If air (or better, vacuum) is between the plates, then $C(\text{air}) = \epsilon_0 A/L$. Obviously, $C/C(\text{air}) = D$.
5. Constant, Theoretical Physics, Volume 2, pp. 169 and 256.
6. The relationship is given by

$$[(D-1)/(D+2)](M/d) = \text{constant} + 6093.6 \mu^2 / T$$
 where M is the molecular weight of the substance in question, d its density, and T the temperature in degrees Kelvin. See Samuel H. Maron and Carl F. Prutton, Principles of Physical Chemistry, 4th ed. (New York: Macmillan, 1965), p. 697.
7. See E.J. King, "Acid-base Behavior," Chapter 3 in A.K. Covington and T. Dickinson, eds. Physical Chemistry of Organic Solvent Systems (London and New York: Plenum Press, 1973), p. 333.
8. Ibid., p. 333.
9. See A.K. Covington and T. Dickinson, "Introduction and Solvent Properties," Chapter 1 in ibid., p. 4.
10. See Roger G. Bates, "Medium Effects an pH in Nonaqueous Solvents," Chapter 2 in J.F. Coetzee and Calvin D. Ritchie, eds., Solute-Solvent Interactions (New York and London: Marcel Dekker, 1969), pp. 52ff.
11. See R.P. Taylor and I.P. Kuntz, Jr., J. Am. Chem. Soc., 92 (1970), 4816.
12. See Sister Mary A. Matesich, John A. Nadas, and P. Fennell Evans, J. Phys. Chem., 74 (1970), 4572.

END

FILMED

4-85

DTIC